

Nissan 2.2 Litre 4-Cyl (D22) Diesel EGR Cleaning Instructions

Always wear gloves and safety glasses when performing this service

EGR System Consists of:

- Hot side EGR valve (before EGR cooler) controls Exhaust gases for proper emissions control of No_x gases
- EGR cooler (controls temperature of Exhaust gases to the air Intake to the engine)
- EGR cooler bypass valve (controls Exhaust flow temperature to the air Intake from the Exhaust through the EGR cooler)
- EGR temperature sensor (measures EGR cooler Exhaust temperature and efficiency)


These items are critical for proper emissions management control and must be cleaned on a regular basis for optimum efficiency.

First steps before any service can be performed.

- 1. Add TerraDiesel™ Fuel Injector Cleaner (201255) to the vehicle's fuel tank.
- 2. Remove the plastic engine cover.
- 3. If the engine is hot, the EGR cooler must be cooled.

Page 1 of 2 ZIT16-01722

Adapters Required:

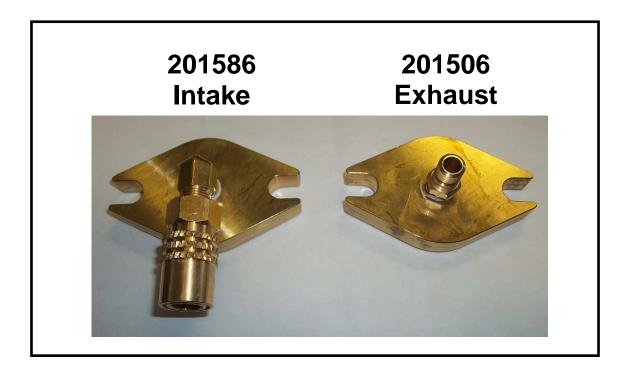

201399 EGR Manifold



Tool Required:

201170 - TerraDiesel™ EGR Cleaning Tool