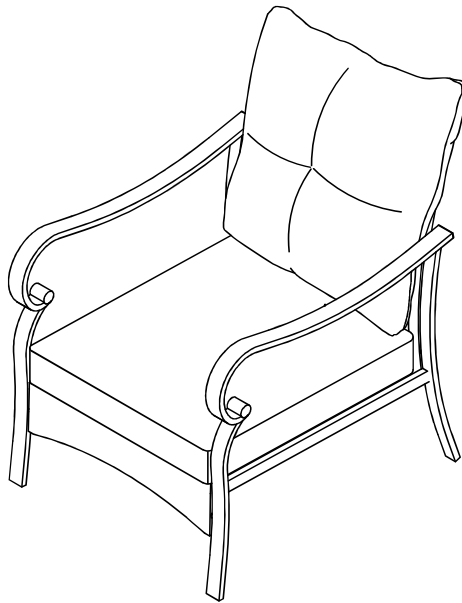 








CROSLEY
FURNITURE

Outdoor Metal Armchair





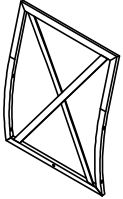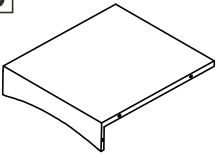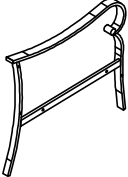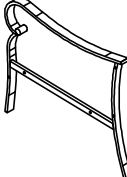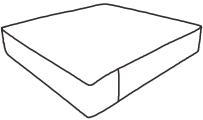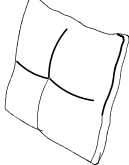      CO6251



PART LIST


A 	B 	C 	D 	E 
Back Panel 2 PCS	Seat Panel 2 PCS	Right Arm Panel 2 PCS	Left Arm Panel 2 PCS	Seat Cushion 2 PCS
F 				
Back Cushion 2 PCS				

  HARDWARE LIST

#1 	#2 	#3 	#4 
M6*30mm Bolt 14 PCS (Extra 1)	M6*45mm Long Bolt 8 PCS (Extra 1)	M6mm Flat Washer 22 PCS (Extra 1)	M6mm Allen Wrench 1 PC


Step 1. Lay left arm panel (part D) down on a soft flat surface, such as carpet, as shown below. Attach seat panel (part B) to left arm panel (part D) using bolts (part #1), flat washers (part #3) and allen wrench (part #4).

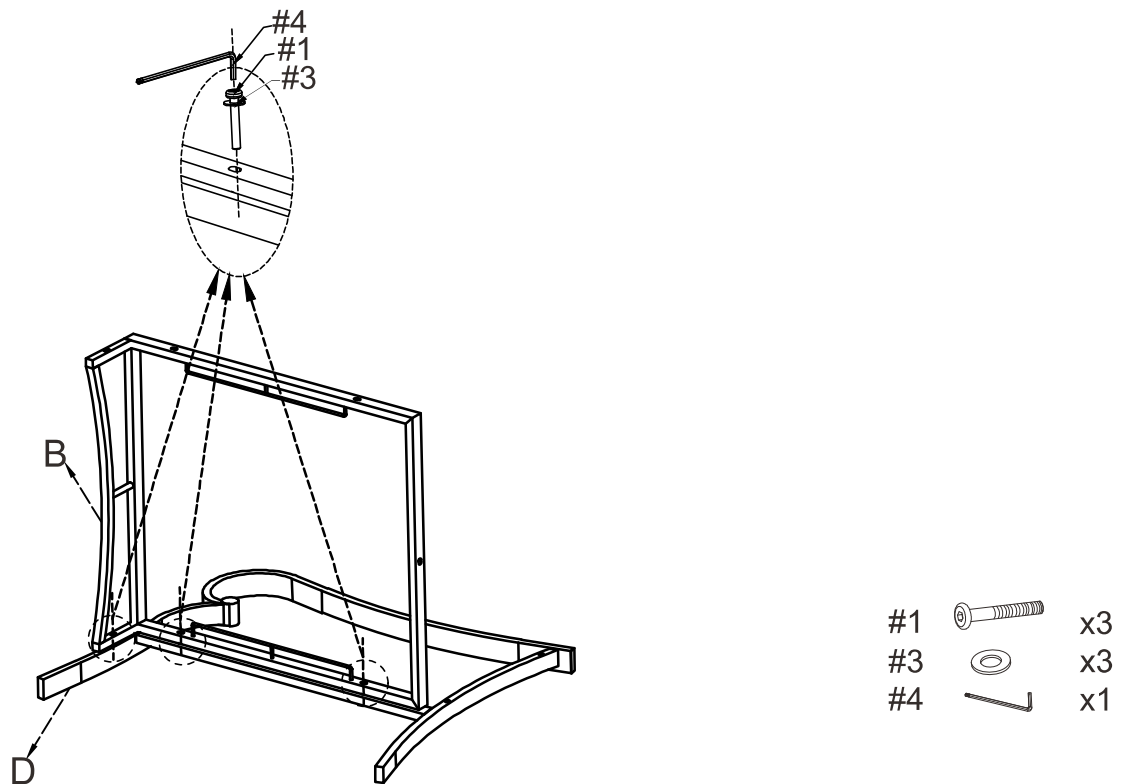 NOTE: Please do not fully tighten bolts until unit is fully assembled.




Step 2. Attach back panel (part A) to left arm panel (part D) and seat panel (part B) using bolt (part #1), long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

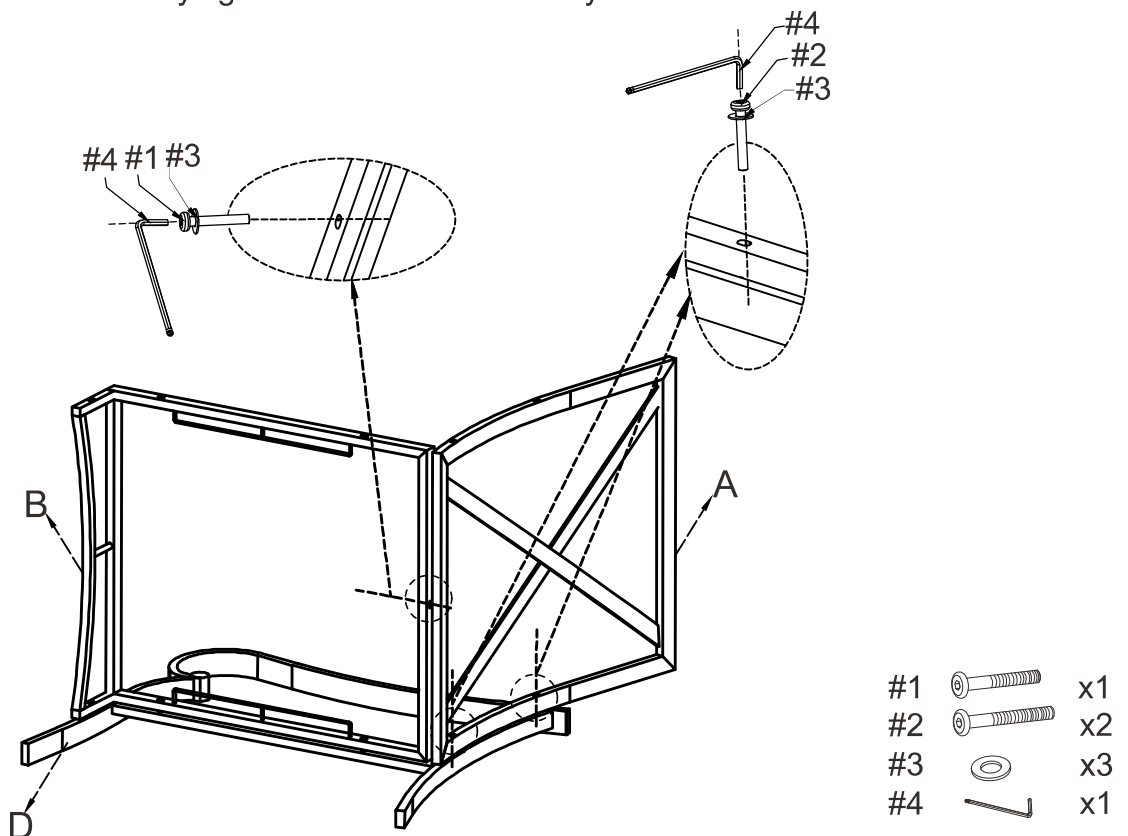 NOTE: Please do not fully tighten bolts until unit is fully assembled.



Step 3. Attach right arm panel (part C) to back panel (part A) and seat panel (part B) using bolts (part #1), long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

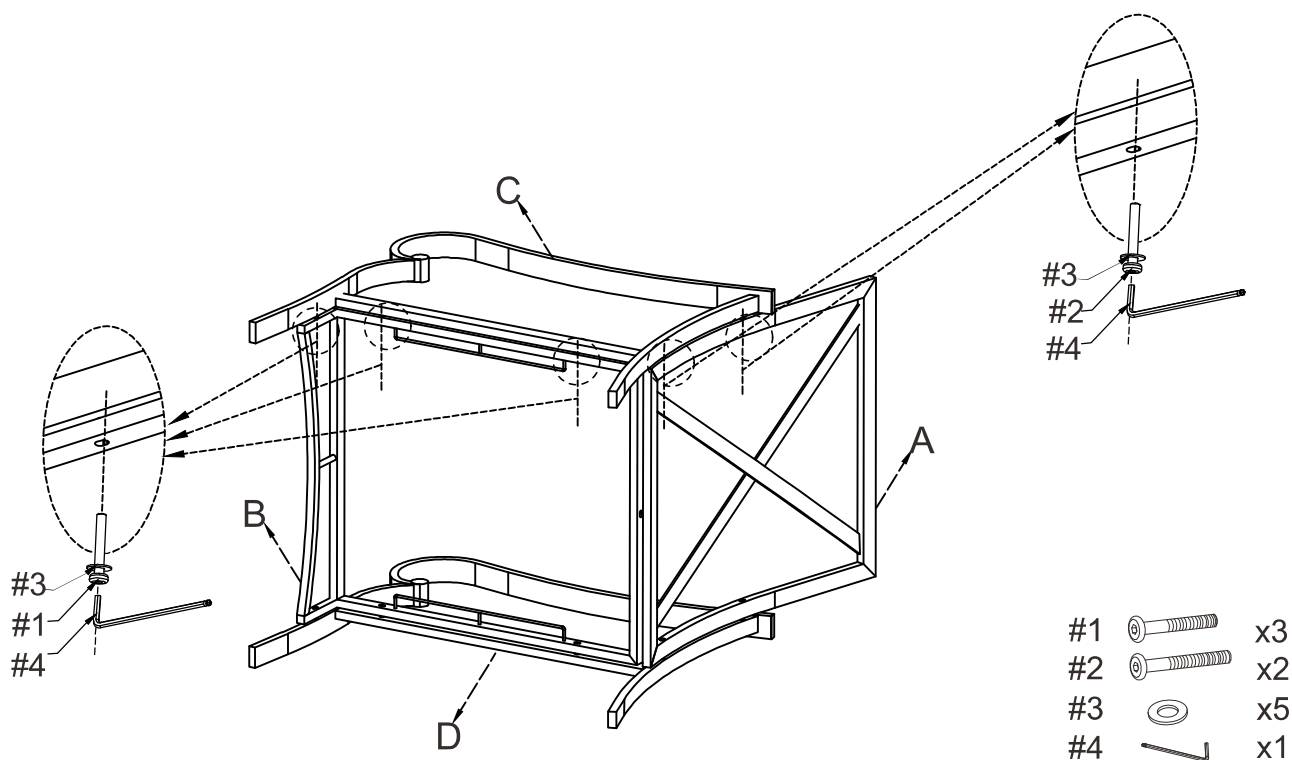 NOTE: Please fully tighten all bolts at this time.



Step 4. Carefully turn unit upright. Place seat cushion (part E) and back cushion (part F) as shown below.

Repeat steps 1-4 to assemble remaining chair.

