



Outdoor Wicker Sofa CO6341

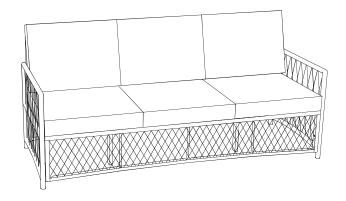

PART LIST

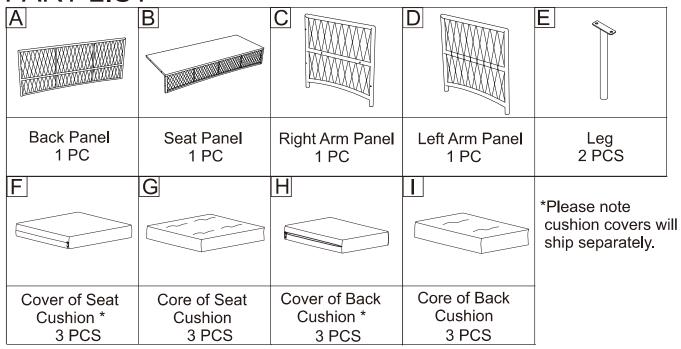


HARDWARE LIST

#1	#2	#3	#4
	0		
M6*20mm	M6*45mm	M6mm	M6mm
Bolt 4 PCS (Extra 1)	Long Bolt 13 PCS (Extra 1)	Flat Washer 17 PCS (Extra 1)	Allen Wrench 1 PC

Step 1. Lay left arm panel (part D) down on a soft flat surface, such as carpet, as shown below.


Attach seat panel (part B) to left arm panel (part D) using long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

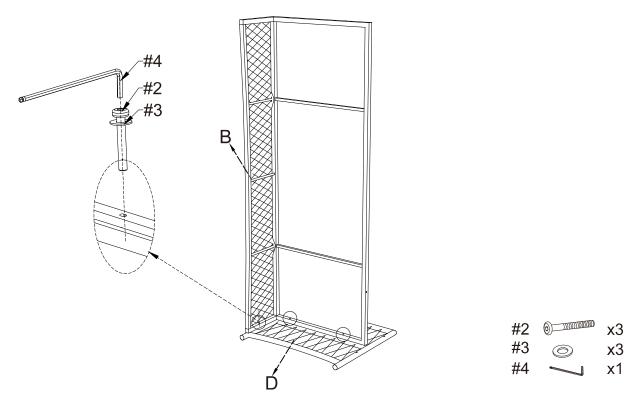


Step 2. Attach back panel (part A) to left arm panel (part D) and seat panel (part B) using long bolts (part #2), flat washers (part #3) and allen wrench (part #4).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

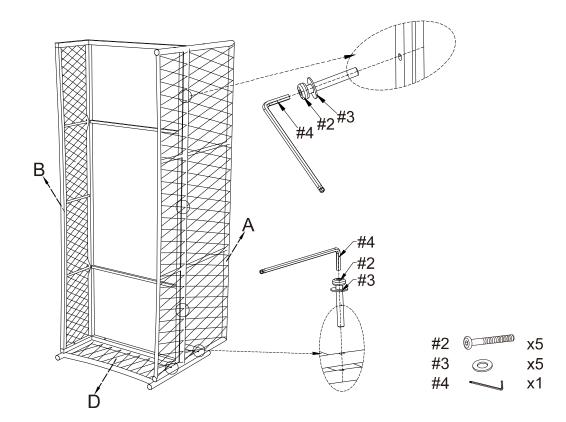


Step 3. Attach right arm panel (part C) to back panel (part A) and seat panel (part B) using long bolts (part #2), flat washers (part #3) and allen wrench (part #4).


NOTE: Please do not fully tighten bolts until unit is fully assembled.

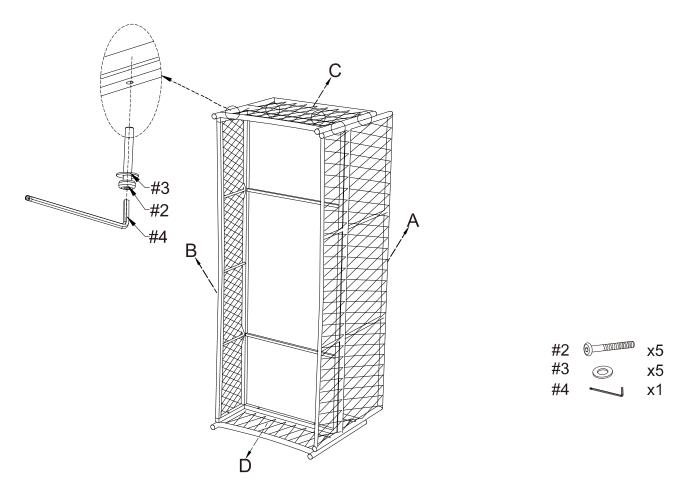

Step 4. Attach legs (part E) to seat panel (part B) using bolts (part #1), flat washers (part #3) and allen wrench (part #4).

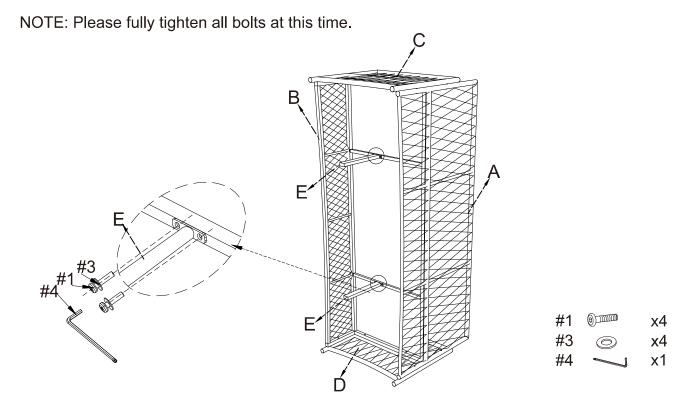

Step 5. Insert core of seat cushions (part G) into cover of seat cushions (part F). Insert core of back cushions (part I) into cover of back cushions (part H).

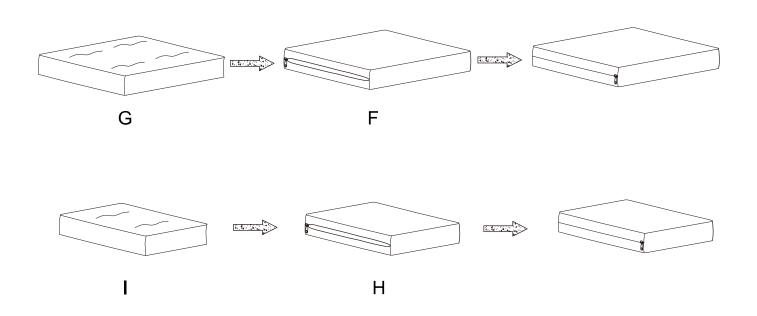

Step 6. Carefully turn unit upright and add cushions as shown below.

