

CD85

INDUSTRIAL DEHUMIDIFIER

OWNER'S MANUAL



www.eipl.co.uk

CD85

PACKAGE CONTENTS

| Item | Description | Quantity |
|------------|---------------------|----------|
| 10293GR-US | Dehumidifier | 1 |
| 3014338 | PVC Tube – 12mm I/D | 3M |
| 3086101 | Jubilee clip | 1 |
| TPC361 | Manual | 1 |

INTRODUCTION

Designed for a wide range of applications, the CD85 dehumidifier is a rugged, industrial unit which utilizes an energy-efficient compressor and a compact portable design to provide easy efficient drying.

The CD85 has a number of special features:

- Compact Size
- High efficiency rotary compressor
- Ebac's "**Hot Gas**" defrost system
- Exterior epoxy powder-coated finish
- Provision for permanent drainage
- All galvanized interior
- Extra long power cord
- Humidistat

The fan draws the moist air through the cold evaporator coil, which cools the air below its dew point. Moisture forms on the evaporator coil and is collected in the condensate tray, which is equipped with a permanent drain. The cooled air then passes through the hot condenser coil where it is reheated using the same energy removed during the cooling phase, plus the additional heat generated by the compressor. The air is, therefore, discharged from the dehumidifier at a slightly higher temperature with a lower absolute humidity than that which entered. Continuous circulation of air through the dehumidifier gradually reduces the relative humidity within the area.



The CD85 dehumidifier is a rugged, reliable drying unit designed to operate effectively over a broad range of temperature and humidity conditions. An active hot gas defrost system, controlled by an electronic timer, guarantees positive de-icing, thereby optimizing operation at low temperatures.



The unit incorporates a welded and galvanized steel chassis and is finished in an epoxy coating for resilience to damage caused by rough handling.

COVERS

The CD85 covers can be swapped to allow the airflow direction to be changed to better suit the application the unit is to be used for. To change the covers, first remove the 4 off retaining screws and washers from each cover, swap cover positions and replace 4 off retaining screws and washers. If changing the evaporator covers then the filter retaining mesh should always be placed behind the Evaporator Grille Cover. This is held in place with 4 off M3 hex head bolts.

Evaporator Grille Cover and Evaporator Blanking Cover are interchangeable.
 Condenser Grille Cover and Condenser Blanking Cover are interchangeable.
 Evaporator and Condenser covers are not interchangeable.
 The different combinations available are shown below.

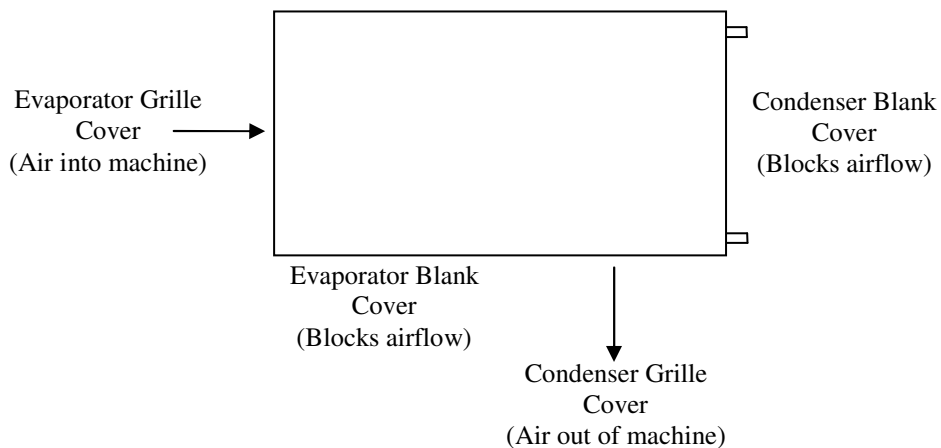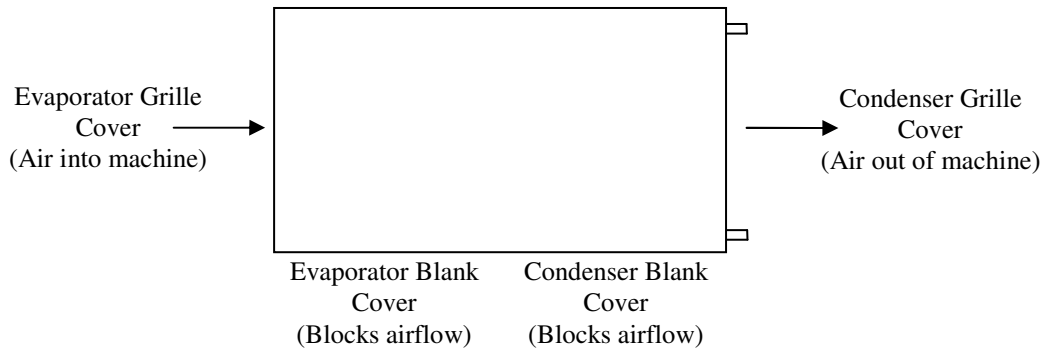

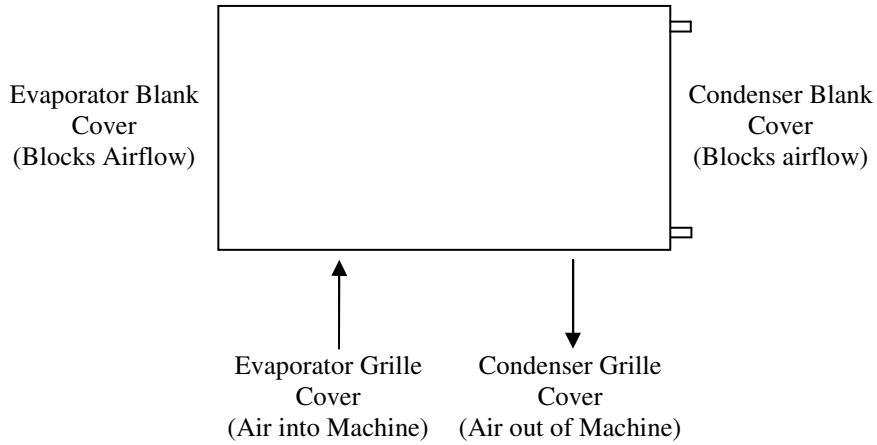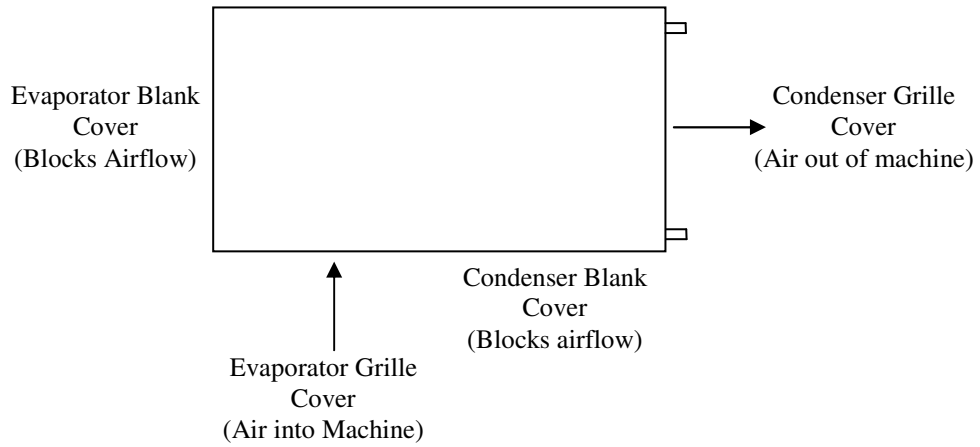

SPECIFICATIONS

MODEL: CD85

HEIGHT: 15.75"

WIDTH: 23.6"

DEPTH: 13.5"

WEIGHT: 75 lbs

AIRFLOW: 360 CFM

EXTRACTION: 56 Pints Per Day

POWER SUPPLY: 110V/ 60Hz/ 1 ph

FINISH: Powder-coated Epoxy

OPERATING RANGE: 33°F – 95°F

REFRIGERANT: R-407c (17.64 oz)

"This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. The refrigeration system is hermetically sealed.

The Global Warming Potential (GWP) of refrigerants used in products manufactured by Ebac Industrial Products Ltd is as follows

R134a – 1300

R407c – 1610

For type and weight of refrigerant contained in this unit, please refer to the product data label"

OPERATION

The following procedures should be followed to test the CD85 for correct operation:

1. After unpacking, examine all external features to confirm damage-free shipment. Report all defects and damage at once. Connect the power cable to a grounded 15 Amp electrical outlet.
2. Check dehumidification process as follows:

TO ENSURE CONTINUED FULL EFFICIENCY OF THE DEHUMIDIFIER, MAINTENANCE PROCEDURES SHOULD BE PERFORMED AS FOLLOWS:

- A. Place unit on a level surface.
- B. Start up unit by turning the humidistat control knob until the unit turns on.
- C. Check that the compressor is running.
- D. Leave the machine running for 15 minutes.
- E. Observe the evaporator coils through the evaporator filter panel
 - i. If the air temperature is below 80° F, an even coating of frost should cover the entire evaporator coil
 - ii. If the air temperature is above 80° F, frost and/or droplets of condensed water should cover the entire evaporator coil.
- F. After continuous running time of approximately 55 minutes, the unit will enter "Hot Gas" defrost mode for 5 minutes and then automatically return to normal operation.

If, after carrying out the above procedures, the unit does not appear to function properly, refer to the *Trouble Shooting* section, which follows, or contact the Factory Service Center.

CAUTION:
ONCE THE UNIT HAS BEEN SWITCHED OFF, WAIT AT
LEAST FIVE MINUTES BEFORE RESTARTING.

ROUTINE MAINTENANCE

WARNING:
ENSURE THAT THE POWER CORD TO THE MACHINE HAS BEEN
DISCONNECTED BEFORE CARRYING OUT ROUTINE
MAINTNENANCE

To ensure continued full efficiency of the dehumidifier, maintenance procedures should be performed as follows:

1. Clean the surface of the evaporator and condenser coils by blowing the dirt out from behind the fins with compressed air. Hold the nozzle of the air hose away from the coil to avoid damaging the fins. Alternatively, vacuum clean the coils.

WARNING:
DO NOT STEAM CLEAN REFRIGERATION COILS

2. Check that the fan is firmly secured to the motor shaft and that the fan rotates freely. **The fan motor is sealed for life and therefore does not need oiling.**
3. To check the refrigerant charge, run the unit for 15 minutes and briefly remove the evaporator filter cover. The evaporator coil should be evenly frost coated across its surface. At temperatures above 80°F, the coil may be covered with droplets of water rather than frost. Partial frosting accompanied by frosting of the thin capillary tubes, indicates loss of refrigerant gas or low charge.
4. Check all wiring connections.
5. To check the operation of the defrost system, switch the machine on and leave it running for approximately 55 minutes. The machine will then enter "Hot Gas" defrost mode for approximately 5 minutes before returning to normal operation. If the unit will not defrost, the printed circuit timer board may be defective or the by-pass valve may be inoperable.

**IF ANY OF THE PRECEDING PROBLEMS OCCUR, CONTACT THE EBAC
SERVICE CENTER PRIOR TO CONTINUED OPERATION OF THE UNIT TO
PREVENT PERMANENT DAMAGE.**

REPAIRS

1. Should an electrical component fail, consult the Factory Service Center to obtain the proper replacement part.
2. If refrigerant gas is lost from the machine, it will be necessary to use a refrigeration technician to correct the fault. Contact the Factory Service Center prior to initiating this action.

Any competent refrigeration technician will be able to service the equipment. The following procedure must be used:

- a. The source of the leak must be determined and corrected.
- b. The machine should be thoroughly evacuated before recharging.
- c. The unit must be recharged with refrigerant measured accurately by weight.
- d. For evacuation and recharging of the machine, use the crimped and brazed charging stub attached to the side of the refrigerant compressor.

The charging stub should be crimped and rebrazed after servicing. **NEVER** allow permanent service valves to be fitted to any part of the circuit. Service valves may leak causing further loss of refrigerant gas.

3. The refrigerant compressor fitted to the dehumidifier is a durable unit that should give many years of service. Compressor failure can result from the machine losing its refrigerant gas. The compressor can be replaced by a competent refrigeration technician.

Failure of the compressor can be confirmed by the following procedure:

- a. Establish that power is present at the compressor terminals using a voltmeter.
- b. With the power disconnected, check the continuity of the internal winding by using meter across the compressor terminals. An open circuit indicates that the compressor should be replaced.
- c. Check that the compressor is not grounded by establishing that a circuit does not exist between the compressor terminals and the shell of the compressor.

TROUBLESHOOTING

| <u>SYMPTOM</u> | <u>CAUSE</u> | <u>REMEDY</u> |
|---|---|---|
| Unit inoperative | 1. No power to unit | 1. Check the power from power supply panel |
| Little or no airflow | 1. Fan motor burnt out 2. Dirty refrigeration coils 3. Loose electrical wiring Fuse blown or circuit breaker tripped | 1. Replace the fan motor 2. See <i>Routine Maintenance</i> Section 3. Check the wiring diagram to find fault and repair 4. Replace the fuse or reset the circuit breaker |
| Little or no water extraction | 1. Insufficient air flow 2. Compressor fault 3. Loss of refrigerant gas | 1. Check all of the above 2. Contact the Factory Service Center 3. Contact the Factory Service Center |
| Little or no defrost when required | 1. Faulty timer 2. Faulty by-pass valve | 1. Contact the Factory Service Center 2. Contact the Factory Service Center |
| Unit vibrates excessively | 1. Loose compressor 2. Damaged fan | 1. Tighten the nuts on the compressor mounts 2. Replace fan |
| Water flooding inside the machine | 1. Drain pipe blocked/frozen 2. Drain pipe too high 3. Crimped or blocked tubing | 1. Clear the obstruction 2. Ensure that no section of the drain hose is 1M max. above the level of the water outlet 3. Straighten, clear, or replace tubing |

CS 60 SPARE PARTS LIST

| <u>NUMBER</u> | <u>DESCRIPTION</u> | <u>PART NUMBER</u> | <u>QUANTITY</u> |
|---------------|----------------------|------------------------|-----------------|
| 1 | Defrost Timer | 1619506 | 1 |
| 2 | Control Knob | 2018644 | 1 |
| 3 | Capillary Tube | 3014254 | 2 x 24" |
| 4 | Solenoid Valve | 3020814 | 1 |
| 5 | Filter Dryer | 3020909 | 1 |
| 6 | Compressor | 3022198 | 1 |
| 7 | Solenoid Coil | 3030421 | 1 |
| 8 | Capacitor | 3030908 | 1 |
| 9 | Humidistat | 3035147 | 1 |
| 10 | Mains Lead | 3035148 | 1 |
| 11 | Fan Motor | 3040262 | 1 |
| 12 | Fan Motor Inlet Ring | 3040254 | 1 |
| 13 | Fan Motor Capacitor | 3030893 | 1 |
| 14 | Relay | 3036157 | 1 |
| 15 | Rubber Foot | 3101436 | 1 |
| 16 | Drain Tubing | 3014338 | 9 Feet |
| 17 | Condensate Pump | 3160102 | 1 |
| 18 | Condenser Coil | 2029322 | 1 |
| 19 | Evaporator Coil | 2029323 | 1 |

Spare parts available online

www.EIPLDIRECT.com



| | |
|---------|--------------|
| Drawing | : - TPC361 |
| Issue | : - 3 |
| Date | : - 03/10/12 |

LIMITED WARRANTY

Our products carry a one-year unconditional warranty against any defects in workmanship or material. This warranty will cover all parts and labor required to repair your Ebac product. This warranty is invalid if the unit has been abused, damaged, whether intentional or accidental, or if any modifications have been made to the unit.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS ISSUED IN LIEU OF ALL OTHER WARRANTIES (WHETHER WRITTEN, ORAL, OR IMPLIED) INCLUDING THE WARRANTY OF MERCHANTABILITY AND THE WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. EBAC INDUSTRIAL PRODUCTS, INC. DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL DAMAGES, LOST PROFITS, OR INCIDENTAL DAMAGES FOR BREACH OF ANY WRITTEN OR IMPLIED WARRANTY WITH RESPECT TO THE FOREGOING DESCRIBED MERCHANDISE.

For Your Records: Model: _____
S/N: _____
Date Received: _____

SAVE THIS SECTION FOR YOUR RECORDS
CLIP AND RETURN THIS CARD

PLEASE NOTE

To ensure that your Ebac Dehumidifier is accorded the full coverage provided by this warranty, please complete and mail this card at your earliest convenience.

Thank You

| WARRANTY REGISTRATION | | |
|--|-------------|---------------------|
| MODEL _____ | S/N _____ | DATE RECEIVED _____ |
| OWNER _____ | | |
| ADDRESS _____ | | |
| CITY _____ | STATE _____ | ZIP _____ |
| COMMENTS _____ | | |
| _____ | | |
| _____ | | |
| Ebac Industrial Products. 700 Thimble Shoals Boulevard, Suite 109, Newport News, Virginia. 23606-2575 | | |



| | |
|---------|--------------|
| Drawing | : - TPC361 |
| Issue | : - 3 |
| Date | : - 03/10/12 |



| | |
|---------|--------------|
| Drawing | : - TPC361 |
| Issue | : - 3 |
| Date | : - 03/10/12 |



| | |
|---------|--------------|
| Drawing | : - TPC361 |
| Issue | : - 3 |
| Date | : - 03/10/12 |

UK Head Office

Ebac Industrial Products Ltd
St Helens Trading Estate
Bishop Auckland
County Durham
DL14 9AD

Tel: +44 (0) 1388 664400
Fax: +44 (0) 1388 662590

www.eipl.co.uk
sales@eipl.co.uk

American Sales Office

Ebac Industrial Products Inc
700 Thimble Shoals Blvd.
Suite 109, Newport News
Virginia, 23606-2575
USA

Tel: +01 757 873 6800
Fax: +01 757 873 3632

www.ebacusa.com
sales@ebacusa.com

German Sales Office

Ebac Industrial Products Ltd
Miraustra 64 – 66
13509
Berlin
Germany

Tel: +49 3043 557241
Fax: +49 3043 557240

www.eip-ltd.de
sales@eip-ltd.de