

Loading

Max Wash Load

Illustration represents maximum load for a wash-only cycle. Do not pack the drum to full capacity.




Max Wash & Dry Load

Illustration represents maximum load for combination wash and dry cycle. Fill halfway with dry clothes to leave sufficient room for clothes to tumble freely. Leave additional room when loading wet clothes.




Detergent Dispenser

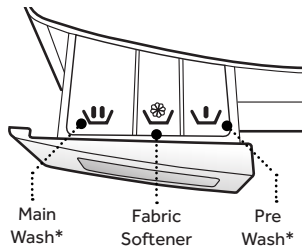

*Use only powdered HE detergent when pre-wash option is selected.

Condensing Drying System

The condenser is the major component of the drying mechanism, and relies on cold water to function. The unit cannot dry clothes unless connected to a cold water faucet. Failure to do so may also result in damage to the unit.

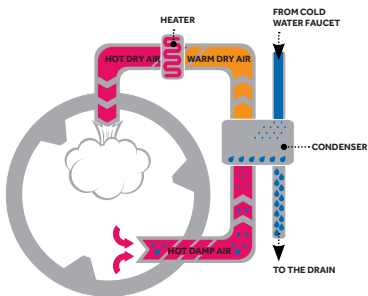

Auto-Lock Door

This washer has a self-locking door that unlocks 3 minutes after the machine has stopped. The door will not open until this time has elapsed.

3 MINUTES

Cycle Selections

Option	Cycle	Fabric Type	Max Load
WASH ONLY	Cotton	Cottons, Linen and Mixed Garments	Full
	Synthetic	Wrinkle-Free and Synthetics	Half
	Wool	Items Labeled Hand Washable	Quarter
	Silk	Lingerie, Sheer Fabrics	Quarter
	Quick	Lightly Soiled Garments	Half
	Sport	Spandex, Stretch Fabrics, and High Performance Knits	Half
	Rinse	All Clean Garments	Half
	Spin	Clean Soaking Wet Garments	Half
WASH & DRY	Cotton	Cottons, Linens and Mixed Garments	Half
	Synthetic	Wrinkle-Free and Synthetics	Half
	Quick	Lightly Soiled Garments	Half
DRY ONLY	Auto Dry	Cottons, Linens and Mixed Garments	Half
	60 Min. Dry	Cottons, Linens and Mixed Garments	Half
	Touch Up	Cottons, Linens and Mixed Garments	Quarter