

Model: INSPIRATION-SS **INSPIRATION-SV INSPIRATION-SED**

Decorative Gel-fired Appliance





Owner's Manual Installation and Operation

CAUTION DO NOT DISCARD THIS MANUAL



Important operating and • maintenance instructions included.

Read, understand and follow these instructions for safe installation and operation.

· Leave this manual with party responsible for use and operation.

WARNING



HOT! DO NOT TOUCH. SEVERE BURNS MAY RESULT. CLOTHING IGNITION MAY RESULT.

Glass and other surfaces are hot during operation and cool down.

- · Keep children away.
- CAREFULLY SUPERVISE children near or around this appliance.
- · Alert children and adults to hazards of high temperatures.
- · Keep clothing, furniture, draperies and other combustibles away.

WARNING

Improper installation, adjustment, alteration service or maintenance can cause injury or property damage. Read the installation and maintenance instructions thoroughly before installing or servicing this equipment.

WARNING

Unit and glass should be kept clean to prevent accidental fire danger.



Installation and service of this appliance should be performed by qualified personnel. The Outdoor Greatroom Company suggests NFI certified or factory-trained professionals, or technicians supervised by an NFI certified professional.

DO NO DISCAR

Read this manual before installing or operating this appliance. Please retain this owner's manual for future reference.

Congratulations

Congratulations on selecting an Outdoor Greatroom Company decorative gel-fueled appliance. The Inspiration unit you have selected is designed to provide the utmost in safety, reliability, and lasting beauty.

As the owner of an Inspiration, you'll want to read and carefully follow all of the instructions contained in this owner's manual. Pay special attention to all cautions and warnings.

This owner's manual should be retained for future reference.

We suggest you keep it with your other important documents and product manuals

Homeowner Reference Information	We recommend that you record the following pertinent information about your appliance:
Model Name:	Date purchased/installed:
Serial Number:	Location on appliance:
Dealership purchased from:	Dealer phone:
Notes:	
3	

The information contained in this owner's manual, unless noted otherwise, applies to all models.

When properly installed and maintained, your new Inspiration will give you years of durable use and trouble-free enjoyment.

Listing Label Information/Location

The model information regarding your specific appliance can be found on the rating plate located on your appliance.

The	e Outdoor Greatroom, Inc. LLC Model: Venturi Flame	CUL US	UNVENTED ALCOHOL- FUEL-BURNING DECORATIVE APPLIANCE 4BM3	
012011	 See installation and operating instructions for this model. Use Venturi Flame[™] Gel fuel only. Do not use an appliance insert or other products not specified for use with this product. For use indoors and outdoors Warning: To avoid the risk of damaging the appliance materials and increasing the risk of spreading a fire, do not use the appliance to cook or warm food. 			

Table of Contents

1.	Listing and Code Approvals4
	A. Appliance Certification4
	B. BTU Specifications4
2.	Getting Started5
	A. Design and Installation Considerations5
	B. Tools and Supplies Needed5
	C. Inspect the Appliance and Components5
3.	Parts List and Assembly6
	A. Parts List6
	B. Locating and Installing Wall-Mounting Bracket6
	C. Hanging the Unit8
	D. Attaching Borosilicate Glass Cylinder9
	E. Adding Decorative Glass Substrate9
4.	Fuel Information10
5.	Operating Instructions11
	A. Before Lighting Appliance11
	B. Lighting the Appliance12
	C. Extinguishing Appliance13
6.	Maintaining and Servicing the Appliance13
7.	Troubleshooting14
8.	Reference Materials14
	A. Service Parts List14
	B. Limited One Year Warranty15
	C. Contact Information16

A. Appliance Certification

MODEL: INSPIRATION- SS, SV, SED

TYPE: Decorative Gel-Fired Indoor/Outdoor Fireplace

STANDARD: UL 1370 Gel Fired Appliance

USE: Venturi Flame[™] Gel Fuel from

The Outdoor Greatroom Company

The Inspiration has been tested in accordance with UL standards for indoor/outdoor unvented appliances for installation and operation as described in these installation and operating instructions.

The installation must conform with local codes or, in the absence of local codes, with code UL 1370.

B. BTU Specifications

The Venturi Flame gelled alcoholbased fuel used in this unit is rated at 7000 BTU/hr while burning.

WARNING

This appliance has not been tested with an unvented gas log set. To reduce risk of fire or injury, do not install an unvented gas log set into this appliance.

WARNING



Risk of Explosion

- Never use any fuel other than Real Flame[™] or Venturi Flame[™] brand gel fuels. Never use gasoline.
- Never refill fuel cans while the appliance is still operating or hot.
- Never use appliance in areas where flammable vapors or gas may be present.
- Never store or transport fuel in other than a metal or plastic container that is approved for gel fuel storage.
- Do not store fuel in the living space.

This gel-fired appliance is designed for **DECORATIVE USE ONLY** and **MUST NOT** be used for cooking.

Locate the Inspiration on a flat wall. **DO NOT** locate the appliance where it will get excessively wet or submerged in water.

A. Design and Installation Considerations

Before installing this unit, take time to thoroughly read through these instructions, gather necessary tools for installation, and determine a safe and suitable location for installation of your new Inspiration unit.

B. Tools and Supplies Needed

Before beginning the installation be sure that the following tools and building supplies are available.

Gloves

Safety glasses Phillips screwdriver or screw gun Level or electronic leveling device Appropriate screws for wall type Pen or pencil

The Outdoor Greatroom Company disclaims any responsibility for, and the warranty will be voided by, the following actions:

- Installation and use of any damaged components.
- Modification of the unit.
- Installation other than as instructed by The Outdoor Greatroom Company.
- Installation and/or use of any component part not approved by The Outdoor Greatroom Company.
- Installation of any incomplete components.

Any such action may cause a fire hazard.

Please report any damaged or missing components to your dealer.

CAUTION

Check building codes prior to installation.

- Installation MUST comply with local, regional, state, and national codes and regulations.
- Consult insurance carrier, local building, fire officials, or authorities having jurisdiction about restrictions, installation inspection, and permits.

CAUTION

Sharp Edges

• Wear protective gloves and safety glasses during installation.

WARNING

Do **NOT** burn solid fuels in this gel-fired appliance.

CAUTION

Do **NOT** use gel fuel that has gotten water or other liquid in it. Fuel may be difficult to light and may self-extinguish. Keep lid on gel fuel whenever not in use to prevent this from occurring.

C. Inspect the Appliance and Components

- Carefully remove the appliance and components from the packaging.
- Inspect glass cylinder for cracks or chips.
- Report to your dealer any parts damaged in shipment.
- Read all of the instructions before starting the installation. Follow these instructions carefully during the installation to ensure maximum safety and quality results.



A. Parts List



Inspiration Unit



Stainless Steel Wall Mounting Bracket



12" Borosilicate Glass Cylinder




Decorative Liqui-fire Glass Beads



Gel Stirrer/ Snuffer/Can Opener

B. Locating and Installing Wall-Mounting Bracket


- Check for damage. Do not use damaged components.
- Choose a suitable location on desired wall away from flammable materials such as drapes, curtains, and furniture.
- Choose a location so that small children and pets do not disturb or touch the appliance while in operation, resulting in possible accidental burns or fire danger.
- Locate an area on the desired wall approximately 32"x32" preferably with extra clearance under the unit for ease of drawer operation.
- It is necessary to mount the unit at wall stud locations for proper holding strength and weight distribution.

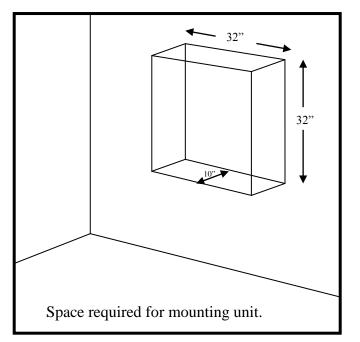



The Outdoor Greatroom Company \cdot Inspiration Rev D 12/23/2010


With a location selected, it is necessary to locate two (2) wall studs ,using a stud-finding device or other method, for attaching the wall mounting bracket to. If unable to do so, please consult a qualified professional for assistance.


2) Once studs are located, a position for the wall mounting bracket can be determined. Using a bubble level or similar leveling device, locate and mount bracket to wall using four (4) screws. It may be helpful to mark the wall first with a pen or pencil to aid in lining up bracket before inserting screws.

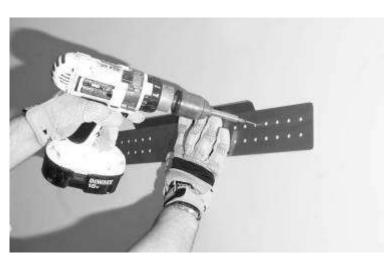

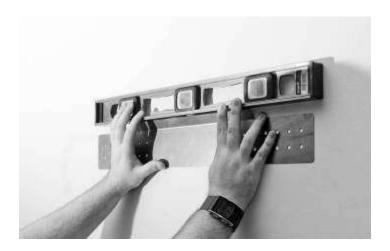

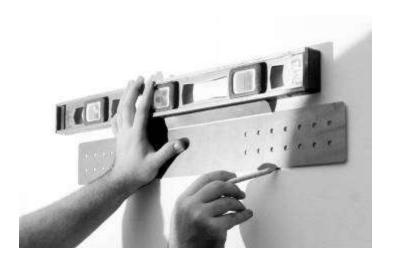


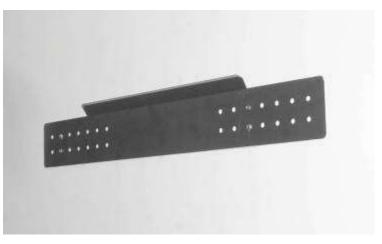

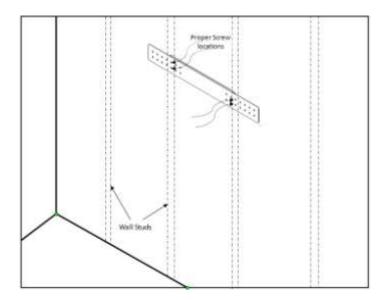

C. Hanging the Unit

- To avoid injury during installation, always wear gloves and safety glasses while handling your Inspiration unit, as some edges may be sharp.
- This unit is made of metal and may be heavy. Always ask for assistance from another person if unable to complete this step by yourself to avoid accidental injury.
- Lift unit to wall so that the mounting lip (1) 1) of the Inspiration is above the mounting bracket (2).

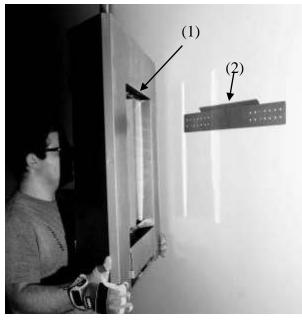


2) Hold unit flush against wall and slowly lower onto mounting bracket.



3) Once your Inspiration is hung securely on the wall, re-locate wall studs marked in step "**B**" at the base of the fireplace. You will see holes similar to the ones on the wall bracket.

Insert two (2) screws, one in each stud, into the base of the unit. This will secure your Inspiration to the wall.

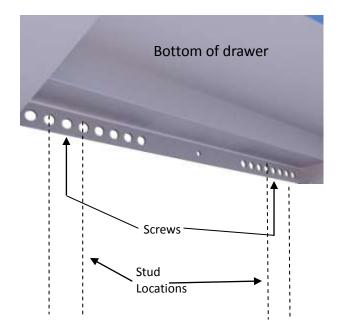

NOTICE

In a house of typical construction, that is, one that is not of unusually tight construction due to heavy insulation and tight seals against air infiltration, and adequate supply of air for combustion and ventilation is provided through infiltration. However, if the unvented decorative appliance is used in a small room where less than 200 cubic feet (5.7 cubic meters) of air space is provided for each 1000 Btu per hour of unvented decorative appliance rating, the door(s) to adjacent room(s) should be kept open or a window to the outside should be opened at least 1 inch (25.4mm) to guard against potential buildup of indoor air pollution. Do not use the appliance in a bathroom or any other small room.

D. Attaching Borosilicate Glass Cylinder

- Wear clean, soft, leather gloves and eye protection while handling the glass cylinder included with your Inspiration to avoid accidental injury.
- Although the Borosilicate glass used to make the cylinder is strong, always handle and install carefully and **never** use excessive force.
- 1) With "CAUTION HOT" lettering rightside up and facing forward, gently ease glass cylinder onto base using a light, careful rocking motion.
- 1a) It may be easier to mount glass if a cotton swab dipped in water is wiped on rubber gasket prior to mounting glass.





E. Adding Decorative Substrate

- This step to be completed **after** Borosilicate glass cylinder is in place.
- Always wear gloves and eye protection when handling glass pieces.
- 1) Gently scatter substrate around glass cylinder in a layer of even thickness covering entire surface.


That's It!

The installation of your brand new Inspiration wall unit is complete!



The Outdoor Greatroom Company · Inspiration Rev D 12/23/2010

Fuel Information

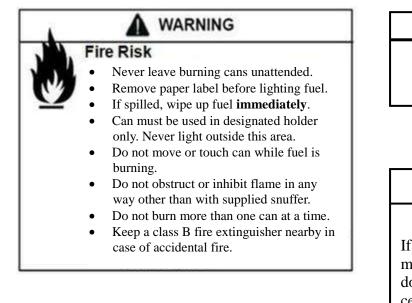

- The Venturi Flame fuel used in your Inspiration is a proprietary blend of gel fuel specifically designed for use in our products. We recommend using Venturi Flame fuels to get the most out of your new unit.
- To store unused gel fuel, allow adequate time to cool, replace lid tightly, and store in a cool and dry place.
- When opening can, use supplied stirrer/can-opener or standard flat-head screwdriver to gently pry lid off, being careful to point away from face.
- Gently stir gel before each use for maximum flame quality.

CAUTION

Can will be **HOT** afer use. Allow can to cool thoroughly after extinguishing flame before touching or handling.

🛕 FIRST AID

If gel gets in eyes, flush with water for 15 minutes; get medical attention. If ingested, do not induce vomiting; call poison control center at 1-800-222-1222 (in the U.S.A.) or a doctor.

Contains Isopropyl Alcohol

Avoid contact with eyes, mucous membranes or prolonged contact with skin. May irritate eyes. Store in a cool, dry place. Keep away from flame, heat or items that spark. Use in well-ventilated areas. Keep out of reach of children and pets. In case of fire, use a CO_2 fire extinguisher.

To Order Replacement Fuel: Fuel is available through your local dealer, where you purchased your Inspiration, or online from OutdoorRooms.com . Venturi FlameTM Gel Fuel VF6 - 13/24 - 24 13oz cans of fuel. VF6 - 13/12 - 12 13 oz cans of fuel. VF6 - 13/6 - 6 13 oz cans of fuel.

A. Before Lighting Appliance

- Insure that all installation instructions have been followed correctly.
- Make sure that all flammable materials such as drapery and extra cans of gel fuel are kept away from your Inspiration unit.
- Read all warnings and instructions prior to lighting gel fuel.

WARNING

Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to the owner's information manual provided with this appliance. For assistance or additional information consult a qualified installer, or service agency.

B. Lighting the Appliance

1. Pointing can away from face, use supplied stirrer/can-opener or a standard flathead screwdriver to carefully pry lid off of can of gel fuel.



2. Set can upright in fuel gel holder in drawer.



Note: Be sure to immediately wipe up any spilled fuel or excess fuel around mouth of can before igniting to avoid injury or fire.

3. Using a long match or extended lighter, carefully ignite gel and allow to burn for 10 seconds before slowly pushing drawer inwards until it locks in closed position with gel fuel can centered in the opening above.





Note: It may take several minutes for the unit to warm up and produce the best flame. This is completely normal.

WARNING



Fire Risk

Keep combustible materials, gasoline and other flammable vapors and liquids clear of appliance.

- Do NOT store flammable materials in the vicinity of the appliance.
- Do NOT use gasoline, lantern fuel, kerosene, charcoal lighter fluid or similar liquids in this appliance.

Combustible materials may ignite.

WARNING

Fire Risk High Temperatures

Keep combustible household items away from appliance.

- Do NOT obstruct combustion and ventilation air.
- Do NOT place combustible items on top of or near appliance.
- Keep furniture, draperies away from appliance.

C. Extinguishing Appliance

1. Carefully pull drawer outwards until fully extended and use supplied snuffer to completely cover top of can for a few seconds to fully extinguish flame.

Always allow unit to cool before touching or handling unit or gel fuel.

2. Once unit is cool, place lid tightly on fuel can or properly dispose of.



Maintaining and Servicing the Appliance

While the Inspiration unit you purchased is designed to be as low maintenance and easy to use as possible, there are a few things you can do to prolong the life of your unit and keep it looking and working like new.

- Inspect the unit for warping, cracks or other damage. Repair as necessary.
- Remove glass substrate and examine surface and area around glass cylinder. Remove any debris that may have fallen in glass.
- Clean glass cylinder and outside of unit with water and a clean soft cloth. For stainless steel model a household stainless steel cleaner can be used.
- Observe unit to ensure correct operation.

WARNING

Risk of injury or property damage Before servicing:

- Ensure the appliance is completely cooled.
- Remove gel fuel.

With proper installation, operation, and maintenance your Inspiration will provide years of trouble-free service. If you do experience a problem, this troubleshooting guide will assist you in diagnosing a problem and the corrective action to be taken.

Symptom			Possible Causes	Corrective Actions	
1.	Inspiration won't Light.	Α.	Fuel may have water in it.	Check for liquid sitting on top of gel, discard if necessary.	
		В.	Fuel hasn't been stirred before use.	Use supplied stirrer to stir gel before lighting.	
		C.	Fuel can is empty.	Check fuel level in can. Replace if empty.	
2.	Low flames or flames won't stay lit.	А.	Fuel may have water in it.	Check for liquid sitting on top of gel, discard if necessary.	
		В.	Fuel hasn't been stirred before use.	Use supplied stirrer to stir gel before lighting.	
		C.	Drawer may not be fully closed.	Ensure that drawer is full closed while in operation.	
		D.	Fuel can may have been left open.	Replace Fuel	



A. Service Parts List

#	Description of Part	Part Number	Qty.
1	12" Borosilicate Glass Cylinder	GC-12-531	1
2	Decorative Glass Substrate	GlassFireCrystals-DIA	1
3	Snuffer	SS-Snuf	1
4	Gel Stirrer/Can Opener	SS-Stir-Opener	1
5	Wall Mounting Bracket	SS-MB	1



The Outdoor Greatroom Company extends the following warranty for Outdoor Greatroom outdoor products used in the United States of America or Canada. Dealers and employees of The Outdoor Greatroom Company have no authority to make any warranty or authorize any remedies in addition to or inconsistent with the terms of this warranty. This warranty gives you specific legal rights. You may also have other rights that vary from state to state.

The Outdoor Greatroom Company warrants that this Outdoor Greatroom Outdoor Product (the "Product") will be free from defects in material and workmanship for a period of one year from its date of purchase. This warranty is subject to the conditions, exclusions and limitations described below.

This warranty applies only to the original owner of the Product and is non-transferable. The Outdoor Greatroom Company obligation under this warranty does not extend to damages resulting from (1) assembly, operation or maintenance of the Product not in accordance with the Installation/Assembly Instructions, Operating Instructions and the Listing Agency Identification Label furnished with the Product; (2) installation or use which does not comply with local building codes and ordinances; (3) shipping, improper handling, improper operation, abuse, misuse, accident or unworkmanlike repairs; (4) use of fuels other than those specified in the Operating Instructions; (5) Installation or use of components not supplied with the Product or any other components not expressly authorized and approved in writing by The Outdoor Greatroom Company; and/or (6) modification of the Product not expressly authorized and approved in writing by The Outdoor Greatroom Company. Any of the circumstances described in the previous sentence voids this warranty. This warranty is void if the Product or any component has been removed, repaired, or replaced before The Outdoor Greatroom Company has been afforded a reasonable opportunity to inspect the Product.

This warranty is limited to the replacement or repair of defective components or workmanship and The Outdoor Greatroom Company may fully discharge its obligations under this warranty by repairing or replacing, at its discretion, the defective components. The Outdoor Greatroom Company will provide replacement parts at no charge and will pay reasonable and necessary labor and freight costs related to replacing or repairing defective components under this warranty. The maximum amount recoverable under this warranty is limited to the purchase price of the Product and, if The Outdoor Greatroom Company is unable to provide replacement or repair in an expedient and cost-effective manner, The Outdoor Greatroom Company may discharge all obligations under this warranty by refunding the purchase price of the Product.

EXCEPT TO THE EXTENT PROVIDED BY LAW, THE OUTDOOR GREATROOM COMPANY MAKES NO EXPRESS WARRANTIES OTHER THAN THE WARRANTY EXPRESSED HEREIN. THE DURATION OF ANY IMPLIED WARRANTY IS LIMITED TO THE DURATION OF THE WARRANTY SPECIFIED ABOVE. IN NO EVENT SHALL THE OUTDOOR GREATROOM COMPANY BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY DEFECTS IN THE PRODUCT. Some states do not allow limitations on how long an implied warranty lasts, or do not allow exclusion or limitation of incidental or consequential damages, so these limitations may not apply to you.

To obtain service under this warranty, you must:

- 1. Send written notice of the claimed condition to: The Outdoor Greatroom Company, 2015 Silver Bell Road, #195, Eagan, MN 55122.
- 2.Affirm that you are the original owner of the Product.
- 3. Provide The Outdoor Greatroom Company reasonable opportunity to investigate the claim, including reasonable opportunity to inspect the Product prior to any repair or replacement work and before the Product or any component of the Product has been removed.

4. Obtain The Outdoor Greatroom Company's consent to any warranty work before the work is done. $\ensuremath{\tiny \odot}$ The Outdoor Greatroom Company

C. Contact Information



The Outdoor Greatroom Company 2015 Silver Bell Road, #195, Eagan, MN 55122 www.outdoorrooms.com

Please contact your Outdoor Greatroom Company dealer with any questions or concerns. For the number of your nearest Outdoor Greatroom dealer, please call 866.303.4028.

-NOTES-

