


Thank you for your purchase of this fine Laundry Alternative product. This is the first spin dryer with a carrying handle and self-opening lid. This manual contains comprehensive usage and safety instructions. Please read carefully.

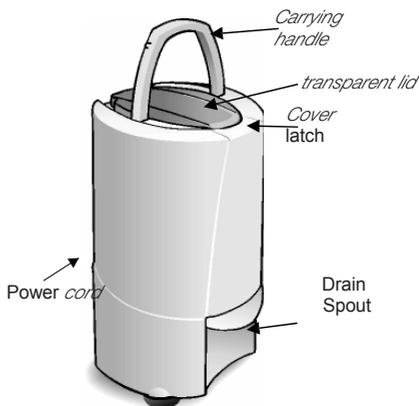

## Safety


- This product should **never** be used by children and the disabled without direct supervision. It should also not be operated by anyone who has not read the instruction manual.
- Supervise the entire spin drying process, especially when there are children around.
- Although this product is equipped with security system, never put your hands into the basket until it has completely stopped and unplugged.
- The Laundry Alternative is not responsible for acts performed without observing the instructions for use, precautions and warnings.
- Before connecting your spin dryer, make sure that the wiring (wire, outlet and circuit breaker) is suitable for this product. If in doubt, contact an electrician.
- In case of power outage or voltage variation in your home, turn off your spin dryer.
- Never leave the appliance connected to the power grid when not in use.
- Do not use extension cords to connect your the spin dryer to the outlet.
- As with any appliance, do not operate the product with bare feet, avoiding the risk of electric shock.
- Do not overload the spin dryer.
- The product is designed to spin dryer clothing only. It should NOT be used to spin dry sneakers, stuffed animals, food, ink, objects that do not retain fluid, etc. Such items can damage the machine and cause accidents.
- Never lift the product while it is in operation. This may cause accidents and damage your product.
- The spin dryer was developed exclusively for domestic use. It should not be used for industrial purposes.
- You must use the round safety cover (item 4 - instructions) during operation, in order to prevent potential accidents and injury.

## Setup

The Spin Dryer is easy to set up, it does not require installation.

Care must be taken:

- 1 - Check that the mains voltage is compatible with the product.
- 2 - Use electrical outlets located higher up, to keep them away from potential sources of water and out of children's reach.
- 3 - Do not use adapters, extension cords or other types of improvised connections between the product and outlet, as this could result in short circuit or fire;
- 4 - Do not install on carpet or surfaces that prevent air circulation on the bottom, as this could cause the motor to overheat.
- 5 - Choose a level surface.
- 6 - For a longer life, install it in a well ventilated, dry area. Do not store outdoors and avoid storing in overly hot or cold places.
- 7 - Place a container (bowl or small bucket) underneath the spout of water;

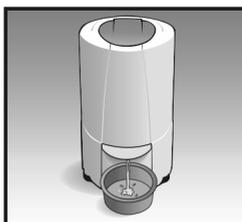



## WARRANTY CONTRACT

1. The Spin Dryer is warranted for 36 consecutive months against manufacturing defects, from the date of issue of invoice.
2. The warranty will include free replacement of parts, if applicable, or a replacement unit.

This warranty is automatically void if:

- 4.1 The use of the product is not exclusively domestic;
- 4.2 The user does not follow the instructions in the instruction manual.
- 4.3 The product is misused, shows signs of neglect or has been altered in some other way.

