

**FELIX STORCH, INC.
SUMMIT APPLIANCE DIVISION®**

SPR7-OS

SPR601-OS

SCR600L-OS

SPR601-OSRC

SCR600L-OSRC

SP6DSSTB-OS

OUTDOOR REFRIGERATORS



USE AND CARE GUIDE

Please read before using this appliance and retain for future reference.

Before Putting Into Use

These instructions are important, and we request you read them before using this refrigerator. They describe the appliance and the correct and safe way to use it. The instructions were prepared for various models/types of refrigerators so you may find descriptions of some accessories and functions that do not apply to yours.

- Before connecting the appliance to the power supply, leave it standing for about 2 hours. This allows the lubricants to drain back into the compressor and reduces the risk of malfunctions in the cooling system caused by shipping.
- Clean the appliance thoroughly; especially the interior (See Maintenance and Cleaning).

We Care About the Environment

- Our appliances are distributed in packaging made of environmental friendly materials which can safely be recycled, disposed of or destroyed with minimal environmental effects.
- Our instruction manuals are printed on recycled paper or chlorine free bleached paper.

Tips for Energy Savings

- Try not to open the door or drawers too often, especially when the weather is hot and humid. Once you open the door or drawer try to close it as soon as possible.
- Periodically check that the appliance is sufficiently ventilated. Although the back of the unit is sealed, the rear cover should have a small air gap from the surface behind it. This will enhance cooling and save energy.
- Set the thermostat from a higher to lower setting whenever possible, depending on how full the appliance is or what the ambient temperature is.
- Make sure the underside of the unit is kept clear of leaves, debris or anything that can impede air flow.
- Keep the unit out of direct sunlight.
- Periodically check that the refrigerator seals well and none of the contents prevent the door or drawer from closing.

Important

WARNING!

To reduce the risk of fire, electrical shock, or injury when using your appliance, follow these basic precautions:

- Read all instructions before using the appliance.
- The appliance must be correctly connected to the power supply.
- If any food has a strange smell or color, throw it away because it is very likely that it has spoiled and may be dangerous to eat.
- Disconnect the appliance from the power supply before repairing and cleaning it (only a qualified technician should repair it).
- Do not let children play with this or any other appliance to reduce likelihood of injury.
- Never stand on top or inside of this appliance, or on any drawers.

Disposing of the Worn Out Appliance

- When your appliance finally wears out, dispose of it.
- Before you dispose of your old refrigerator or freezer: Take the door or the drawers off so that children may not easily climb inside.
- The refrigerating system of the appliance is filled with refrigerant and insulating substances which should be separately recycled. Either have a licensed appliance repair company or dealer remove the appliance or call your local recycling office for the appropriate disposal.
- For the sake of environmental protection be careful not to damage the rear wall of the appliance (the condenser unit or the tubes when moving the refrigerator) or any part of the refrigerating system inside the appliance.
- This refrigerator is 100% CFC-Free, but the coolant is under pressure and puncturing the sealed system could be dangerous.
- Many older refrigerators may contain refrigerants that are harmful to the environment, and should be lawfully recycled by a licensed company.

Placing and Installation

Choosing the Right Place

Place the appliance in a dry and regularly ventilated place. Allowed ambient temperature depends on the model (class) of the appliance and is stated on the rating plate of the appliance. This refrigerator is class N (outdoor or indoor use).

Class	Ambient Temperature
SN (sub-normal)	from + 56°F to + 90°F
N (normal)(outdoor)	from + 45°F to + 100°F
ST (sub-tropical)	from + 64°F to +100°F
T (tropical)	from + 64°F to +120°F

The appliance may be exposed to lower or higher temperatures but only for a short period of time and the temperature should never be lower than 45°F. Never place the appliance near heat emitting devices (e.g. cooker, radiator, water heater or similar devices) and do not expose it to direct sunlight.

Connection to Power Supply

Connect this appliance to a 3 prong power supply socket outlet (which has a ground terminal). If you only have a two prong outlet have it replaced by a qualified technician with an outlet that meets the local codes.

“DO NOT USE AN EXTENSION CORD.”

Required nominal voltage and frequency are indicated on the rating plate.

The connection to the power supply and grounding has to be made according to current standards and regulations. The appliance resists temporary voltage tolerance from -15 to 10%. A GFCI (ground fault circuit interrupter) is built into every line cord. **Do not defeat or bypass this important safety feature.**

The line cord supplied with this refrigerator is specially designed for outdoor use. Use only a factory supplied replacement cord with a GFCI in the event the cord becomes damaged.

You may purchase these cords from either our sales or service department at 718-893-3900 (sales) or 718-328-8700 (service).

Operation Control

The refrigerator is controlled with a thermostat knob located in the upper right hand corner of your refrigerator.

The drawer refrigerator is controlled by the thermostat knob located at the right side of the top drawer (it can be seen when the drawer is opened or removed).

Turn the knob clockwise from the STOP (0) position toward 7 and backwards.

Temperature Selection

- The settings of the temperature control are from 0 (off) to 7 (max). Initially adjust the temperature control setting to 4 (norm), then adjust the thermostat to colder or warmer (as needed).
- A higher setting on the knob (towards 7) means colder temperatures in all compartments of the appliance. On the highest setting, parts of the refrigerator may become extremely cold, especially in cooler or dry weather. Use the higher thermostat setting only when required or recommended.
- The coolness of the refrigerator depends on how often you open and close the door or drawer.
- To turn the refrigerator off you must turn the thermostat to 0 (off).

Use

Storing Fresh Foods

- Foods to be stored in the refrigerator should be properly packed to prevent moisture and odors from mixing. Use in polyethylene bags or sheet, aluminum foil, wax paper, covered containers or bottles.
- **Never store any flammable, volatile or explosive substances.**
- An unpleasant odor inside the refrigerator is a sign that something is wrong with the food or that your refrigerator needs cleaning. Odors may be eliminated or reduced by washing the interior of the refrigerator with a mild solution of water and vinegar. We also recommend using activated carbon filters or baking soda to clean the air or to neutralize odors.
- If you plan on taking a long trip make sure you remove all perishable food before you leave to prevent any odors.
- The interior of the drawer refrigerator is stainless steel and some cleaners are not suitable for stainless steel so read the label of any cleanser before using. Do not use abrasive or mildly abrasive cleaners.
- Many stores sell special stainless steel cleaners which are recommended for the exterior surfaces of these units.

Maintenance and Cleaning

Automatic Defrosting of the Refrigerator

There is usually no need to defrost the refrigerator, because the ice deposited on the inner back wall is automatically defrosted. Ice deposits on the inner back wall during compressor operation; later on, when the compressor is not operating, the ice defrosts and water drains through the outlet in the inner back wall into the drain pan situated above the compressor where it evaporates. If you see water building up in the rear of the unit, check that the drain trough is not clogged. Use a pipe cleaner or a piece of flexible wire. During extremely hot and humid weather some ice may build up. If necessary, remove contents of the refrigerator, turn the thermostat to 0 and allow defrosting. A hair dryer may facilitate the process.

Cleaning the Appliance

Disconnect the power supply before cleaning the appliance. Do not use coarse or abrasive cleaning agents as you can damage the surface.

- Clean the **exterior** with water and a mild detergent. You may use stainless steel cleaners for cleaning the exterior of the appliance
- Remove the detachable drawers; clean them with water and a mild liquid detergent. Wash the interior of the appliance with lukewarm water, mix one or two spoonfuls of vinegar.
- Attach the drawers once air dried.
- Every now and then wipe the rear wall and bottom of the refrigerator. Use a soft non-metal brush or vacuum cleaner.
- Wash the interior of the appliance with lukewarm water, in which you add one or two spoonfuls of vinegar.

Removal/Replacing of the Drawers on the SP6DSSTB

To remove the drawers from the refrigerator these directions need to be followed:

- Pull the drawer out towards you completely.
- On both sides of the drawer there are hinges.
- On each hinge there is a black lever.
- The left lever should be pulled up.
- The right lever should be pulled down.
- Both levers should be pulled at the same time while continuing to pull out the drawer.

To reinstall the drawers on the appliance:

- Just simply line up the hinges on the drawer and the hinges on the appliance and gently push the drawer in.
- Once lined up close the drawer completely then open again to make sure the drawer is on track.

Noise

Modern refrigerators rely on energy efficient high speed compressors. Cooling is accomplished through a system where the compressor cycles on and off pressurizing the refrigerant. This system will produce certain noises which you may not be used to. How noisy the appliance is depends on where it is placed, how it's used and how old the appliance is.

- During the operation of the compressor, a liquid noise is heard and when the compressor is not operating a refrigerant flow is heard. This is a normal condition and it has no influence whatsoever on the lifetime of the appliance.
- After starting the new appliance, the operation of the compressor and the refrigerant flow may be noticeable this does not mean something is wrong with the appliance. The noise will reduce gradually, over time and will not affect the lifetime of the appliance.
- Many complaints of excessive noise are traced to improper placement or leveling of the refrigerator. This noise is often a consequence of poor installation. To avoid this noise make sure the appliance is placed and leveled firmly on a solid base. Make sure the appliance is not touching the wall or kitchen units standing next to it in a way that vibrations can occur. And always make sure you check the accessories in the interior of the appliance; they should be placed correctly in their positions. Check the bottles, tins and other vessels that might touch each other and rattle.
- Summit Outdoor refrigerators contains a rear fan which runs only when the compressor is on, and some models have an internal air circulation fan which runs continuously. A small fan hum (similar to a computer fan) is normal.

Before Calling for Service:

- Check the plug, fuse and/or circuit breaker.
- Test the outlet with a lamp
- Make certain that the outlet used is not controlled by a wall switch. This is more common in outdoor kitchens.
- Be sure the control is not set to **0 (OFF)**.
- Check that the GFCI switch on the line cord is on. If necessary press the reset button.
- Read the manual, especially the items under the Use and Care sections. You may find the answer to your questions.
- If you don't find the answer to your questions in this manual, find the unit model number (on the upper back of the refrigerator) and contact our Customer Service department.
 - * Call Summit Appliance customer service department at 718-328-8700.

**Specifications are Subject to Change Without
Notice.**

Instructions for Use