



**30" WINE/BEVERAGE CENTER**

**Model: SWC3066**

**SCR3067**

**SIDE-BY-SIDE 2-ZONE WINE & BEVERAGE COOLER**

*Owner's Manual*

**BEFORE USE, PLEASE READ AND FOLLOW  
ALL SAFETY RULES AND OPERATING INSTRUCTIONS**

Write the Serial Number here

\_\_\_\_\_

**Felix Storch, Inc.  
Summit Appliance Division  
770 Garrison Avenue  
Bronx, NY 10474  
[www.summitappliance.com](http://www.summitappliance.com)**

# IMPORTANT SAFETY INSTRUCTIONS

**⚡WARNING⚡** To reduce the risk of fire, electrical shock or injury when using your appliance, follow these basic precautions

- Read all instructions before using the wine cooler .
- Plug into a grounded 3-prong outlet. Do not remove grounding prong, do not use an adapter, and do not use an extension cord.
- It is recommended that a separate circuit, serving only your wine cooler, be provided. Use receptacles that cannot be turned off by a switch or pull chain.
- Never clean wine cooler parts with flammable fluids. These fumes can create a fire hazard or explosion.
- Before proceeding with cleaning and maintenance operations, make sure the power line of the unit is disconnected.
- Do not connect or disconnect the electric plug when your hands are wet.
- Unplug the wine cooler or disconnect the power before cleaning or servicing. Failure to do so can result in electrical shock or death.
- Do not attempt to repair or replace any part of your appliance unless it is specifically recommended in this manual. All other servicing should be referred to a qualified technician.
- Do not store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- Use two or more people to move and install the wine cooler. Failure to do so can result in back or other injury.
- To ensure proper ventilation for your appliance, the front of the unit must be completely unobstructed. Choose a well-ventilated area with temperatures above 61°F (16°C) and below 95°F (35°C). This unit must be installed in an area protected from the elements, such as wind, rain, water spray or drips.
- The wine cooler should not be located next to ovens, grills or other sources of high heat.
- The wine cooler must be installed with all electrical connections in accordance with state and local codes. A standard electrical supply (115V AC only, 60 Hz), properly grounded in accordance with the National Electrical Code and local codes and ordinances, is required.
- Do not kink or pinch the power supply cord of the appliance.
- The fuse (or circuit breaker) size should be 15 amps.
- It is important for the wine cooler to be leveled in order to work properly. You may need to make several adjustments to level it.
- Although the unit has been tested at the factory, due to transit and storage, you should clean the appliance before use.
- Do not use solvent-based cleaning agents or abrasives on the interior. These cleaners may damage or discolor the interior.
- Do not use this apparatus for other than residential purposes.

**DANGER!** *Risk of child entrapment*

Child entrapment and suffocation are not problems of the past. Junked or abandoned appliances are still dangerous, even if they will “just sit in the garage a few days”.

- **Before you throw away your old wine cooler or any appliance:** Remove the door. Leave the shelves in place so that children may not easily climb inside.
- Never allow children to operate, play with, or crawl inside the appliance.

**- SAVE THESE INSTRUCTIONS -**

---

**INSTALLATION INSTRUCTIONS**

**Before Using Your Wine Cooler**

- Remove the exterior and interior packing.
- Before connecting the Wine Cooler to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.
- Install the handle on the left side of the door.

**Installation of Your Wine Cooler**

- This appliance is designed for free standing or built-in (full recessed) installation.
- Place your Wine Cooler on a floor that is strong enough to support it when it is fully loaded. To level your Wine Cooler, adjust the front leveling legs at the bottom of the Wine Cooler .
- Locate the Wine Cooler away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extremely cold ambient temperatures may also cause the unit not to perform properly.
- Avoid locating the unit in moist areas.
- Plug the Wine Cooler into an exclusive, properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified or an authorized products service center.
- [Two handles be attached inside item. You just need to take out handles and install on the door of the two screws, we fixed before shipment.](#)

**Defrosting**

While it is running, the Wine Cooler defrosts itself every 8 hours. The defrosting process lasts about 30 minutes. The melt water collects in the evaporator drip tray where it evaporates automatically. During the process of defrosting, the displayed temperature may be higher than the set temperature.

NOTE: You may notice condensation on the outer surface of the glass door. This occurs when water vapor from the air contacts the cold surface of the door and the vapor condenses on the glass, causing a fogging effect. In extreme situations, water can even drip off the door, indicating excessive humidity in the environment.

---

## OPERATING YOUR WINE COOLER

Recommended temperatures for chilling wine:


Red Wines:	15 - 18°C (59 - 64.4°F)
Dry /White Wines	9 - 14°C (48.2 - 57.2°F)
Sparkling Wine	5 - 8°C (41 - 46.4°F)

These temperatures may vary slightly depending on whether or not the interior light is ON or OFF, and whether the bottles are located on the upper/middle or lower section.

**Note: Control panels are separated. Each zone can be set separately, but using method is the same, details illustration as follows:**

### The Controls of Your Wine Cooler

The Wine Cooler should be placed where the ambient temperature is between 16 - 35°C (61 - 95°F). If the ambient temperature is above or below this range, the performance of the unit may be affected. For example, placing your unit in extremely cold or hot conditions may cause interior temperatures to fluctuate.

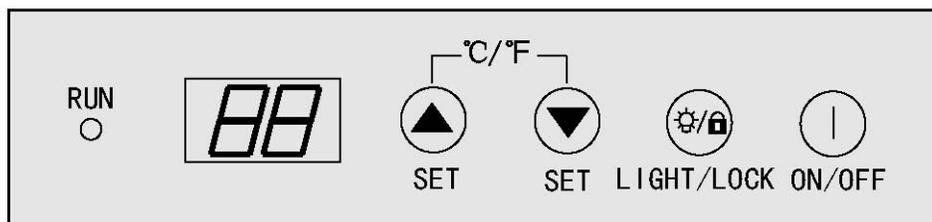

#### ① ON/OFF Power

To turn the appliance on or off, press the ON/OFF button for 3 seconds.

#### ⏴ ⏵ Setting the temperature Control

-Each cooling compartment of the Wine Cabinet (upper and lower) is independently controlled. To set the temperature:

Connect the power cord to a properly grounded outlet. In the event of a power interruption, all previous temperature settings are automatically erased and each compartment will default to a preset temperature setting of : 12°C for the compartment.

-Set the desired cooling temperature by pressing the corresponding buttons ⏴ or ⏵ for “set upper or set lower” program. Each depression of the buttons will scroll through the available temperature settings (for each compartment) in reduction or go up 1 degree. The temperature selected will flash

in the LED display for approximately 5 seconds, then revert back to display the temperature of the internal cabinet.

**The compartment :**

The temperature setting can be adjusted from 5°C to 20°C.

-To view the “set” temperature (anytime) press one time, the “set” temperature will temporarily “flash” in the LED display for 5 seconds.

-This unit has the option to display temperatures in either Celsius or Fahrenheit. To change the setting, press and hold both buttons (Set Upper/Set Lower) simultaneously for approximately 3 seconds,



Indicator light illuminates to signify the cooling mode is currently in operation.



You can turn the interior light ON or OFF by pushing the button marked with the “bulb” symbol. The light will be turned off automatically if it remains ON for 10 minutes. You have to push the button marked with the “bulb” symbol again and the light will turn back on. For best storage of wine, keep the light off except when viewing.



Press "LIGHT/LOCK" button for 3 seconds, the control panel will lock and can not operate anymore until press the button again, it will rework.

Also press "▲" and "▼" buttons for 3 seconds, you can achieve "Celsius " and " Fahrenheit " temperature transforming.

**NOTES:**

- If the unit is unplugged, turned off or if there is a power failure, you must wait 3 to 5 minutes before restarting the unit. If you attempt to restart before this time delay, the Wine Cooler will not work.
- When you use the Wine Cooler for the first time, or restart the Wine Cooler after it's been shut off for a long time, there could be a few degrees difference between the temperature you select and the one indicated on the LED readout. This is normal and is due to the length of the inactivation time. Once the Wine Cooler has been running for a few hours, everything should be back to normal.

## **CARE AND MAINTENANCE**

### **Cleaning Your Wine Cooler**

1. Turn off the power, unplug the appliance, and remove all items including shelves and racks.
2. Wash the inside surfaces with a warm water and baking soda solution. The solution should consist of about 2 tablespoons of baking soda to a quart of water.
3. Wash the shelves with a mild detergent solution.
4. Wring excess water out of the sponge or cloth when cleaning the area of the controls, or any electrical parts.
5. Wash the exterior of the cooler with a warm solution of mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.

### **Defrosting**

Defrosting of the inside the Wine Cooler occurs automatically during operation. Approximately every 8 hours, the compressor will stop running for about 30 minutes. During defrosting the temperature will be higher than you set. The defrost water is collected by the evaporating tray above the compressor and evaporates automatically.

### **Power Failure**

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If your power is going to be off for a longer period of time, you need to take the proper steps to protect your contents.

### **Vacation Time**

Leave the Wine Cooler operating during vacations of less than three weeks. If you turn off the Wine Cooler for extended periods, leave the door slightly ajar to prevent odor building up inside the appliance.

### **Transporting Your Wine Cooler**

If you need to move your Wine Cooler once the box has been discarded:

1. Securely tape down all loose items (shelves) inside your appliance.
2. Turn the adjustable legs up to the base to avoid damage.
3. Tape the door shut.
4. Be sure the appliance stays secure in the upright position during transportation. Also protect the outside of the appliance with a blanket or similar item.

### **Energy Saving Tip**

The Wine Cooler should be located in the coolest area of the room, away from heat-producing appliances and out of direct sunlight.

## PROBLEMS WITH YOUR WINE COOLER

You can solve many common Wine Cooler problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

### TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Wine Cooler does not operate.	Not plugged in. The appliance is turned off. Circuit breaker has tripped or a fuse has blown.
Wine Cooler is not cold enough.	Check the temperature control setting. External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly.
Turns on and off frequently.	The room temperature is hotter than normal. A large amount of contents has been added to the Wine Cooler. The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly.
The light does not work.	Not plugged in. Circuit breaker has tripped or a fuse has blown. The bulb has burned out. The light button is "OFF".
Vibrations	Check to assure that the Wine Cooler is level.
The Wine Cooler seems to make too much noise.	Some noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your Wine Cooler. Contraction and expansion of the inside walls may cause popping and crackling noises. The Wine Cooler is not level.
The door will not close properly.	The Wine Cooler is not level. The door was reversed and not properly re-installed. The gasket is dirty. The shelves are out of position.

*NOTE: This appliance is intended to be used exclusively for the storage of wine.*

# LIMITED WARRANTY

## ONE-YEAR LIMITED WARRANTY

Within the 48 contiguous United States, for one year from the date of purchase, when this appliance is operated and maintained according to instructions attached to or furnished with the product, warrantor will pay for factory-specified parts and repair labor to correct defects in materials or workmanship. Service must be provided by a designated service company. Outside the 48 states, all parts are warranted for one year from manufacturing defects. Plastic parts, shelves and cabinets are warranted to be manufactured to commercially acceptable standards, and are not covered from damage during handling or breakage.

## 5-YEARS COMPRESSOR WARRANTY

1. The compressor is covered for 5 years.
2. Replacement does not include labor.

### **ITEMS WARRANTOR WILL NOT PAY FOR:**

1. Service calls to correct the installation of your appliance, to instruct you how to use your appliance, to replace or repair fuses or to correct wiring or plumbing.
2. Service calls to repair or replace appliance light bulbs or broken shelves. Consumable parts (such as filters) are excluded from warranty coverage.
3. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by warrantor.
4. Replacement parts or repair labor costs for units operated outside the United States.
5. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
6. Expenses for travel and transportation for product service in remote locations.
7. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.

## DISCLAIMER OF IMPLIED WARRANTIES - LIMITATION OF REMEDIES

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR. WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

**FELIX STORCH, INC.**  
**770 Garrison Avenue**  
**Bronx, NY 10474**  
**Phone: (718) 893-3900**  
**Fax: (718) 842-3093**  
**[www.summitappliance.com](http://www.summitappliance.com)**

The logo for Summit Appliance, featuring the word "SUMMIT" in a bold, blocky, sans-serif font. The letters are black and have a slight shadow effect, giving them a three-dimensional appearance. The letters are arranged in a slightly staggered, upward-sloping pattern from left to right.

For parts and accessory ordering,  
troubleshooting and helpful hints, visit:  
**[www.summitappliance.com/support](http://www.summitappliance.com/support)**

Printed in China