 



Faceplate must be used with supplied gasket and screws, mounted onto a smooth flat surface, and installed with any IndustrialNet connectors or couplers to achieve an IP67 rating.

While holding Bulkhead in place, secure with Nut on back side of faceplate. Be careful not to tighten to the point the Bulkhead Seal is over compressed and displaced from the faceplate and the Bulkhead.

Note: If using wrench, flats on nut should be on outside. Hand turn Nut 4-1/4 to 5 full turns.



IAEFP1

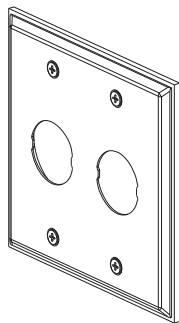

IAEFP2-2G

