

## IntraVUE™ Edge

IntraVUE™ Edge is a permanent Industrial Network Documentation and Monitoring Solution. By simply connecting the device to the network that needs to be scanned, IntraVUE™ Edge is capable of continuously monitoring the status of all devices and switches within the network. It is physically hardened with a fan-less design and has been designed for compliance with the Center for Internet Security (CIS) benchmarks.



<b>Key Features</b>	<b>Benefits</b>
<b>Perpetual Use License</b>	With no subscriptions or contracts, IntraVUE will run perpetually, offering long term insights into Network functionality, performance, and utilization statistics.
<b>Easy to Deploy</b>	No virtual machine or server commissioning required. IntraVUE™ Edge simply requires IP configuration on the client network.
<b>Device Discovery and Identification</b>	All devices and switches connected and within the scanning parameters will be discovered and identified by IP address, MAC address, Vendor, and other parameters depending on its primary protocol.
<b>Switch Identification</b>	All switches connected and within the scanning parameters will be discovered and polled for topology information based upon SNMPv1, v2 or v3 protocols.
<b>Connection Map and Plant Layout</b>	All Devices and switches will be displayed within a connection map as discovered, depending upon the logical system configuration and parameters provided by the client.
<b>Access into the Isolated Networks</b>	The appliance has two copper network ports, both of which can be configured to be scanning separate networks. With proper placement, the appliance can scan both the production network, and isolated networks behind the PLC backplane
<b>Active Monitoring and Alerts</b>	The devices on the network will be constantly monitored, letting the user know of any changes in their network. With configuration, any disconnection or reconnection events can be sent as email alerts.
<b>Hardened for Security</b>	IntraVUE™ Edge implements security based on the CIS benchmarks for Debian Linux, Chrome, Firefox, Edge, and Internet Explorer 11. It also supports https and can be configured for users to log into using active directory.

<b>Technical Information</b>	
<b>Dimensions:</b>	4.33 x 4.57 x 1.93 in.
<b>Mounting Information:</b>	Includes accessories to support shelf mount, VESA Mount, Wall Mount, and DIN Rail Mount
<b>Packaged Accessories:</b>	12V 3 AMP Converter with American and European Power Cord, USB flash drive loaded with configuration support, CAT 6A UTP patch cable, printed Getting Started guide

## Ordering Information

Part Number	Description
PNPIV	IntraVUE™ Edge permanently licensed appliance


## Simple Setup

1. Plug appliance into desired network, connect to power, and power on
2. Connect laptop to the network and run configuration software on the included USB flash drive
3. Assign IP address using configuration software
4. Open IntraVUE and begin scanning the network



## Plant Layout and Supervisor Features

### Plant Layout

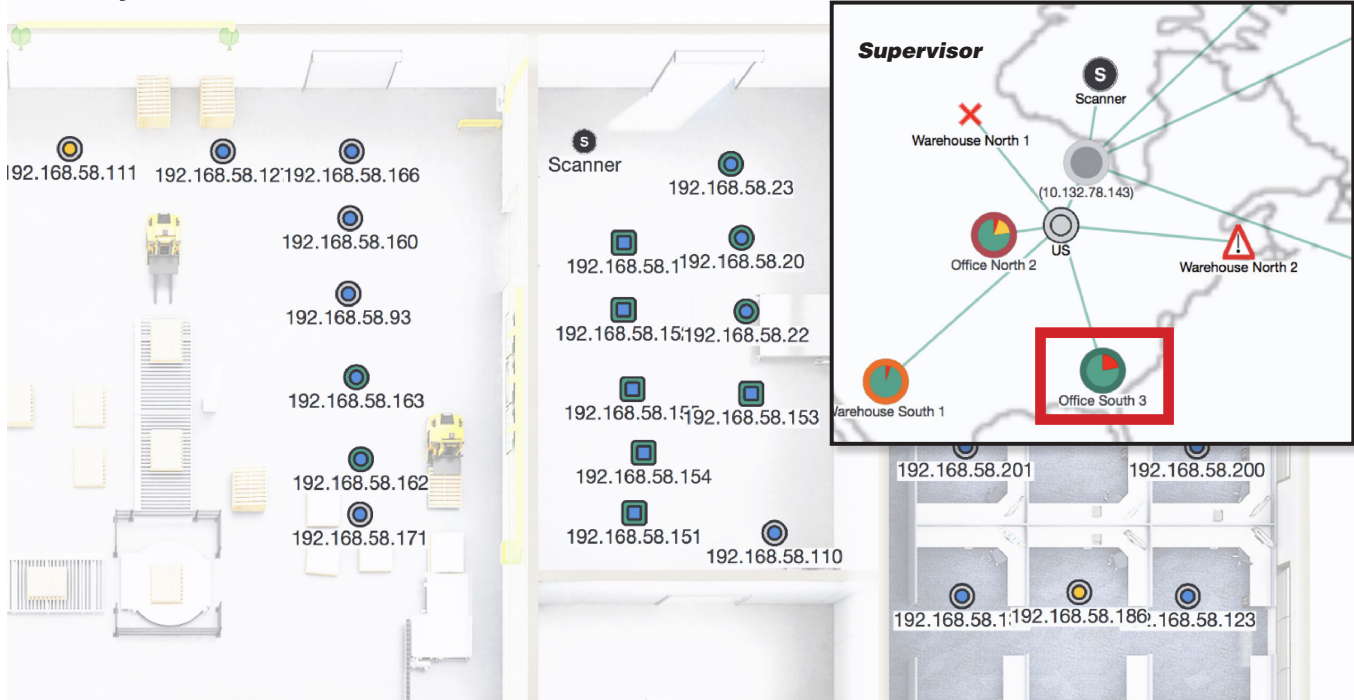

IntraVUE™ Edge provides an enterprise-wide solution to industrial device monitoring and documentation.

### WORLDWIDE SUBSIDIARIES AND SALES OFFICES

PANDUIT US/CANADA  
Phone: 800.777.3300

PANDUIT EUROPE LTD.  
London, UK  
Phone: 44.20.8601.7200

PANDUIT SINGAPORE PTE. LTD.  
Republic of Singapore  
Phone: 65.6305.7575

PANDUIT JAPAN  
Tokyo, Japan  
Phone: 81.3.6863.6000

PANDUIT LATIN AMERICA  
Guadalajara, Mexico  
Phone: 52.33.3777.6000

PANDUIT AUSTRALIA PTY. LTD.  
Victoria, Australia  
Phone: 61.3.9794.9020

For a copy of Panduit product warranties, log on to [www.panduit.com/warranty](http://www.panduit.com/warranty)

For more information

Visit us at [www.panduit.com](http://www.panduit.com)

Contact Customer Service by email: [cs@panduit.com](mailto:cs@panduit.com)  
or by phone: 800.777.3300

