

SensaGuard™ 18 mm Plastic Barrel Installation Instructions



Certifications



Tested To Comply
with FCC Standards



IMPORTANT:
SAVE THESE INSTRUCTIONS FOR FUTURE USE

Note: Refer to Technical Specifications for Certification information and ratings.

2 SensaGuard™ 18 mm Plastic Barrel Installation Instructions

ENGLISH:	This instruction sheet is available in multiple languages at www.rockwellautomation.com/literature . Select publication language and type "SensaGuard" in the search field.
GERMAN:	Dieses Instruktionsblatt kann in mehreren Sprachen unter www.rockwellautomation.com/literature gelesen werden. Bitte Ihre Sprache anwählen und "SensaGuard" im Suchfeld eintippen.
FRENCH:	Ces instructions sont disponibles dans différentes langues à l'adresse suivante www.rockwellautomation.com/literature . Sélectionner la langue puis taper "SensaGuard" dans le champ de recherche.
ITALIAN:	La presente scheda d'istruzione è disponibile in varie lingue sul sito www.rockwellautomation.com/literature . Selezionare la lingua desiderata e digitare "SensaGuard" nel campo di ricerca.
SPANISH:	Puede encontrar esta hoja de instrucciones en varios idiomas en www.rockwellautomation.com/literature . Seleccione el idioma de publicación y escriba "SensaGuard" en el campo de búsqueda.
PORTUGUESE:	Esta folha de instruções está disponível em várias línguas em www.rockwellautomation.com/literature . Selecione a língua de publicação e entre com "SensaGuard" no espaço de busca.
POLISH:	Ta kartka z instrukcjami jest dostępna w wielu językach na stronie: www.rockwellautomation.com/literature . Wybierz język publikacji i wpisz w polu poszukiwania "SensaGuard".

Table of Contents

Installation Instructions	3
Warnings	3
Technical Specification	3
Operating Characteristics	3
Outputs (internally fused)	3
Environmental	3
Protection	4
Dimensions	4
Mode of Operation	4
Status Indicators	4
Mounting Information	4
Nut Torque Specification	4
Minimum Distance Between Sensors	5
Misalignment Curve	5
Wiring Diagram	5
Recommended Mating Cable	5
Diagnostics	5
Troubleshooting	6
Application Wiring Examples	8
List of Recommended Relays	12
Maintenance	12
Repair	12
Declaration of Conformity	12

Installation Instructions

Installation must be in accordance with the following steps and stated specifications and should be carried out by suitable competent personnel. The unit is not to be used as a mechanical stop. Guard stops and guides must be fitted. Adherence to the recommended maintenance instructions forms part of the warranty.

This device is intended to be part of the safety related control system of a machine. Before installation, a risk assessment should be performed to determine whether the specifications of this device are suitable for all foreseeable operational and environmental characteristics of the machine to which it is to be fitted. Refer to Technical Specifications for Certification information and ratings.

ATTENTION:



The presence of spare actuators compromise the integrity of the safety systems. Personal injury or death, property damage or economic loss can result. Appropriate management controls, working procedures and alternative protective measures should be introduced to control their use and availability.

WARNING:



Do not defeat, tamper, remove or bypass this unit. Severe injury to personnel could result. The sensor **MUST** be connected to a Class 2 SELV 24V DC, +10% / -15% power supply.

Technical Specification

Safety Ratings	CAT4/SIL3
Safety Certifications	TÜV, CE
Safety Standards	IEC60947-5-3, IEC61508, EN954
Certifications	cULus
Standards	UL 508
PFFHd	1.119 - 10 ⁻⁹

Operating Characteristics

Sensing Distance (Actuator)	18 mm	30 mm
Assured Make (mm)	15	25
Typical misalignment	(±7 mm in both axes)	
Maximum output current (all outputs, mA)	200	
Input Current	50 mA (no load supply current)	
Operational Current, Min.	≤ 1 mA DC	
Off-state Current	< 0.5 mA DC	
Maximum # of switches, connected in series	Unlimited. See unit response time section	
Operating Voltage	24V DC +10% / -15%	
	Class 2 SELV power supply	
Frequency of operating cycle	1 Hz	
Response Time (Off)	54 ms	
Case Material	Valox® DR 48	
Actuator Material	Valox® DR 48	

Outputs (Guard door closed, Actuator in place)

Outputs	Description	Status
Safety	2 x PNP, 0.2 A max.	ON (+24vdc)
Auxiliary	1 x PNP, 0.2 A max.	OFF (0vdc)

Environmental


Operating Temperature	-10...+55°C (+14...+131°F)
Operating Humidity	5% -95% relative
Washdown rating	NEMA 3, 4X, 12, 13, IP 69K
Shock & Vibration	IEC68-2-27 30 g, 11 ms/IEC 68-2-6 10...55Hz
Radio Frequency	IEC 61000-4-3 IEC 61000-4-6

4 SensaGuard™ 18 mm Plastic Barrel Installation Instructions

Protection

Short-Circuit Protection	Incorporated
Current limitation	Incorporated
Overload Protection	Incorporated
False Pulse Protection	Incorporated
Transient Noise Protection	Incorporated
Reverse Polarity Protection	Incorporated
Overvoltage protection	Incorporated
Thermal shutdown/restart	Incorporated
Electrical Life	10 x 10 ⁶

Dimensions - mm (inches)

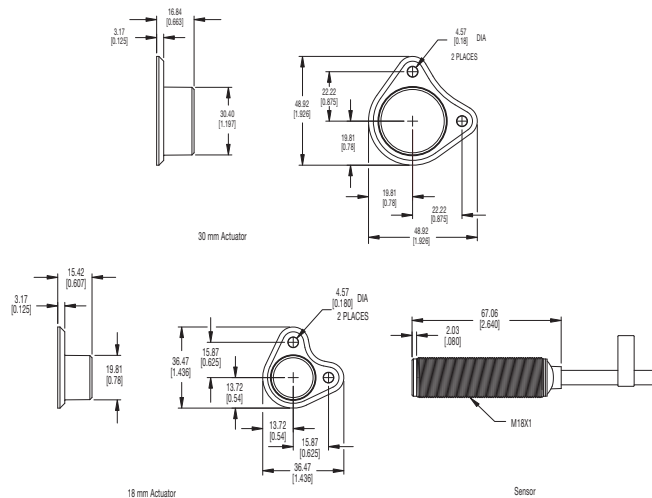

Mode of Operation

Status indicators:

- "Power/Fault" LED illuminates Green - *The unit is ready for operation.*
- "Power/Fault" LED illuminates Red: - *Door/Guard open. The unit is not ready for operation.*
- "Power/Fault" LED illuminates flashes Red or Green: - *Unit failure. See Diagnostic section below.*

Mounting Information

Use non-removable screws, bolts, or nuts to mount the switch and actuator. Do not over torque the mounting hardware.


Position the switch and actuator so they are aligned with each other.

Mount the switch and actuator to removable guard, door or gate. Keep the switch and actuator within the sensing range below.



Nut Torque Specification

Plastic Barrel Switch: 2.26 N•M (20 in•lbs)

Plastic Actuators: 2.26 N•M (20 in•lbs)

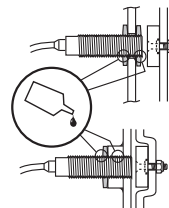


Minimum Distance Between Sensors

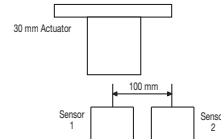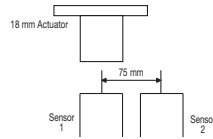


Misalignment Curve

18 mm Unit with 18 mm Target

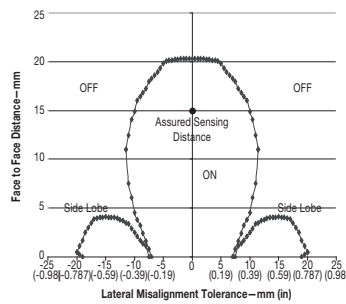

Note: There must be a minimum spacing of 4 mm (0.157 in) if actuator and sensor face approaches laterally. This will prevent false triggering due to the side lobe areas.


18 mm Unit with 30 mm Target

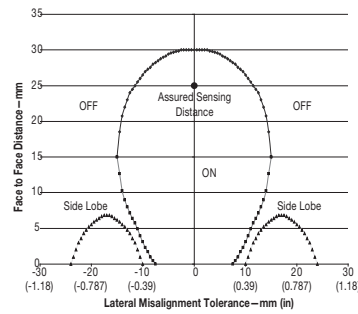

Note: There must be a minimum spacing of 7 mm (0.275 in) if actuator and sensor face approaches laterally. This will prevent false triggering due to the side lobe areas.

Wiring Diagram

Pin #	Wire Color	Signal
1	White	Aux Outputs
2	Brown	+24V
3	Green	NA
4	Yellow	OSSD 2, +24V Input
5	Grey	OSSD 1
6	Pink	OSSD 2
7	Blue	0V
8	Red	OSSD 1, +24V Input

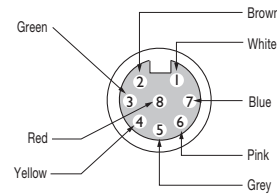

Recommended mating cable, 2 m (6.5 ft). 889D-F8AB-2. Lengths are available up to 30 m (98.4 ft)

Diagnostic

Unit Indicators (per IEC 60073)


	State	Status	Troubleshooting
Device Output LED	Off	Not Powered	NA
	Red	Not Safe, OSSD not active	NA
	Green	Safe, OSSD active	NA
	Green flash	Power up test or OSSD inputs not valid	Check 24V DC or OSSD inputs (yellow and red wire)
	Red Flash	1 Hz Flash Recoverable Fault	Recoverable fault—check OSSD outputs are not shorted to GND, 24V DC or each other. Cycle power.
		4 Hz Flash Non-recoverable Fault	

Note: Refer to Technical Specifications for Certification information and ratings.

6 SensaGuard™ 18 mm Plastic Barrel Installation Instructions


Troubleshooting

Series Circuit

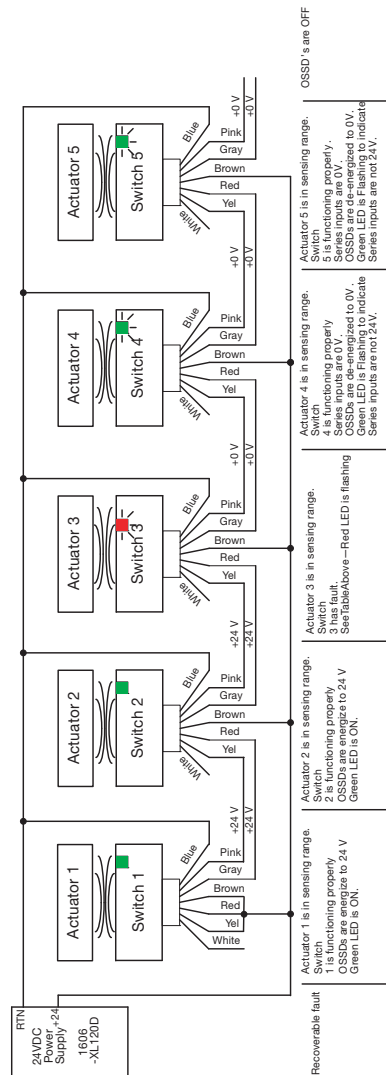

Note: Refer to Technical Specifications for Certification information and ratings.


Unit Response Time (does not include safety relay response time)

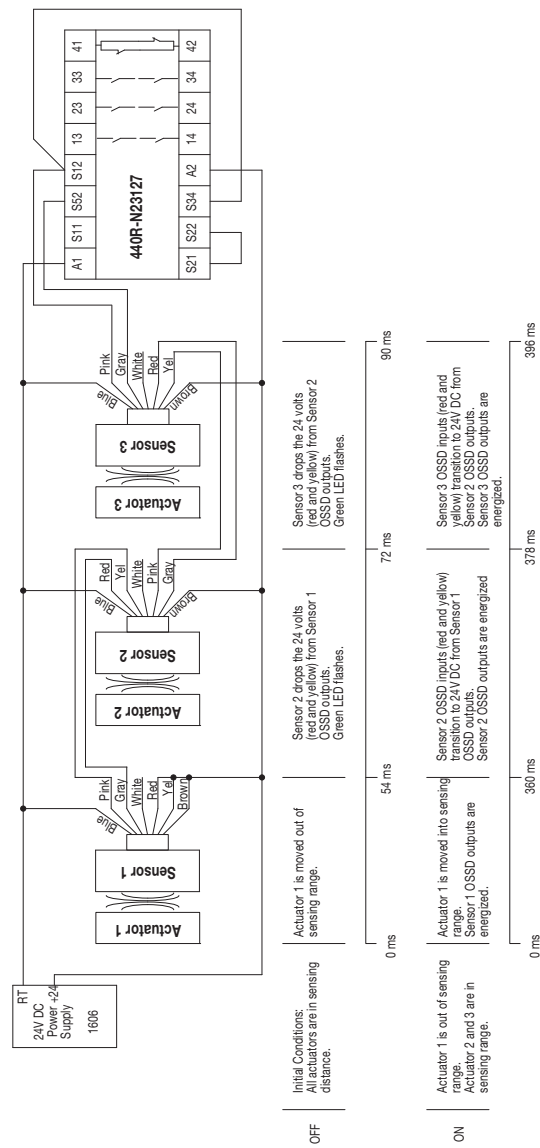

Note: Refer to Technical Specifications for Certification information and ratings.



8 SensaGuard™ 18 mm Plastic Barrel Installation Instructions

Application Wiring Examples

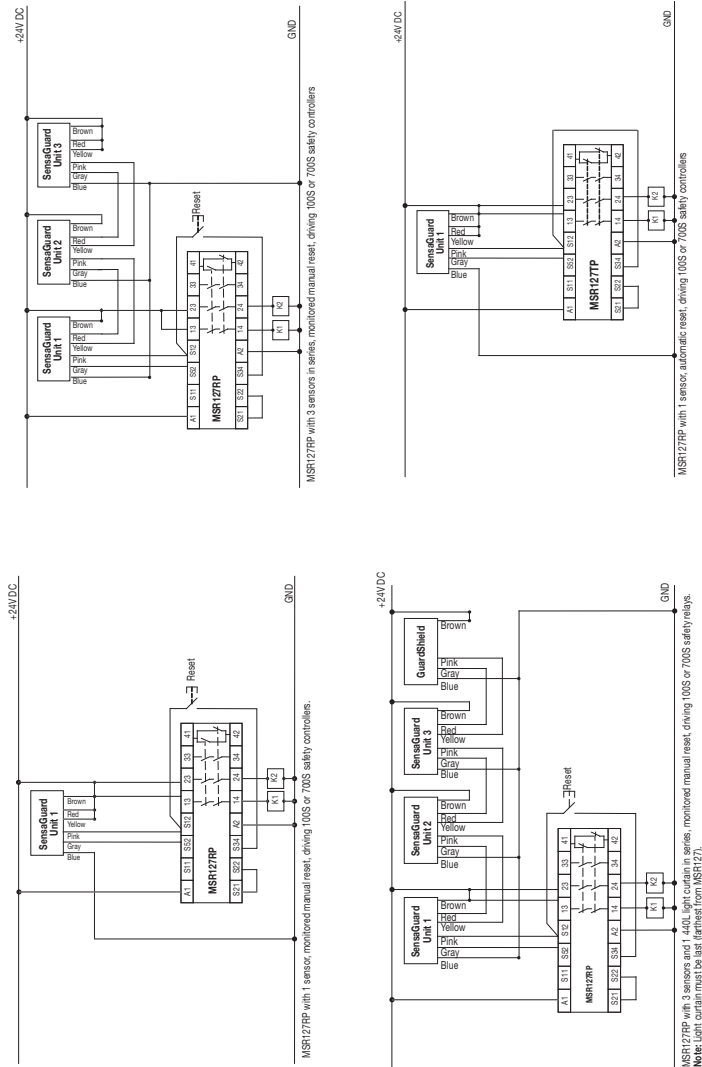

Note: Refer to Technical Specifications for Certification information and ratings.


Application Wiring Examples

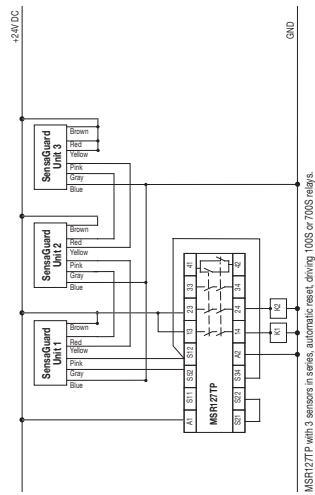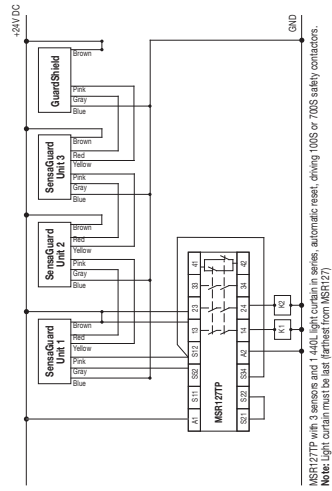


Note: Refer to Technical Specifications for Certification information and ratings.

10 SensaGuard™ 18 mm Plastic Barrel Installation Instructions

Application Wiring Examples

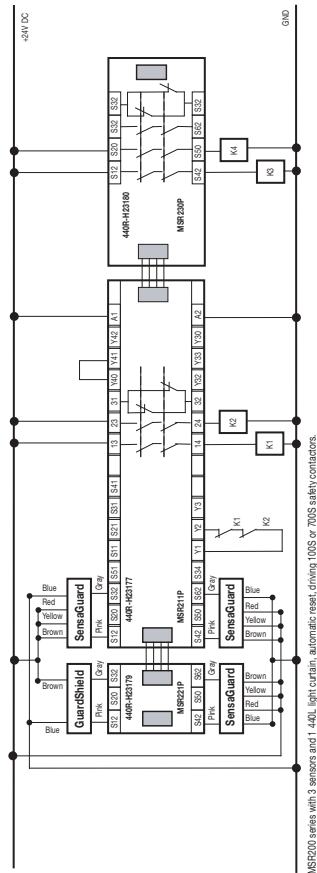


MSR200 series with 3 sensors and 1 44V light curtain, automatic reset, driving 100S or 700S safety contactors.
Note: Light curtain can be attached to any input.

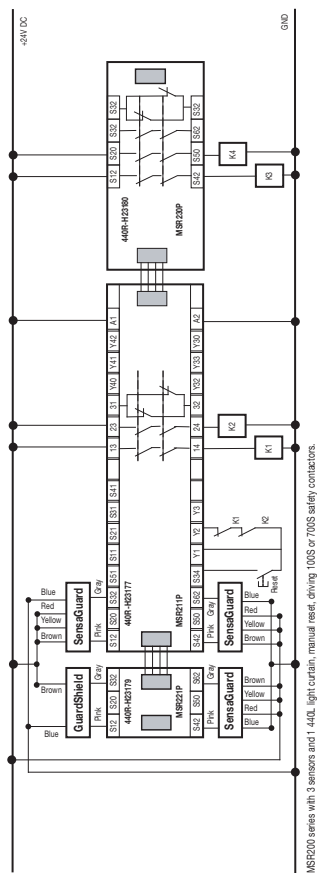

MSR200 series with 3 sensors and 1 44V light curtain, manual reset, driving 100S or 700S safety contactors.
Note: Light curtain can be attached to any input.

Note: Refer to Technical Specifications for Certification information and ratings.

Application Wiring Examples

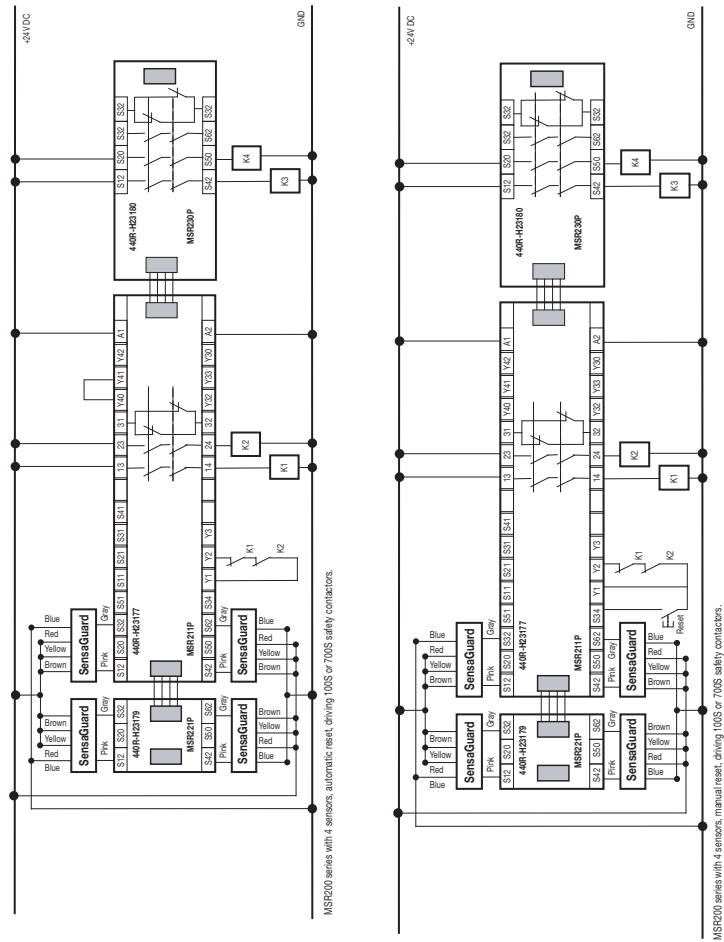


Note: Refer to Technical Specifications for Certification information and ratings.

12 SensaGuard™ 18 mm Plastic Barrel Installation Instructions

List of recommended relays

MSR126, MSR127, MSR123, MSR124, MSR131, MSR138, MSR211, MSR121, MSR320, MSR200 Family (Except MSR210), MSR300 Family, SmartGuard, 1791 DS DeviceNet™ Safety I/O.

Relay must have light curtain inputs.

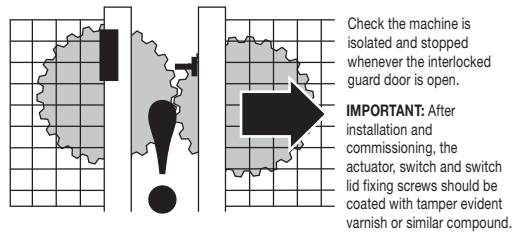

Maintenance

Every week.

Check the correct operation of the switching circuit. Also check for signs of abuse or tampering. Inspect the switch casing for damage

Repair

If there is any malfunction or damage, no attempts at repair should be made. The unit should be replaced before machine operation is allowed.

CE Declaration of Conformity

This is to declare that the products shown on this document conforms with the Essential Health and Safety Requirements (EHSR's) of the European Machinery Directive (73/23/EEC as amended by 93/68/EEC). These products also conform to EN 60947-5-3, EN 1088, EN292, EN 60204-1 and have Third Party Approval.

For a comprehensive certificate please visit: www.ab.com/safety.



Copyright © 2012 Rockwell Automation, Inc. All Rights Reserved.

Publication 75056-180, ver 03 March 2007