

CENTERPOST INSTALLATION

1. Install centerpost as shown below.
2. Carefully align gaskets with body and centerpost flanges.
3. Securely tighten all screws.
4. Carefully trim gaskets flush with flanges at locations shown below to produce a good seal with the door. The gaskets must not bulge out nor be recessed between the flanges.

NOTE: Failure to properly install or trim gaskets may cause leakage and allow water or moisture to enter the enclosure.

