Center Panel Support



A Pentair Company

Hoffman Enclosures Inc.
2100 Hoffman Way
Anoka, MN 55303–1745
(763) 422–2211 Tel
www.hoffmanonline.com

ITEM 5 ITEM 6 ITEM 7 ITEM 1 ITEM 10 ITEM 9

ITEM IO

ITEM II

0₀

ITEM 12

PARTS LIST		
Item No.	Part Name	Quantity
1	Support, Left	1
2	Support, Right	1
3	Brace	1
4	Hex Head Screw, 3/8-16x1 1/4	1
5	Spring Lockwasher, 3/8	1
6	Washer, 3/8	1
7	Hex Nut, 3/8-16	1
9	Hex Head Screw, 5/16–18x1	7
10	Spring Lockwasher, 5/16	7
11	Washer, 5/16	7
12	Nut, Special	4

INSTALLATION INSTRUCTION:

<u>Step 1.</u> Attach right support (item 2) to left support (item 1) as shown. Fasten with three screws, lockwashers, and washers (items 9,10,11).

Step 2. Attach brace (item 3) to top of support assembly as shown. Fasten with a screw, lockwasher, washer, and nut (items 4,5,6,7).

Step 3. Install four clamping nuts (item 12) in mounting channels provided in top and bottom of a two-door or two-door dual access enclosure.

Step 4. Position center panel support assembly between top and bottom mounting channels in the enclosure. Attach center panel support assembly to mounting channels as shown with four screws, lockwashers, and washers (items 9,10,11). Loosen nut (item 7) to adjust length of center panel support, if required.

Step 5. Install regular panel, swing—out panel, or relay rack angles on left side of center panel support. Slotted holes are provided in brace (item 3) and bottom of left support (item 1) to provide horizontal adjustment if required.

<u>Step 6.</u> Install regular panel, swing—out panel, or relay rack angles on right side of center panel support. Slotted holes are provided in right support (item 2) to adjust width of center panel support if required.