

## **INSTALLATION INSTRUCTION:**

- 1. Check the depth of the floor stand ("C" dimension) to verify it matches the enclosure depth dimension.
- 2. Anchor six 3/8-inch diameter studs (not provided with kit) securely in the floor as shown in Figure 1.
- 3. Drill the appropriate hole pattern in the bottom of the enclosure as shown in Figure 2.
- 4. Bolt the floor stand to the enclosure as shown in Figure 3 using the 3/8–16x.75 hex head screws (Item2), washers (Items 3 and 4), and nuts (Item 5) provided. Firmly tighten all fasteners.
- 5. Position the enclosure and attached floor stands over the anchored floor studs, extending the studs through the base holes in the floor stands.
- 6. Secure the floor stands to the anchored floor studs with 3/8 inch nuts (Item 5) and lockwashers (Items 3 and 4) or with 3/8 inch locknuts and washers (not provided with kit). Firmly tighten all fasteners.

This accessory maintains UL/CSA Type 12,4,4X when installed per these instructions.

This accessory is covered by UL file E61997 and CSA file LR42186.

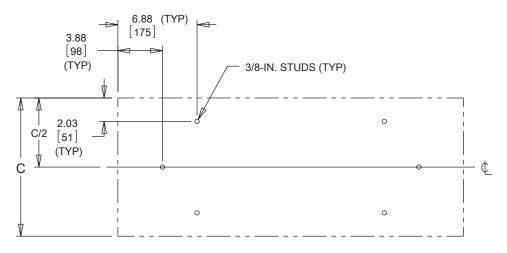


Figure 1 - Floor Stud Hole Pattern



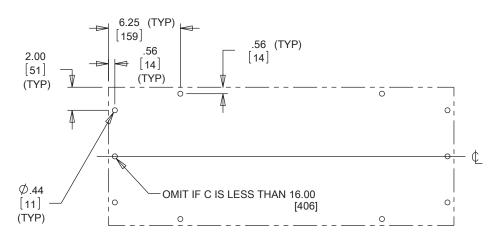


Figure 2 - Enclosure Bottom Hole Pattern

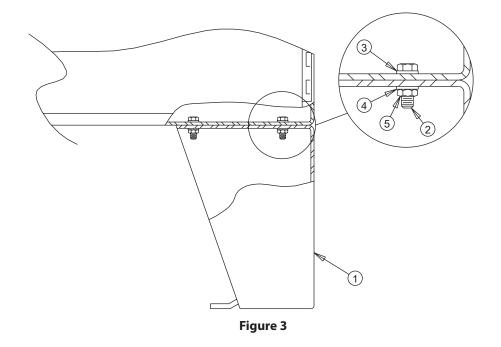

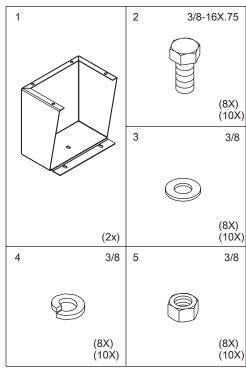

Catalog Number	Dim. C
AFK0608	8.06
AFK1208	
AFK1208SS	
AFK1808	
AFK2408	
AFK0610	10.06
AFK1210	
AFL1210SS	
AFK1810	
AFK2410	
AFK2410SS	
AFK0612	12.06
AFK1212	
AFK1212SS	
AFK1812	
AFK2412	
AFK2412SS	
AFK1216	16.06
AFK1216SS	
AFK1816	
AFK2416	
AFK1220	20.06
AFK0618	18.06
AFK1218	
AFK1218SS	
AFK1224SS	24.06

Rev. G © 2013 Pentair Equipment Protection PH 763 422 2211 • hoffmanonline.com P/N 99401629