

# TCI Screens

## Homeowner's Maintenance Guide



# TCI Screens

Authorized Dealer / Installer:



## System Features

- Screen zipper system & seams are impulse frequency Welded for superior support.
- Our screen entry guide on the side rail aligns & stabilizes our screens to perfection and with ease.
- Our heavy duty zipper system and bottom bar reduce friction, providing precision lifting and lowering capacity.
- Due to the heavy duty bottom bar there is no need to re-tension our screen after installation.
- All screens are made with reinforced corners for added strength.
- Our motor tubes are engineered to limit deflection.
- To eliminate sagging, our screen is splined directly to the motor tube.
- No visible screws in the side rails or bottom bar provides a clean & elegant appearance.
- Screen features MaestroShield® brand Tubular Motors and Electronics that have been tested for superior quality and strength.

All **MaestroShield®** motors and electronics are backed by industry leading warranties.

# TCI Screens

## Suggested Seasonal Maintenance

### Cleaning Sidetracks

Preferably use a can of compressed air to blow out any dust or debris that has formed within the track system. You may also use water and soft brush. If necessary, use a soft cloth and gentle detergent to remove any excess dirt buildup.

### Track Lubrication

After the side tracks have been cleaned, allow them to air dry if water has been utilized during the cleaning process. If water has been utilized, we recommend that you re-lubricate the side tracks using an even coat of Clear Silicon Spray. Raise and lower the screen to allow lubrication of each rail and end cap entirely.

**\*Note: DO NOT use a high powered pressure washer to clean sidetracks to avoid damaging the screen. DO NOT scrub the extruded aluminum parts as this will damage the powder coated surface.**

### Cleaning Screen

Screen mesh can be cleaned with water and a soft cloth. A mild detergent such as dish soap can be used to break away any dirt or grime. After cleaning the Screen mesh, allow it to air dry before retracting it to its complete up position.

**\*Note: We DO NOT recommend using a pressure washer or chemicals to clean the screen.**

THE REQUIRED FREQUENCY OF CLEANING AND MAINTENANCE MAY VARY DEPENDING ON THE CLIMATE THAT THE SYSTEM HAS BEEN INSTALLED IN.



## Preventive Care

### Zipper Check

Periodically check to ensure that the screen's side zipper is fully engaged inside of the track. If you notice that the zipper has escaped the side track, contact your installer immediately to avoid further damage to the

### Inclement Weather

In high wind conditions, and all other extreme inclement weather, keep your screen completely rolled in the up position.

**\*Note: Should extreme conditions arrive before you have a chance to raise your screen, allow the weather to settle or wait for a break in the storm before raising the screen to avoid non-repairable damage.**

### Avoiding Damage

To avoid screen from tearing or from exiting the track, keep small children and pets away. Avoid leaning on, or leaning any object on, any portion of the screen unit to avoid damage.

### Battery Life

Our wireless remote utilizes 2 AAA batteries. If the LED light does not illuminate when the button is pushed, the batteries may need to be replaced.

# TCI Screens