

Ligature Resistant Swinging Door System
Installation Instructions




1.
DOOR LOCATION

Locate where the LR-SW needs to be installed on the door frame or wall.

Make sure there is at least 2 1/8" width of space for the hardware to be installed properly. Height placement of the door may vary depending on the customer's needs.

2.
MOUNT FRAME

Screw pre-assembled LR-SW frame onto area with provided screws (22 sheet metal pin in Torx flathead screws).

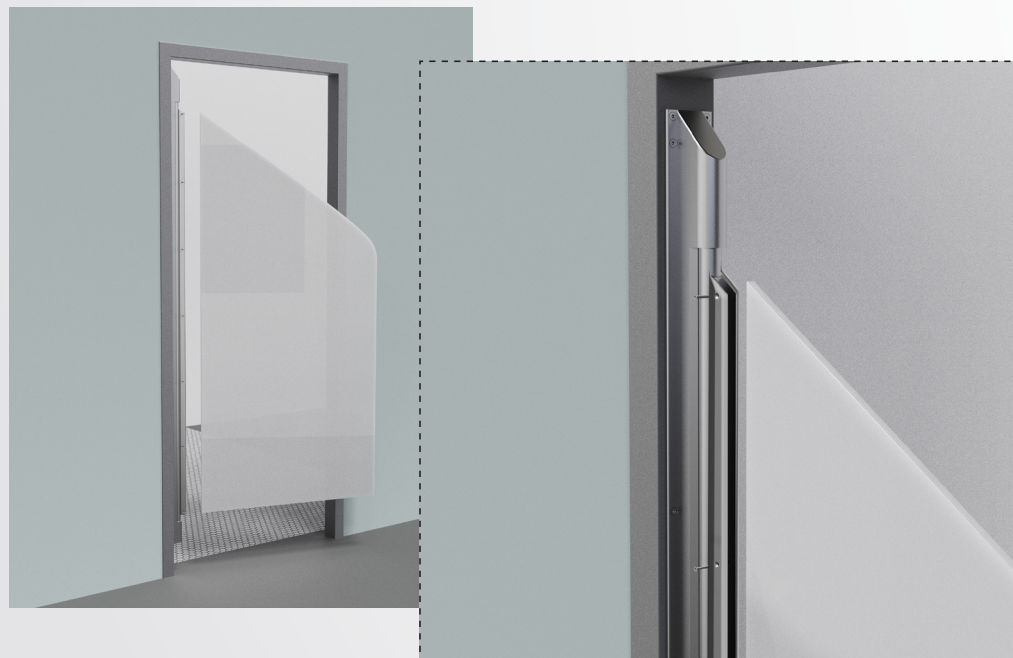

3.
MOUNT DOOR

Screw LR-SW door into LR-SW frame with provided screws (7 #10 button head pin in Torx screws).

4.
ADJUST + TEST

TO ADJUST THE DOOR:

- I. place the door in closed position.
- II. loosen the set screw.
- III. place Torx wrench in the pin on the bottom head screw.
- IV. adjust door and tighten set screw.

