

Datum: 2019 – 08 - 05

Zeit: 14:00 Uhr

Subject: BULLETIN NO: 1

Document No: 1.1

Von: Rallyeleiter

An: Alle Bewerber / Crew Mitglieder
Anzahl der Seiten: 2 Anhänge: 3

FIA Approval: 2019 – 08 - 05

2019 FIA WRC SPORTING REGULATIONS

Gemäß der Entscheidung im WMSC Meeting vom 15. Juni 2019, wird Artikel 40.3 der FIA WRC Sportlichen Bestimmungen 2019 mit sofortiger Wirkung wie folgt geändert:

40.3 ZWISCHENFALL AUF EINER WERTUNGSPRÜFUNG

40.3.1 Bei einem Unfall, bei dem dringend ärztliche Hilfe erforderlich ist, gilt folgendes:

- Die SOS-Anzeige auf dem FIA Safety Trackingsystem muss so schnell wie möglich aktiviert werden.
- Falls möglich sollte das rote „SOS“ Schild unmittelbar den darauffolgenden Fahrzeugen und jedem eventuell zur Hilfe kommenden Hubschrauber gezeigt werden.
- Das rote Warndreieck muss **sobald als möglich** durch ein Crewmitglied an gut sichtbarer Stelle in einem Abstand von mindestens 50 m vor dem Wettbewerbsfahrzeug, auf der gleichen Seite wie das Wettbewerbsfahrzeug aufgestellt werden, um die nachfolgenden Fahrer zu warnen, auch wenn sich das Fahrzeug abseits der Strecke befindet.

40.3.2 Jede Crew, der das rote „SOS“ Schild gezeigt wird oder die ein Fahrzeug sieht, das in einen Unfall verwickelt ist ~~und bei dem sich beide Fahrer innerhalb des Fahrzeugs befinden, das rote „SOS“ Schild aber nicht zeigen~~ **und das rote „SOS“ Schild wird nicht gezeigt**, muss sofort und ohne Ausnahme anhalten, um Hilfe zu leisten. Alle nachfolgenden Fahrzeuge müssen ebenfalls anhalten. Das zweite Fahrzeug an der Unfallstelle muss weiterfahren und den nächsten Funkposten informieren. Die nachfolgenden Fahrzeuge müssen die Straße für Notfahrzeuge freihalten. **Allen Crews, die aufgrund dieses Verfahren anhalten, wird eine Zeit gemäß Art. 39 zugeteilt.**

40.3.3 Bei einem Unfall, bei dem eine unmittelbare ärztliche Hilfe nicht erforderlich ist, oder wenn ein Fahrzeug aus irgendeinem anderen Grund auf oder neben einer Wertungsprüfstrecke anhält, sei es vorübergehend oder dauerhaft, gilt folgendes:

- Die OK-Anzeige auf dem FIA Safety Trackingsystem muss innerhalb von einer Minute aktiviert werden.
- Das grüne „OK“ Schild muss unmittelbar den darauffolgenden Fahrzeugen und jedem eventuell zur Hilfe kommenden Hubschrauber gezeigt werden. Wenn die Crew das Fahrzeug verlässt, muss das „OK“ Schild so platziert werden, dass für alle anderen Bewerber gut sichtbar ist.
- Das rote Warndreieck muss durch ein Crewmitglied an gut sichtbarer Stelle und auf der gleichen Seite, auf der das Fahrzeug steht, in einem Abstand von mindestens 50 m vor dem Wettbewerbsfahrzeug aufgestellt werden, um die nachfolgenden Fahrer zu warnen, auch wenn sich das Fahrzeug abseits der Strecke befindet.

40.3.4 **Sollte es aus irgendeinem Grund nicht möglich sein, das OK/SOS Schild in einer der oben genannten Situationen zu zeigen, kann es durch eine offensichtliche und klar verständliche Zeichensprache durch die Crew außerhalb des Fahrzeugs ersetzt werden:**

- **Arm und Daumen hoch um „OK“ anzuzeigen**
- **Gekreuzte Arme oberhalb des Kopfs um „SOS“ anzuzeigen.**

40.3.45 Jede Crew, welche die vorstehenden Bestimmungen einhalten kann, es aber versäumt, dies zu tun, wird durch den Rallyeleiter an die Sportkommissare gemeldet.

40.3.56 Im Road Book muss eine Seite mit Aufführung des Verhaltens bei einem Unfall enthalten sein.

KLARSTELLUNG VON ARTIKEL 60.10

Die Anpassung des Reifendrucks ist ebenfalls erlaubt, wenn die Wartezeit zwischen einer Zeitkontrolle und dem Start der nachfolgenden Wertungsprüfung mehr als 13 Minuten für jeden Bewerber beträgt.

AUSSCHREIBUNG

- **ART. 2 (ORGANISATION)**

2.6 FIA Delegierte

"...Delegierter Technik-Assistent: **Alberto CASTO** ersetzt Clement CLERC..."

- **ART. 3 (PROGRAMM)**

Mittwoch, 15. August 2018:

"...17:00 Uhr Photographers' Safety Briefing Media Center..."

- **ART. 4 (NENNUNGEN)**

4.3 ZULÄSSIGE ANZAHL DER BEWERBER UND KLASSENEINTEILUNG

"...In Übereinstimmung mit Artikel 4.3 der 2019 WRC Sportlichen Bestimmungen, wurden die nachfolgenden Fahrzeuge nach Wunsch des ASN (DMSB) durch die FIA zur Nennung in der Nationalen Klasse (NAT) zugelassen:

HOMOLOGATION NO.	MARKE	MODEL
N-5718	MITSUBISHI	EVOLUTION 10

"

- **ART. 9 (RECONNAISSANCE)**

"9.5 Die Fahrzeuge von Ole Christian Veiby, Martin Koci, Dedo, Sebastian Johansson, René Noller, Charles Munster, Gregoire Munster und Anthony Rott als Recce Only-Teilnehmer sind ebenfalls verpflichtet, die Speed Control Checking Devices einzubauen.

Ole Christian Veiby und Martin Koci werden der Recce Group 1 zugeordnet.

Dedo, Sebastian Johansson, René Noller, Charles Munster, Gregoire Munster und Anthony Rott werden Recce Group 2 zugeordnet."

- **RECONNAISSANCE SCHEDULE (ANHANG 2)**

Beigefügt ist die aktuelle Version des Recce Schedule (V4) ([Anhang 1](#))

- **SAS TRACKING COMPETITOR USER MANUAL (ANHANG 6)**

Beigefügt ist die aktuelle Version des SAS Tracking Competitor User Manual ([Anhang 2](#))

- **TRACKER FITTING KIT INSTRUCTIONS (ANHANG 7)**

Beigefügt ist die aktuelle Version der Tracker Fitting Kit Instructions ([Anhang 3](#))



Friedhelm Kissel
Rallyeleiter

BULLETIN 1 – ANHANG 1

RECCE SCHEDULE (V4)

ADAC RALLYE DEUTSCHLAND	RECCE SCHEDULE (V4) (31.07.2019)		
------------------------------------	--	---	---

Recce Day 1

Tuesday, 20.08.2019

Group 1 FIA P1/P2P/P2		Allowed time	SS km	SS km x2	Finish 1 > > Start 2	To next SS	Total km
Service Park	Bostalsee					47,84 (SS 2/5)	47,84
SS 2/5	Stein und Wein	08:00 - 13:00	19,44	38,88	19,65	27,86 (SS 3/6)	86,39
SS 3/6	Mittelmosel	08:00 - 13:00	22,00	44,00	4,80	9,79 (SS 16/18)	58,59
SS 16/18	Grafschaft	11:00 - 17:00	28,06	56,12	17,24	34,90 (SS 17/19)	108,26
SS 17/19	Dhrontal	11:00 - 17:00	11,69	23,38	17,55	51,62 (SS 4/7)	92,55
SS 4/7	Wadern-Weisk.	14:00 - 19:00	9,27	18,54	4,42	21,41 (Bostalsee)	44,37
							438,00

Group 2 RGT/Non-Priority		Allowed time	SS km	SS km x2	Finish 1 > > Start 2	To next SS	Total km
Service Park	Bostalsee					62,18 (SS 16/18)	62,18
SS 16/18	Grafschaft	08:00 - 13:00	28,06	56,12	17,24	34,90 (SS 17/19)	108,26
SS 17/19	Dhrontal	08:00 - 13:00	11,69	23,38	17,55	28,88 (SS 2/5)	69,81
SS 2/5	Stein und Wein	12:00 - 17:00	19,44	38,88	19,65	27,86 (SS 3/6)	86,39
SS 3/6	Mittelmosel	12:00 - 17:00	22,00	44,00	4,80	53,18 (SS 4/7)	101,98
SS 4/7	Wadern-Weisk.	16:00 - 19:00	9,27	18,54	4,42	21,41 (Bostalsee)	44,37
							472,99

Recce Day 2

Wednesday, 21.08.2019

Group 1 FIA P1/P2P/P2		Allowed time	SS km	SS km x2	Finish 1 > > Start 2	To next SS	Total km
Service Park	Bostalsee					25,36 (SS 8/10)	25,36
SS 8/10	Freisen	08:00 - 14:00	14,78	29,56	7,37	33,05 (SS 9/11)	69,98
SS 9/11	Römerstraße	08:00 - 14:00	12,28	24,56	23,13	19,75 (SSS1 / SD)	67,44
SSS 1/SD	St. Wendeler Land	10:00 - 15:00	5,20	10,40	12,77	41,02 (SS 12/14)	64,19
SS 12/14	Arena Panzerplatte	11:30 - 17:00	10,73	21,46	7,44	7,44 (SS 13/15)	28,90
SS 13/15	Panzerplatte	11:30 - 17:00	41,17	82,34	4,42	38,99 (Bostalsee)	125,75
							381,62

Group 2 RGT/Non-Priority		Allowed time	SS km	SS km x2	Finish 1 > > Start 2	To next SS	Total km
Service Park	Bostalsee					15,08 (SSS 1/SD)	15,08
SSS 1/SD	St. Wendeler Land	08:00 - 11:00	5,20	10,40	12,77	41,02 (SS 12/14)	64,19
SS 12/14	Arena Panzerplatte	08:00 - 14:00	10,73	21,46	7,44	7,44 (SS 13/15)	28,90
SS 13/15	Panzerplatte	08:00 - 14:00	41,17	82,34	4,42	14,49 (SS 8/10)	101,25
SS 8/10	Freisen	12:00 - 17:00	14,78	29,56	7,37	33,05 (SS 9/11)	69,98
SS 9/11	Römerstraße	12:00 - 17:00	12,28	24,56	23,13	34,65 (Bostalsee)	82,34
							361,74

The time window of reconnaissance for each group is compulsory, the order of the stages within this window is free.



SAS Tracker Competitor User Manual

Welcome

For your and other competitor's safety, it is important that you are familiar with the use of the WRC tracking unit, herein referred to as "the unit" or "the WRC tracking unit".

The SAS System is designed to increase competition safety by providing safety notifications to inform event management, improve response times and provide accurate and reliable event times.

The following document outlines the basic features and functions of the WRC tracking unit. Please note that the WRC Tracking unit must be fitted and connected in all competitor's car, in accordance with the SAS Fitting Kit Manual – RALLY CAR.

Table of Contents

1. Powering The Unit On.....	3
2. Stage Modes	3
2.1. Transport Mode	3
2.2. Stage Mode.....	4
3. Hazard Alerts.....	6
4. Red Flag	8
5. Transport Menu	9
5.1. Stage Times	10
5.2. Manual Hazard	11
6. Contact Us.....	11

1. Powering The Unit On

The unit is pre-loaded with all of the stage coordinates and is activated when powered on. Please power the unit on early before the event to give it time to run checks.

When powered on the unit will display the transport mode, the details of which are specified in the Art. 2.1 of this document.

The unit does not need to be powered off at any stage during the event as it will go to sleep within a few minutes of inactivity but can be re-woken by either moving the vehicle or pressing any of the four buttons.

It is recommended that the unit is not powered off during the event, to ensure the internal battery stays fully charged for emergencies.

2. Unit Modes

The unit has two modes:

- When not in a competitive stage, the unit will be in **transport mode**, as described in 2.1.
- When in a competitive stage, the unit will go into **stage mode**, as described in 2.2.


2.1. Transport Mode

SCREEN 1 – The transport mode displays from the top down the following information: the name of the next point you are travelling to, the time in transit, current time, accumulative and intermediate distances and speed, average speed.

The unit has four physical buttons. Their functions are reported on the screen right above the button's location.

Starting from the far left button to the right, you have the following options:

 - **OPTIONS:** Operation described in 5.Transport Menu.
- **BRIGHT:** Increase the screen brightness (Note that the screen must always be clearly readable so full brightness is recommended for daytime).
- **DIM:** Decrease the screen brightness,
- **RESET:** Intermediate trip meter.

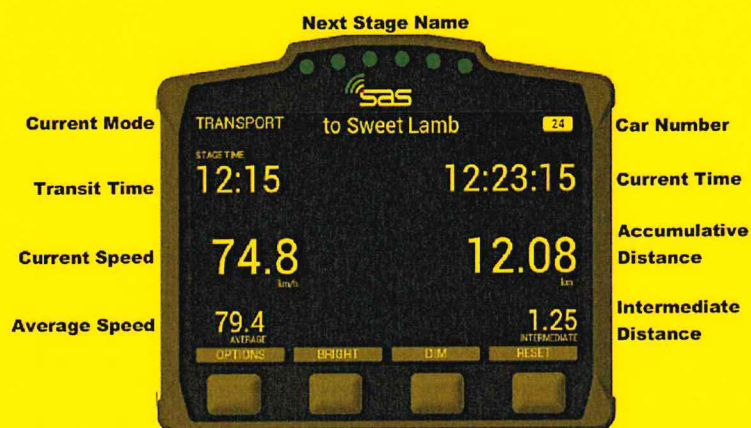

SCREEN 1. Transport Mode

2.2. Stage Mode

SCREEN 2 – When the start official assigns each individual competitor a due start time, a countdown will display on the unit as shown in the white field below. Also shown in the white field is the stage number and the due start time.




SCREEN 2. Countdown to Stage Start

SCREEN 3 – Once the start time is reached, the screen will turn green as shown below and the competitor has to proceed into stage.




SCREEN 3. Stage Start

 SCREEN 4 – Once the competitor has started the stage, the unit will automatically switch to on stage mode. The unit will start timing.

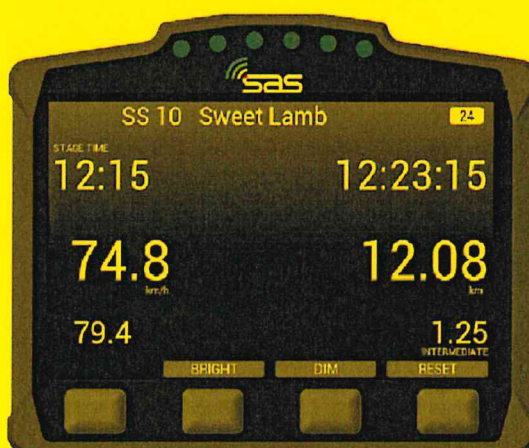

SCREEN 4. Stage mode

 SCREEN 5 – If the start is postponed for whatever reason and the start time is cancelled, the unit will display the Transport Screen. Once it is clear to send cars again the official will re-issue a new start time.

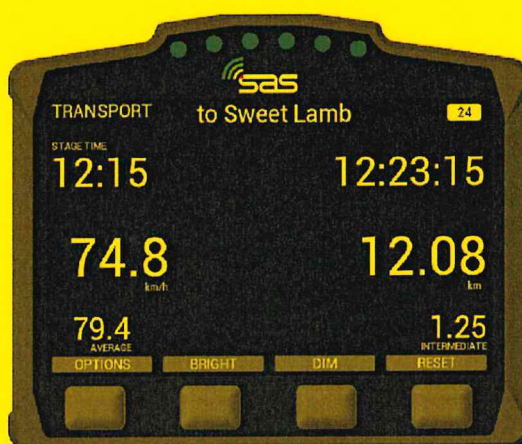

SCREEN 5. Start Time Cancelled

3. Hazard Alerts

The unit's primary function is to help alert race control of incidents on the course. The incident is notified to race control with different levels of hazard depending on the severity.

SCREEN 6 – If a car stops during a stage for longer than 3 seconds, the unit will automatically transmit a HAZARD notification; this can either be upgraded to OK or downgraded to SOS by pressing the corresponding button to the text. A timer counts up to 60 seconds as an indication to press the "OK".



SCREEN 6. HAZARD Notification

SCREEN 7 – If you select OK after the HAZARD alert, then the following screen will appear, showing that you and the car are OK.



SCREEN 7. OK Acknowledgment

SCREEN 8 – If the manual SOS button is pressed, it must be confirmed as either a fire or medical SOS by pressing one of the two middle buttons. It can also be cancelled if pressed by mistake. If a car is involved in a High G impact, an automatic SOS message will display. If no urgent assistance is required, you can downgrade to OK by selecting the corresponding button.



SCREEN 8. Confirm Fire SOS or Medical SOS

SCREEN 9 – When the SOS is confirmed, the screen 9 will display. Even once confirmed, the hazard can be changed to OK. Pressing OK will inform race control that the crew are OK and do not need medical assistance.



SCREEN 9. SOS Notification

4. Red Flag

SCREEN 10 – In the case of a serious incident, a stage may be red flagged from Race Control. The red flag will display a full screen warning until it is acknowledged. To acknowledge the flag the far left button must be pressed.



SCREEN 10. RED FLAG Acknowledge

SCREEN 11 – Once the red flag has been acknowledged, normal stage functions will display with a warning still at the top of the screen.



SCREEN 11. RED FLAG in Stage Mode


5. Transport Menu

SCREEN 12 – In transport mode, the unit has a menu that can be accessed by pressing the options button.



SCREEN 12. Transport Mode

 SCREEN 13 – The option menu will allow the crew to view stage times “VIEW TIMES” or send a manual hazard/SOS “SEND HAZARD”.

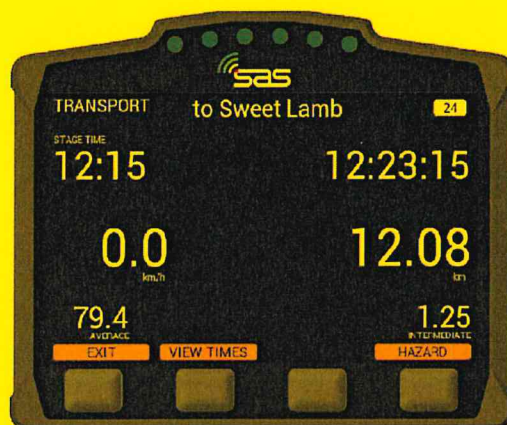

SCREEN 13. Transport Mode – View times/Send Hazard

5.1. Stage Times

SCREEN 14 – By pressing the “VIEW TIMES” button, provisional transit and competitive stage times will display. You can select times for any of the completed stages with the next and previous buttons.



SCREEN 14. Times of completed stages

5.2. Manual Hazard

SCREEN 15 – If manual hazard is sent in transport mode, this can be upgraded or downgraded the same way as a stage hazard. If the hazard is no longer required, it can also be cancelled by pressing either of the two middle buttons "PRESS TO CANCEL".



SCREEN 15. Manual Hazard in Transport Mode

6. Contact us

For assistance, please contact the RallySafe Support Team by emailing: info@statusas.com

Please be as descriptive as you can when describing the problem. It would help us if you provide the following information at a minimum:

- Name of event.
- Vehicle or feature affected.
- Stage of incident.
- Time of incident.
- Any additional details.



SAS Fitting Kit Manual – RALLY CAR

Welcome

This manual is provided as a guide for the installation of the WRC Tracking System Kit, for competition vehicles only. Care should be taken when considering the location of components with regard to electrical cabling and fire suppression systems already installed in the vehicle. Please check always that the components of your kit are as requested.


Table of Contents

1. Tracking Unit Kit Components	3
2. Power Supply.....	3
3. Connection Diagram	3
4. Tracking Unit Dimensions	4
5. Tracking Unit Mounting	5
6. Antenna Installation	6
6.1 External Antenna Installation	7
6.2 Internal Antenna Installation	8
7. Contact	8

1. Tracking Unit Kit Components & Steps

The WRC Tracking System Kit includes:

 - WRC Tracking Installation and Fitting Kit Instruction Sheet;
- 3-in-1 antenna with leads;
- Internal radio antenna with lead;
- 6 – 24v wiring loom with plug;
- Mount, to be bolted to tunnel;
- Adjustable mount connector/knuckle.

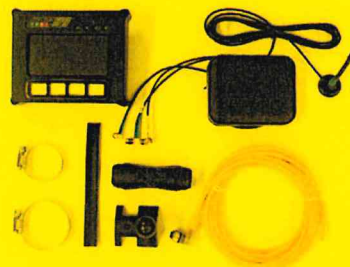

(Contents may differ slightly to image shown)

WRC tracking system fitment steps:

1. Mount WRC tracker;
2. Fit external & internal antennas, running leads to the WRC tracker;
3. Fit wiring loom, ensuring that a solid 9 to 28 volts is supplied;
4. Connect all antenna connections, make sure they are tight using an 8mm spanner;
5. Apply power.

2. Power Supply

WRC tracking system requires a reliable power supply from 9 to 28 volts DC. We recommend a 5 amp (Max) blade type or similar quality fuse is used at the battery supply end of the WRC tracking system power lead.


Zero volts or battery negative can be picked up at any suitable earthing point providing the isolation switch does not switch the negative side of the battery.

The WRC tracking system unit has an internal battery that is kept charged via the car's power supply. It acts as a reserve supply to power the unit in the case of an accident where a car's power supply is interrupted (e.g. car battery smashed or dislodged).

Note: The tracking device should only be powered once it is placed in its final position in the vehicle; this ensures accelerometers are calibrated correctly.

3. Connection Diagram

 
The 6-24v wiring loom, includes five wires. The white blue and grey wires must be stagger cut and heat shrunk or taped back so they cannot short to ground or to each other. Red and black are used as follows:

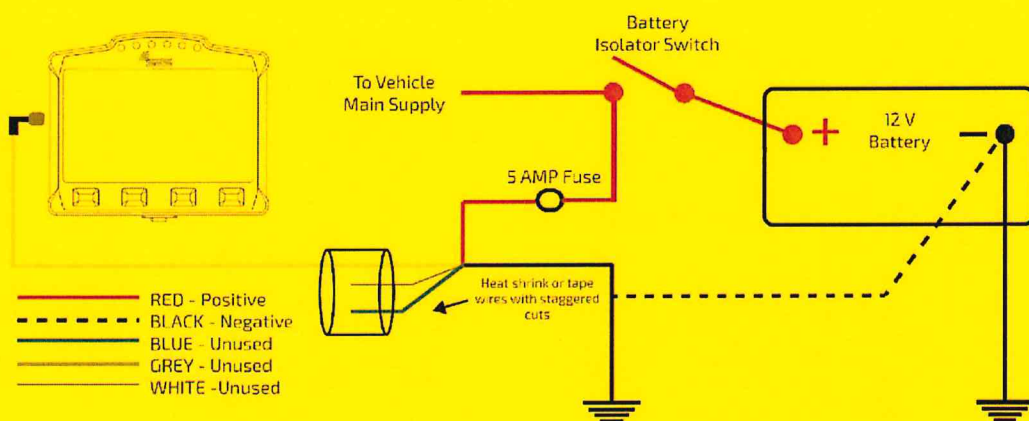

During installation, the wiring loom should be routed away from the engine compartment, Ignition or Alternator wiring.

300 mm of Power Supply Wiring Loom is required to be available for connection to the WRC Tracker Unit at the mounted position.

 4. Tracking Unit Dimensions

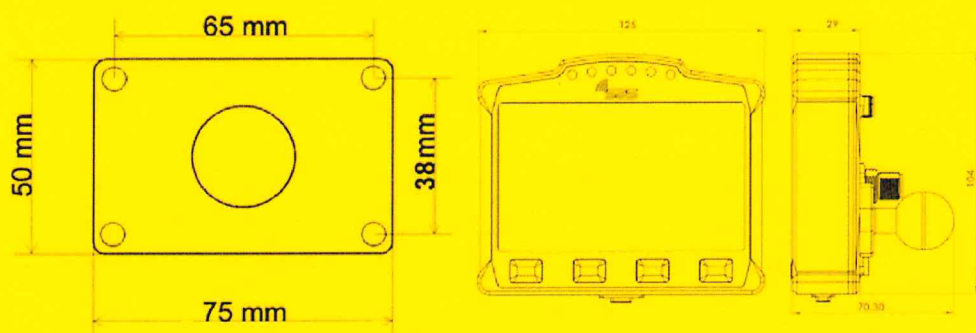

5. Tracking Unit Mounting

The preferred location and mounting for the WRC tracking system unit is a RAM style 50mm x 75mm flat base with ball, bolted through the tunnel with four **M6** Bolts.

It should be in a central, protected location on the central tunnel in front of the seats and both easily visible and accessible by both the driver and co-driver/nav.

Care should be taken when considering the location of the Mounting Point with regard to electrical cabling and fire suppression systems installed in the vehicle.

Photographs of mounting and positioning can be seen in Fig.1 and Fig.2 respectively.

Alternatively, the WRC tracking system unit can be mounted in a central protected location on the vehicle dashboard that is easily visible and accessible by both the driver and co-driver.

Mounting is a Ram style 50mm x 75mm flat base with ball, bolted with four **M6** bolts through the dashboard and a compulsory 3mm backing plate measuring no less than 145mm x 120mm

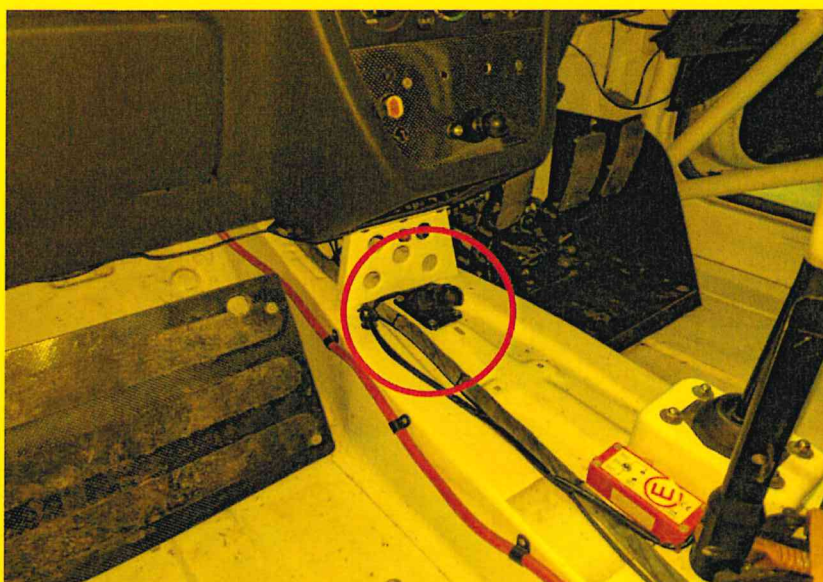 


Figure 1. 25mm rubber ball securely attached to the tunnel

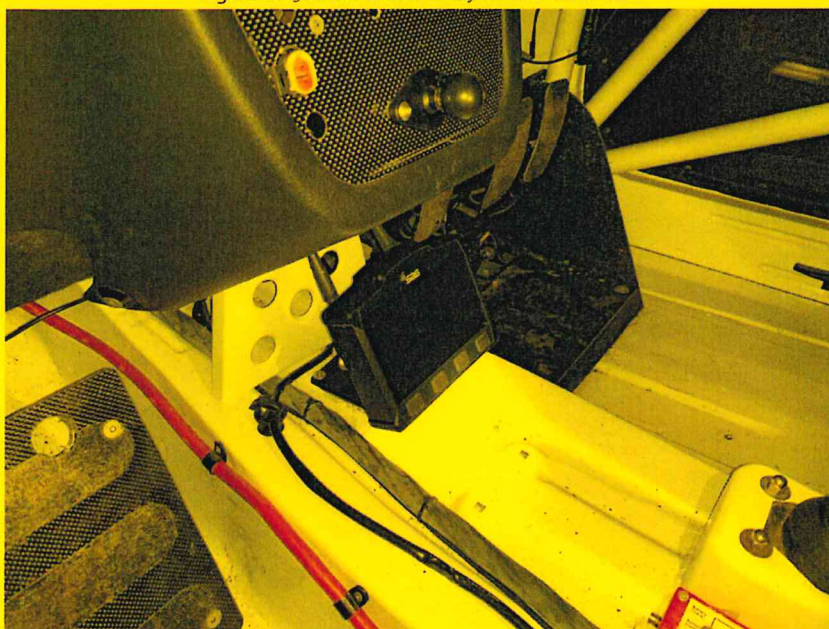 


Figure 2. The WRC tracking unit mounted onto the 25mm rubber ball mount and connected through the RallySafe connector

6. Antenna Installation

All leads on both external and internal antennas must run on the inside of all roll cage bars. This is to stop cable crushing on impact.

Antenna must not be mounted within 200 mm of any high frequency antenna's or cabling

The preferred route is to go down from the antenna, underneath the closest part of the roll cage (roof cross or main hoop), follow that along to the roof hoop, then go down the inside A pillar to the unit. Please allow 200mm clearance of high frequency antenna or cabling

Any excess cable must be run so that the cable is not bent any tighter than a 100mm radius. We recommend running it across the underside of the dash and back (do not coil in tight loops).

Cables must be tied neatly along the whole installation all the way to the unit so they can't be accidentally caught or dislodged.

 
All this will be checked at scrutineering and you may be required to fix it before your car can pass.

Note: All antenna connections need to be firmly tightened with an 8mm spanner.

6.1. External Antenna

The antenna is mounted through a 12mm hole in a central location on the ROOF of the vehicle, rear of the main roll bar hoop, allowing the cabling to pass through the roof and follow the cage bars back to the unit location. The antenna is a fully watertight unit, which seals against the roof surface.



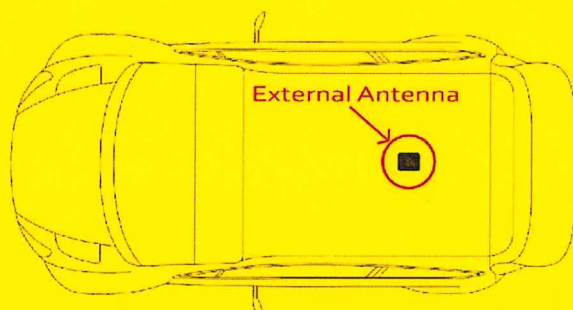

Antenna leads are connected as follows (There may be variations with the type and number of leads).

1. The 2 UHF leads, colour-coded **Blue**, is connected to the terminal labelled "WiFi" on the WRC unit (Right Hand Thread). Terminals are located of the rear of the unit and/or colour-coded Blue.
2. The Satellite Communication antenna lead is connected to the center or rear terminal labelled "IRI" (Left Hand Thread). It may also be colour-coded **Yellow** (this may be not marked on the 2-in-1 antenna).
3. The GPS antenna lead labelled "GPS", is connected to the terminal labelled "GPS" on the WRC unit (Right Hand Thread). Terminals may be on the side or rear of the unit and/or colour-coded **Green**.
4. GSM, has a small stick antenna supplied with the WRC unit, and is connected to corresponding terminal labelled "GSM" on the WRC unit (Left Hand Thread). The terminal is located on the rear of the unit and/or colour-coded **Red**.

6.2. Internal Antenna

The Internal Antenna should be placed on the inside of the ROOF in a clear uncluttered area, with a 200mm radius clear of any bar work or solid metal object. The internal antenna has a magnetic base with double-sided tape for adhesion. The cable is then run to the WRC unit. Please keep cable on the inner side of the roll cage pipework so as not to be crushed in the event of an accident.

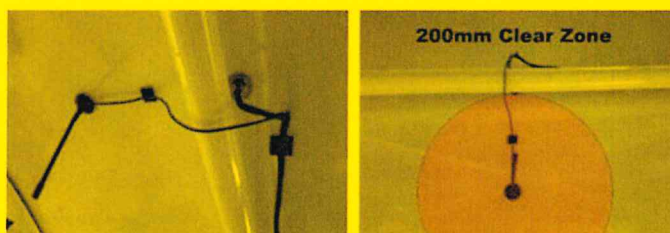 


Figure 3. The internal antenna must be at least 200mm away from any roll cage components

7. Contact Us

For assistance, please contact the RallySafe Support Team by emailing: support@rallysafe.com.au

Product Disclaimer

"This manual, the specifications, and the material contained in it, as released by Status Awareness Systems and RallySafe, is for the purpose of information only. Due to continuous ongoing development, information and specifications may change at any time without notice. SAS, and the companies that have contributed to it, shall not be liable for any use of the manual or information supplied.

The material contained in this manual is protected by copyright and other types of Intellectual Property Rights. The commercial exploitation of the material contained in this specification requires a license to such Intellectual Property Rights.

This manual may be utilised or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the specification may be utilised or reproduced, in any form or by any means, without permission in writing from SAS.

The word RallySafe and the RallySafe logo are registered trademarks".