
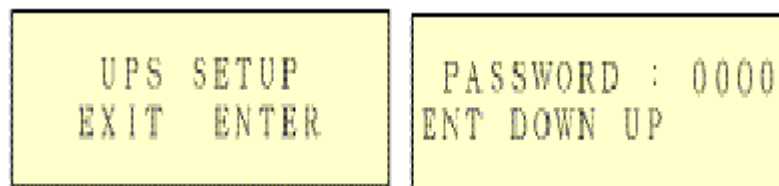


ANDA APS 5,6,7&10KVA IAS

Number	Item	Option	Default value
1	Language	English, Français , Deutsch, Italiano, Español, Português, Turkish, Chinese	English
2	Output Voltage	200V, 208V, 220V, 230V, 240V	230V
3	Bypass Voltage Upper Limit	264,276(240V Model only)	264,276(240V Model only)
4	Bypass Voltage Lower Limit	156	156
5	Charger current	5/6/7kVA:0.7/1.5/3.0/4.0A 10kVA:1.5/2.0/3.0/4.0A	4A
6	Shutdown voltage	5/6/7kVA:168 Vdc $\pm$ 3% 10KVA:210 Vdc $\pm$ 3%	9,9V/Battery
7	Auto Discharge test	NO, 30Days, 60Days, 90Days	NO
8	Battery cabinet	1~9	1
9	Battery Ah	000~999	5/6/7kVA:18Ah 10KVA:28Ah
10	Industrial	Enable, Disable	Disable
11	Frequency converter	Enable, Disable	Disable
12	ECO Mode	Enable, Disable	Enable
13	Redundancy Power Alarm	Enable, Disable	Enable
14	Power Factor	0.8 / 0.9	0.9
15	Number of Batteries	5/6kVA:15/16/17Pcs 8/10KVA:19/20/21Pcs	5/6/7kVA:16Pcs 10KVA:20Pcs
16	Manufacturing Date	Real date/ Designate date	Real date

UPS default settings

17	Last Battery Replace Date	Customer can define.	Manufacturing Date
18	Next Battery Replace Date	Customer can define.	Manufacturing Date + 3 Years
19	UPS ID	00~99	00

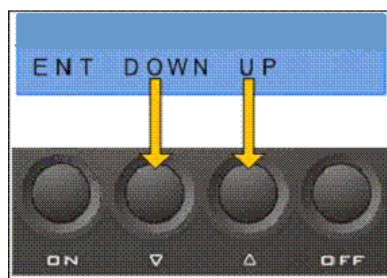

To enter SETUP MODE press UP & DOWN button simultaneously more than 3 seconds, till appear the setup menu as above.

Press (ON) ENTER key, put the password (default password is 1234).

To increase press Up key, To decrease press Down key. Press enter button after each selection to go to next step