Series 188A, 288A, LF288A, 289, LF289 388ASC, N388, LFN388

Repair Kits

When ordering specify Ordering Code, Kit No., and Valve Size.

	ORDERING CODE	KIT NO.	SIZE	
		A/388ASC		
ти Ш	0887170	RK 188A/288A/388 T	1/4" - 3/8"	
	0887171	RK 188A/288A/388 T	1/2"	
Ĩ	0887172	RK 188A/288A/388 T	3/4" – 1"	
	0887173	RK 188A/288A/388 T	1 1/4"	
	0887174	RK 188A/288A/388 T	1 1/2"	
П	0887175	RK 188A/288A/388 T	2"	
1	0887176	RK 188A/288A/388 T	2 1/2" – 3"	
	for 288A's	s with bell shaped ho	bc	
	0887164	RK 288AZ1 T	1/4" - 3/8"	
	0887165	RK 288AZ1 T	1/2"	
	0887166	RK 288AZ1 T	3/4"	
	Kit consists of:	disc assembly (includes disc and	disc float) and bonnet O-ring.	
	289			
LAEE,	0887177	RK 289 T	3/8" - 1/2"	
E	0887179	RK 289 T	3/4" – 1"	
	Kit consists of:	check assembly, vent spring, reta	iner and bonnet O-ring.	
	0007170	DI/ 000 D	0/011 1/011	

8jii	0887178	RK 289 B	3/8" – 1/2"	
36	0887196	RK 289 B	3/4" – 1"	

Kit consists of: bonnet, bonnet O-ring and vent spring.

188A/288A/LF288A



N388/LFN388

388ASC





