



As an aid to removing a damaged Latch Assembly, use two large flat blade screwdrivers. Push blades between parts as shown. Twist both screwdrivers at same time to force the blades into opening and work the latch assembly over the two locking tabs.

To install a new latch assembly, position entire latch assembly over locking tabs with the two top lugs partially inserted in 'catch cavity' of main housing. Engage latch bar onto lid and gently press latch lever to slide assembly over two locking tabs and into place. Place flat blade screwdriver in here and work pin to the inside.

Grab exposed pin with needle nose pliers and work out.



48-22-8424 PACKOUT™ (Medium) Tool Box

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
3	43-62-8424	Side Handle Service Kit	(1)
4		Pin	(2)
5	44-20-8400	Latch Service Assembly (Set of 2)	(1)
7	43-44-8400	Lid Gasket (Not Shown)	(1)
8	31-01-8424	Storage Bin Kit (Set of 4)	(1)
8a		Deep Bin with Two Dividers	(2)
8b		Shallow Bin	(1)
8c		Shallow Bin with Cover	(1)



48-22-8450 PACKOUT[™] Tool Box Kit with Foam Dividers

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	43-62-8450	Kit Box Mono Block Handle with 2 Pins	(1)
2	44-20-8430	Latch Service Assembly (Set of 2)	(2)
3	43-44-8400	Lid Gasket (Not Shown)	(1)
4	48-22-8451	Foam Insert for PACKOUT™ Kit Box (Set of 2	2) (1)



Note: Tray, Dividers and Gasket illustrated outside of PACKOUT, is to be assembled on the inside.

48-22-8422 PACKOUT[™] Compact Toolbox

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	44-20-8422	Latch Assembly	(1)
2	43-44-8422	Gasket	(1)
3	31-01-8423	Dividers	(1)
4	31-01-8422	Tray	(1)



48-22-8429 PACKOUT[™] XL Tool Box

FIG.	PART NO.	DESCRIPTION OF PART	NO. REQ.
1	44-20-8400	Latch Service Assembly (Set of 1)	(2)
2	31-01-8400	Service Tray	(1)
3	43-62-8426	Service Side Handle (Set of 1)	(2)
4	43-44-8400	Lid Service Gasket (Not Shown)	(1)