
INSTRUCTION SHEET

FILTER KIT-

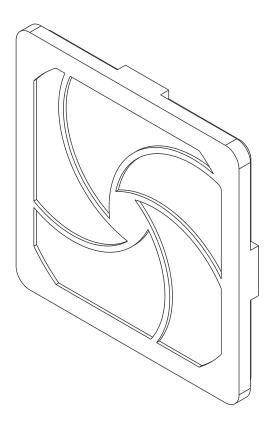

THANK YOU

Thank you for purchasing the Filter Kit for your compatible rack. Please read these instructions thoroughly before installing or assembling this product.


PRODUCT FEATURES

· Compatible with CWR and VWM racks.



SUPPLIED COMPONENTS AND HARDWARE

If any pieces are missing or damaged, please report it immediately to Technical Support at av.support@legrand.com or (866) 977-3901.

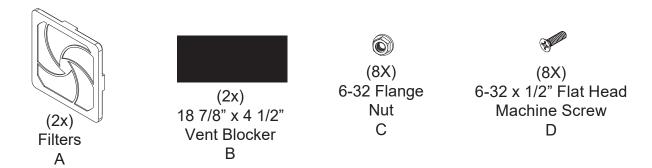


NOTE:

• To order more hardware, contact support at av.support@legrand.com or (866) 977-3901.


INSTALLING FILTER ON CWR (IF APPLICABLE)

NOTE: To ensure optimal performance and equipment protection, periodically clean or replace your filters as needed.


1. Choose an attachment option based on installation requirements, equipment placement, and airflow needs prior to installing your filter . (**FIGURE A**)

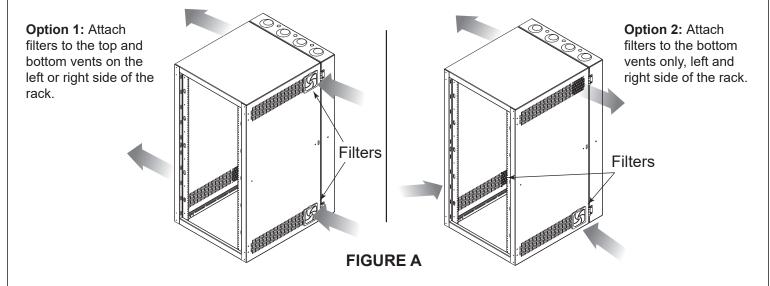

Snap-off retainer and filter. Set aside for reassembly. (FIGURE B)

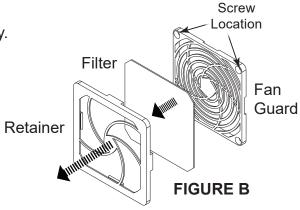


INSTALLING FILTER ON CWR (IF APPLICABLE, CONTINUED)

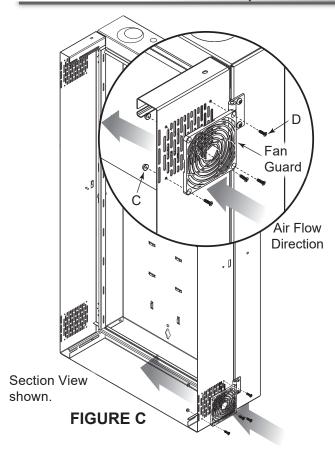

- 3. Use (4x) 6-32 x 1/2" machine screws (D) and (4x) flange nuts (C) to secure fan guard to the outer vent holes on rack, as shown. (**FIGURE C**)
- 4. Repeat previous steps to install your second filter.

NOTE:

- Filters should be installed opposite to where fans are installed.
- Location of filters may vary based on your desired air flow direction.

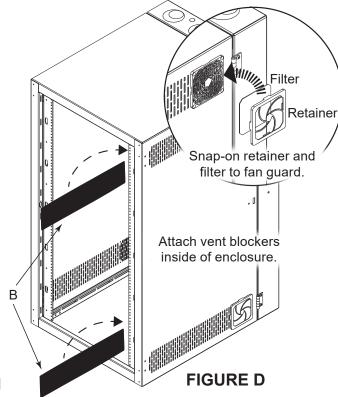

5. Snap-on retainer and filter to fan guard.

NOTE:


- Prior to attaching, vent blockers (B) should be cut down based on the depth of your rack.
- Vent blockers (B) are magnetized on one side only, for increased adhesion.
- 6. Attach (2x) vent blockers (B) inside of enclosure to cover open air vent slots next to your filter, based on your installation. (**FIGURE D**)

FOR FILTER REPLACEMENT: Snap off retainer only to replace your filter when needed.


INSTALLING FILTER ON VWM (IF APPLICABLE)

NOTE:

- To ensure optimal performance and equipment protection, periodically clean or replace your filters as needed.
- Attach filters to the bottom vents only, for proper airflow management, as shown.
- Snap-off retainer and filter. Set aside for reassembly. (FIGURE E)

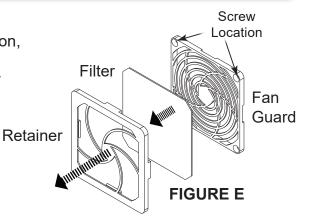

INSTALLING FILTER ON VWM (IF APPLICABLE)

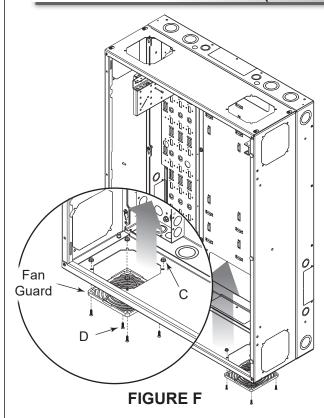


- Snap-on retainer and filter to fan guard. (FIGURE G)
- **FOR FILTER REPLACEMENT:** Snap off retainer to replace your filter when needed.

- 2. Use (4x) 6-32 x 1/2" machine screws (D) and (4x) flange nuts (C) to secure fan guard to the outer vent holes on rack, as shown. (**FIGURE F**)
- 3. Repeat previous steps to install your second filter.

NOTE:

 Filters should be installed opposite to where fans are installed.

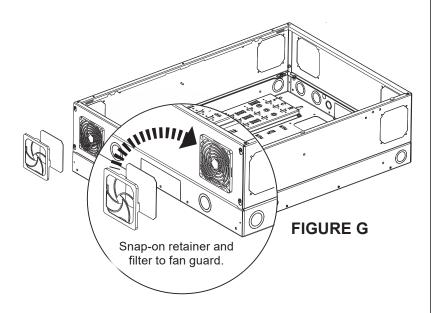

WARRANTY

For warranty information, refer to www.legrandav.com/policies/warranty_information.

Contacting Corporate Headquarters

P: (866) 977-3901 | F: (877) 894-6918 | www.legrandav.com | av.support@legrand.com

Contacting Middle Atlantic Canada

P: (888) 766-9770 | F: (888) 599-5009 | ca.middleatlantic.com | av.canada.customerservice@legrand.com

Contacting Middle Atlantic Europe, Middle East, and Africa (EMEA) Technical Support

P: +31 495-726-003 | av.emea.middleatlantic.support@legrand.com

United States (US)

Legrand | AV Headquarters 6436 City West Parkway Eden Prairie, MN, 55344, USA

European Union (EU)

Legrand AV Netherlands B.V. Franklinstraat 14 6003 DK, Weert, Netherlands

United Kingdom (UK)

Starline Holding Technology Ltd.

(Authorized Representative)

Unit C, Island Rd.

Reading RG2, 0RP- UK

At Legrand AV Inc. we are always listening. Your comments are welcome. Legrand AV is an ISO 9001 and ISO 14001 Registered Company.