 


INSTRUCTION SHEET
BB SERIES
COPPER BUSS BARS



THANK YOU

 
Thank you for purchasing a BB Series Copper Buss Bar. Please read these instructions thoroughly before installing or assembling this product.

PRODUCT FEATURES

- Buss bars come in BB-xx-1 (1" wide) or BB-40 (2" wide) models.




SUPPLIED COMPONENTS AND HARDWARE



Buss Bar (x1; width varies based on model)



 Sliding
Nut (x4)



Isolation
Washer (x4)



Shoulder
Washer (x4)



1/4-20
Bolt (x4)

NOTE:

- Hardware quantities drop from 4 to 2 for the BB-12 model.
- To ensure the proper isolation of the Buss Bar from the racks, the supplied hardware must be installed exactly as shown.

REQUIRED TOOLS


- 7/16" Wrench

INSTALLATION

Using the supplied hardware, mount the BB-xx-1 (1" wide) or BB-40 (2" wide) to all four internal rackrail mounting brackets, or for the BB-12, mount to the two internal rackrail mounting brackets. Mount bars to either the fixed rackrail or rackrail slots as shown on page 3.

NOTE: The xx portion of model numbers mentioned refers to the different rack heights.


MOUNTING TO FIXED HOLES ON RACKRAIL

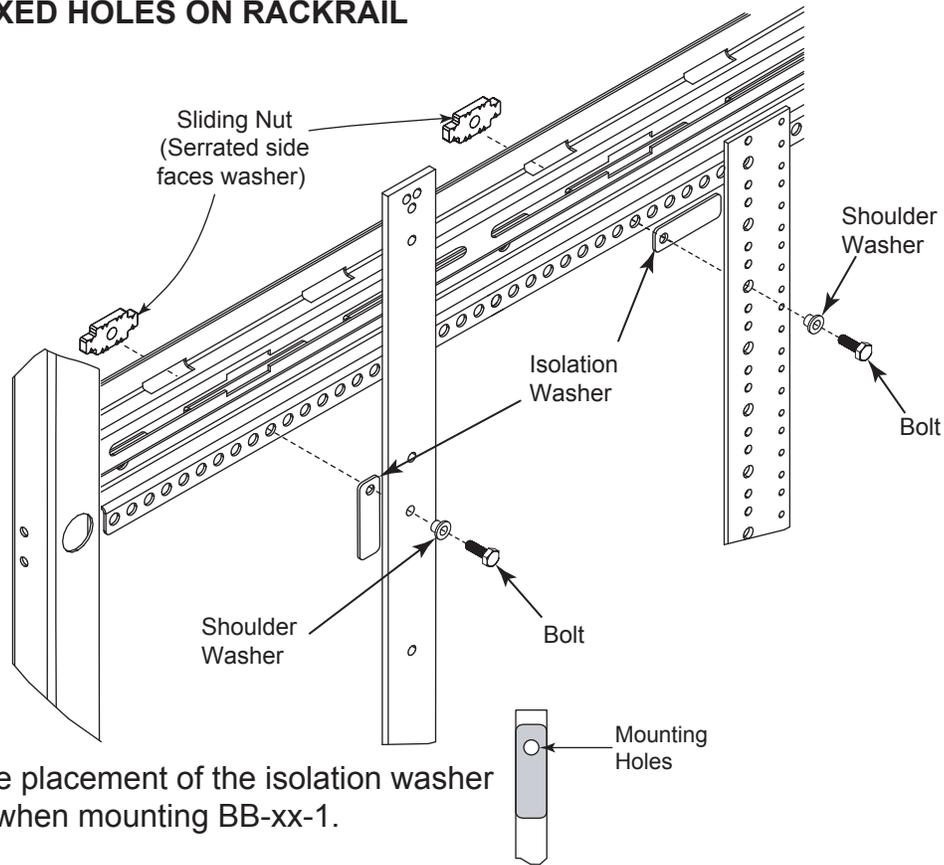

NOTE: The placement of the isolation washer is vertical when mounting BB-xx-1.

MOUNTING TO POSITIONABLE RACKRAIL SLOTS

1. Loosely fasten all the hardware to buss bar.
2. Insert sliding nut into the rackrail slot.
3. Slide the buss bar horizontally to the desired position.
4. Tighten the bolt.

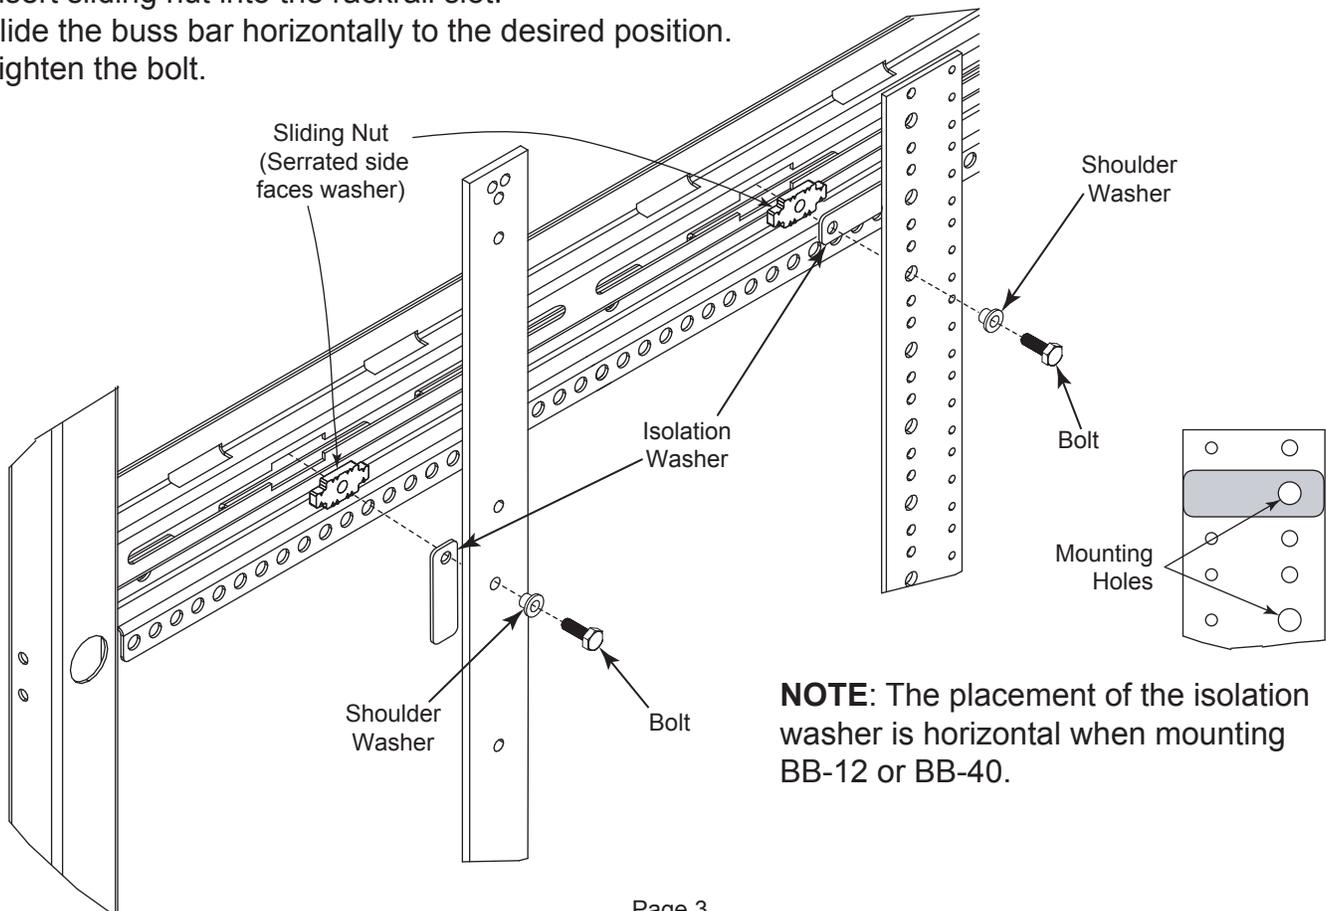

NOTE: The placement of the isolation washer is horizontal when mounting BB-12 or BB-40.



Middle Atlantic Products

what great systems are built on™

middleatlantic.com ■ 800.266.7225

WARRANTY

Middle Atlantic Products (the "Company") warrants the Universal product to be free from defects in material or workmanship under normal use and conditions for the lifetime of the product.

The Company's entire liability to the purchaser, and the purchaser's (or any other party's) sole and exclusive remedy, under this warranty shall be limited, at the Company's option, to either (a) return of and refund of the price paid for, or (b) repair or replacement at the Company's factory of the products purchased, or any part or parts thereof, which the Company has determined to be defective after inspection thereof at the Company's factory.

This warranty does not cover damage due to acts of God, accident, misuse, abuse or negligence by parties other than the Company, or any modification or alteration of the products. In addition, this warranty does not cover damage due to improper handling, assembly, installation or maintenance.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION OR ANY OTHER PECUNIARY LOSS) ARISING OUT OF THE USE OF THE PRODUCTS PURCHASED, EVEN IF THE COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE COMPANY'S LIABILITY TO THE PURCHASER (OR ANY OTHER PARTY) HEREUNDER, IF ANY, SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCTS PAID TO THE COMPANY.

Corporate Headquarters

Corporate Voice 973-839-1011 - Fax 973-839-1976 / International Voice +1 973-839-8821 - Fax +1 973-839-4982
middleatlantic.com - info@middleatlantic.com

Middle Atlantic Canada

Voice 613-836-2501 - Fax 613-836-2690 / middleatlantic.ca - customerservicecanada@middleatlantic.ca

Factory Distribution

USA: NJ - CA - IL Canada: ON - BC

At Middle Atlantic Products we are always listening. Your comments are welcome.

Middle Atlantic Products is an ISO 9001 and ISO 14001 Registered Company.