

User Guide for the

Vaddio IR Remote Master

August 2022 998-2105-000 (Worldwide)

Installing the Batteries

The remote uses two AAA batteries.

- 1. Remove the cover from the back of the remote. You may need to press down on the upper edge while sliding it off.
- 2. Install the batteries as shown in the diagram in the battery opening.
- 3. Slide and snap the cover back into place.

Tips for Using the Remote

Presets: The remote provides access to camera presets. Your camera's web interface may provide access to additional camera presets.

Camera selection: The remote has three IR channels, so it can control up to three cameras independently. Check your camera's manual for information on setting it as camera 1, camera 2, or camera 3. By default, Vaddio cameras respond as camera 1.

Troubleshooting tip: If the camera does not respond to the remote, press the Camera 1 button and try again. If that doesn't fix the problem, try the other camera selection buttons.

Autoframing cameras: Autoframing pauses when you press any button that affects the shot (arrows, home, zoom, presets).



IR Remote Master Quick Reference

The remote may have controls for capabilities that your camera does not have. Some buttons behave in different ways depending on the camera's capabilities.

_ (•)	Power button and indicator – Set the camera to standby mode, or return to full-power mode.
	return to full-power filode.
1 2 3	
	Arrow buttons – Pan and tilt.
< (a) >	Home button – Function depends on the model of camera. For Autoframing cameras, press to resume auto-framing.
品	Network button – Display the camera's IP address on the video output(s).
	Backlight button – Adjusts for excess light behind the camera's subject.
Ø	Mute button – Mute connected or built-in microphone(s).
☐+ vol ☐-	Volume +/– button – Increase or decrease the volume from the connected or built-in speaker.
Focus	Focus +/- buttons - Adjust the focal distance in or out, when Manual focus mode is selected.
@ zoom ©	Zoom +/- button- Increase or decrease the zoom.
Focus Auto Man	Focus Auto/Man buttons – Select automatic or manual focus.
Pan Dir Std Rev	Pan Dir buttons – Set pan direction relative to the person using the remote. Std is from the camera's perspective. Rev is from the perspective of a person facing the camera.
Set Clr 1 2 3 4 5 6 7 8	Set, Clr, and Preset buttons – Set, clear, or select preset shots.



Storing and Clearing Presets

Depending on the camera, presets may store zoom, pan/tilt location, color settings, or some combination of these.

Your camera may have additional presets available through its web interface.

To store a preset:

Set up the shot. Then hold down the **Set** button and press one of the numbered preset buttons.

To clear a preset:

Press and hold the CIr button while pressing the number of the preset you want to clear.