

Premium+ Series PDU with RackLink™ Quick Start Guide

I-00864 Rev D



Supplied Components and Hardware (Continued)

NOTE:

- To order more hardware, contact support at av.support@legrand.com or (866) 977-3901.
- Additional hardware is included that may not be required for your installation.

Required Tools

- #1 Phillips Screwdriver


WARNING Use tools with caution and follow all safety protocols.

AVERTISSEMENT Utiliser des outils avec prudence et suivre tous les protocoles de sécurité.

Setting Up Your RackLink Device

NOTE: Prepare the installation site. Make sure the installation area is clean and not exposed to extreme temperatures or humidity. Allow sufficient space around the device for cabling and outlet connections.

- Use #1 Phillips screwdriver and remove (2x) pre-installed 5/16" screws from both sides of the PDU (A) as shown. **(FIGURE A)**

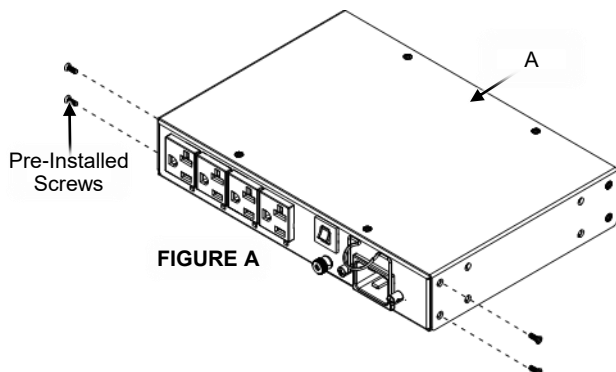

IMPORTANT SAFETY INSTRUCTIONS—EN

SAVE THESE INSTRUCTIONS - This manual contains important instructions that should be followed during installation and maintenance of the power distribution unit (PDU).

For complete safety instructions, refer to the Premium+ PDU with RackLink™ User Manual (I-00826) at www.legrandav.com.

- Only use attachments and accessories specified by the manufacturer.
- Read all instructions before using the product.

INSTRUCTIONS IMPORTANTES SUR LA SÉCURITÉ—FR


CONSERVER CES INSTRUCTIONS - Ce manuel contient des instructions importantes qui doivent être suivies lors de l'installation et de la maintenance de l'unité de distribution d'énergie (PDU).

Pour obtenir des instructions de sécurité complètes, reportez-vous au manuel d'utilisation Premium+ PDU with RackLink™ User Manual (I-00826) à www.legrandav.com.

- Utiliser uniquement les accessoires spécifiés par le fabricant.
- Lisez toutes les instructions avant d'utiliser le produit.


Supplied Components and Hardware

After carefully opening all product packaging, identify the supplied components and hardware shown. If pieces are missing or damaged, please report it immediately to Technical Support at av.middleatlantic.techsupport@legrand.com or (866) 977-3901. Keep the original packaging in a safe place for future use.


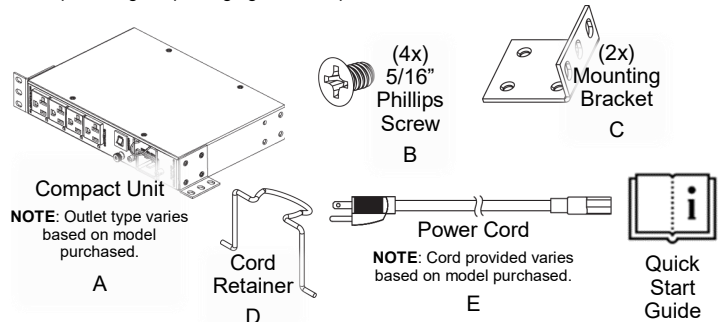


Setting Up Your RackLink Device (Continued)

- Use screwdriver, (2x) removed screws, and additional (2x) 5/16" screws (B) to attach a mounting bracket (C) to each side of the unit as needed (4x screws pre bracket). **(FIGURE B)**

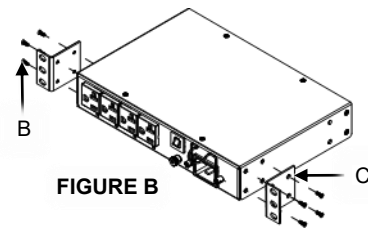

NOTE: Mounting brackets may be attached in front or back of the unit and in different orientations to suit your specific mounting needs. **(FIGURE C)**

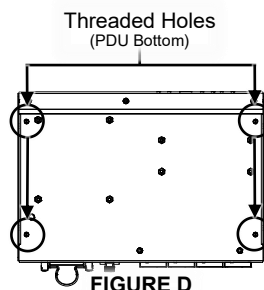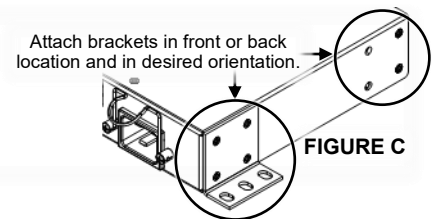

NOTE: You can even attach the PDU to LeverLock™ plates using (4x) 6-32 screws (not provided) in the threaded holes on the bottom of the unit. **(FIGURE D)**

Connecting Your PDU

- 1. Install the cord retainer (D) by inserting two ends of the retainer into the two tiny holes adjacent to the inlet as shown. (FIGURE D)
- 2. Connect the power cable (E) to the inlet, and position the retainer to secure the cable as shown. (FIGURE E)

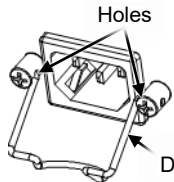


FIGURE D

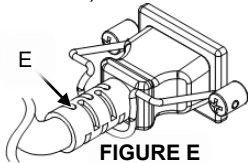


FIGURE E

- 3. Connect the other end of the power cable to an appropriately rated receptacle.
- 4. Your PDU then powers up and performs a brief self-test.

- 5. Connect a standard Cat5e cable (or better, not provided) to the ETHERNET port on your PDU.
- 6. Connect the other end of the Cat5e cable to your network.

Networking Defaults

Your PDU uses DHCP as the default network configuration. The default static address is 192.168.1.200.

Installing the RackLink Discovery Tool Software

- 1. If you haven't done so already, download the Discovery Tool onto your workstation from the Power Downloads page at:
<https://www.legrandav.com/resources/power-downloads>
 - 2. Install the application on your workstation. For more information about installing the Device Discovery tool, refer to the Premium+ PDU with RackLink™ User Manual (I-00826) at www.legrandav.com.
- If you have questions, please contact support at av.support@legrand.com or (866) 977-3901.

Initial Network Configuration via Device Discovery

- 1. After launching your RackLink Device Discovery program, the tool automatically discovers all PDUs on the subnet to which you are connected.
Use the Discover button to refresh the screen and discover any newly connected PDUs.
By default, the PDU is set for DHCP. You can identify each device by the MAC address or IP address.

NOTE: You may need to disable your Windows firewall to discover your PDU. Contact your network administrator for assistance.

- 2. Click Device Control to access the default web interface for a specific device.

Default Web Interface Address and Account Information

- Default network interface address:
192.168.1.200
- Default administrator account credentials:
Username: **admin**
Password: **admin**
- Default user account credentials:
Username: **user**
Password: **user**

After logging in for the first time, the system forces you to change default passwords for security purposes.

WARRANTY

For warranty information, refer to www.legrandav.com/policies/warranty_information.

Contacting Corporate Headquarters

P: (866) 977-3901 | F: (877) 894-6918 | www.legrandav.com | av.middleatlantic.techsupport@legrand.com

Contacting Middle Atlantic Canada

P: (888) 766-9770 | F: (888) 599-5009 | www.legrandav.com | av.canada.customerservice@legrand.com

Contacting Middle Atlantic Europe, Middle East, and Africa (EMEA) Technical Support

P: +31 495-726-003 | av.emea.middleatlantic.support@legrand.com

United States (US)

Legrand | AV Headquarters
6436 City West Parkway
Eden Prairie, MN, 55344, USA

European Union (EU)

Legrand AV Netherlands
B.V. Franklinstraat 14 6003
DK, Weert, Netherlands

United Kingdom (UK)

Starline Holding Technology Ltd.
(Authorized Representative)
Unit C, Island Rd.
Reading RG2, 0RP- UK

At Legrand AV Inc. we are always listening. Your comments are welcome. Legrand AV is an ISO 9001 and ISO 14001 Registered Company.

**MIDDLE
ATLANTIC®**
A brand of **legrand**