#### SAFETY

This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- •Children should be supervised to ensure that they do not play with the appliance.
- •This appliance should not be left unattended during operation.
- •Te appliance should be operated on a flat stable surface, NEVER on an incline.
- •Do not move the boiler when it is in use.
- •Be aware that the walls of the boiler are hot when operation and could cause burns.
- •If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- •This appliance contains a manual reset thermal cutout. It also contains a thermal fuse. The thermal fuse must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.
- •Appliance not intended to be immersed for cleaning.

#### **CLEANING**

Clean your boiler after use with a weak solution of dishwashing liquid. Scrub the inside with a nylon brush or similar. Wipe down the outside with a damp cloth. Do not immerse in water.




Importen

Flak AS Skibåsen 37 4636 Kristlansend S

Varenr: 1032129

## **INSTRUKSJONS MANUAL**

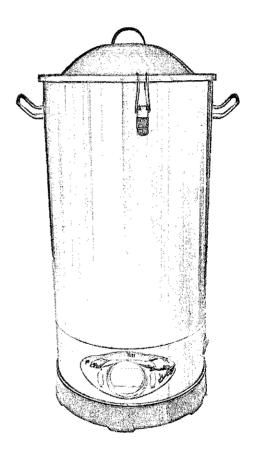


# **ELECTRIC CRAB COOKER**

## IT022901/AD-A3

This electric boiler has a fully integrated element so is ideal for boiling products where an exposed element would be a disadvantage.

It is ideal as a crab/crayfish cooker
CAN BE USED OUTDOOR BUT UNDER A ROOF.
CAUTION WITH WATER ON THE DISPLAY.
PLEASE READ ALL OF THESE INSTRUCTIONS
CAREFULLYBEFORE USING YOUR BOILER

### CONSTRUCTION:

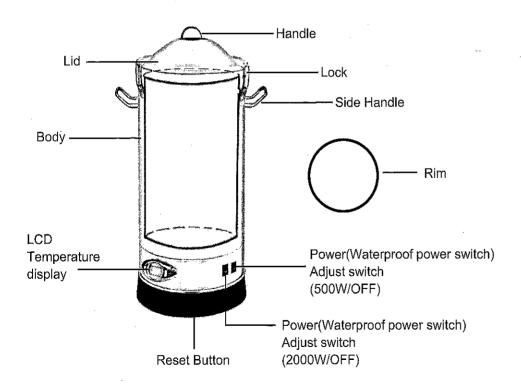

### 1. ON/OFF switch

### 2. Reset button

The boiler will auto switch off as overheat protection. Please refill water and push the reset button at the bottom of boiler for re-start.

3. Power adjust switch(500W/2000W/2500W) 500W: Plug on the 500W switch, indicator light turns on, boiler heating:

2000W: Plug on the 2000W switch, indicator light turns on, boiler heating with power 2000W;

2500W: Plug on both the 500W & 2000W switch, indicator lights turn on, boiler heating with full power 2500W.

### USES:

CRAB / CRAYFISH BOILER: Add sufficient water to cover all crabs / crayfish. Bring to the boil. Add crustaceans, fit the lid and clamp it in place. Boil until cooked.