



CREATE YOUR SPACE

ASSEMBLY GUIDE

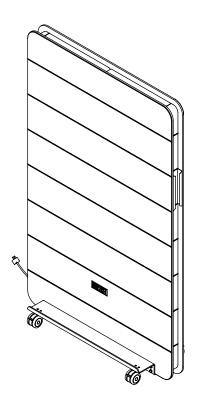

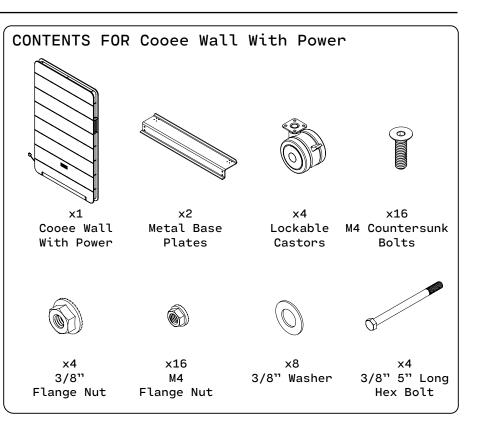



x1 Cooee Wall With Power

!\ CAUTION

0

- Clear open space for install
- May need need a sturdy table.
 - + 65lbs lift required

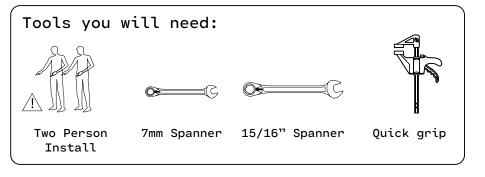

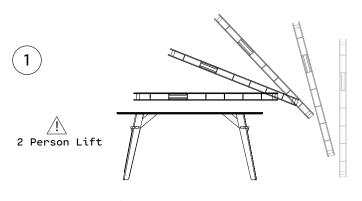

a. Lay Cooee Wall on table.



b.Hang bottom end off the table to allow for base assembly.

PAGE 1





COOEE WALL WITH POWER

ASSEMBLY GUIDE




а.

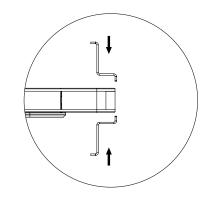

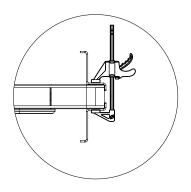

b. Clamp with quick grip. Ensure Holes are aligned.

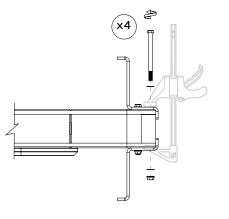


Lay metal bases on Cooee Wall.

З)

4


a.

Insert 3/8 bolt, Washer and Flange Nut. Ensure all bolts are in the same direction

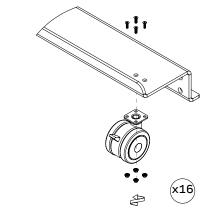


a.

Insert countersunk bolts, castors and M4 Flange nuts then tighten with 7mm Spanner. Repeat for all bolts

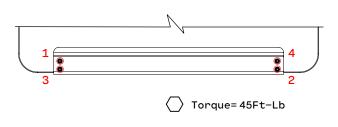

b.

Clamp with quick grip. Tighten bolts in order and repeat to prevent one bolt tighter than the other. Ensure Hole's are aligned.

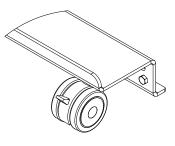

b.

Ensure all bolts and castor's are secure


PAGE 2





CREATE YOUR SPACE



 ASSEMBLY GUIDE

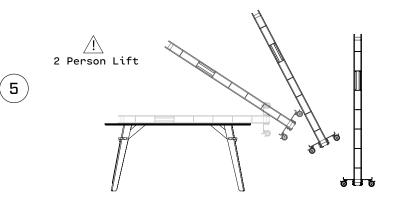



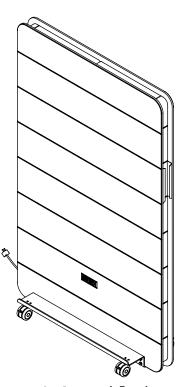

x1 Assembled Cooee Wall With Power

CAUTION & WARNING STATEMENT.

• Ensure wheels are locked and stationary when attaching Accessories.

• Cooee Wall With Power has internal wiring and live power when plugged in.

• Do not screw or drill anywhere unless stated on the Func Assembly guide.

• Escape routes must no be blocked.

• Disconnect Power when moving.

• Move slow, especially when crossing door thresholds etc.

• Ensure all cables have no loops and are out of foot traffic. (No trip hazards)

• Do not load heavy accessories on one side of the wall, as it increase the chance of tipping.

b.

Stand up and ensure Cooee Wall is able to move and castors can be locked.