
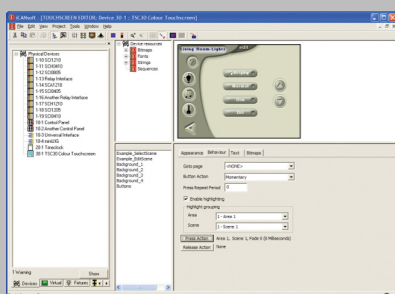


Features


- PC Node - Serial Port to iLight network interface
- Includes a copy of iCANsoft on CD to allow the iLight network to be configured from a PC
- Includes USB cable
- Also available is the PC node only for adding RS485 input to any iLight network

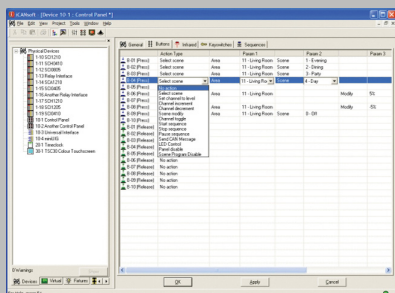

Overview

This kit allows engineers to connect their PC to the iLight system and configure the network using iCANsoft.

Dimensions

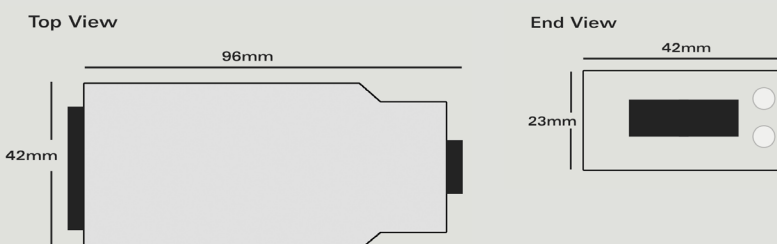

Voltage



PELV

CLASS 2 (US)



Standards



iLight

20 Greenhill Crescent, Watford Business Park,
Watford, Herts, WD18 8JA. UK

T: +44 (0)1923 495496 F: +44 (0)1923 228796

E: enquiries@iLight.co.uk www.iLight.co.uk

Dealer: