


beurer

MP 84
Special Edition

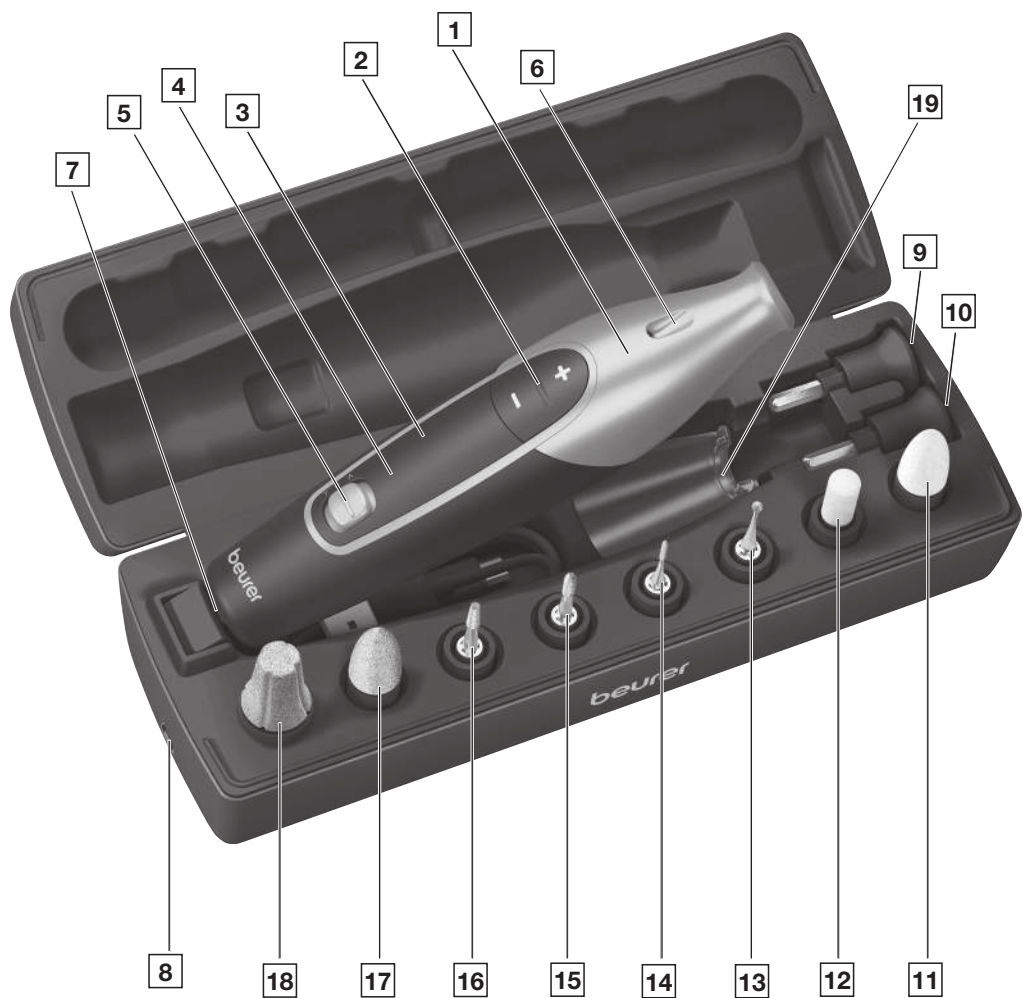

EN Manicure/pedicure set
Instructions for use





Read these instructions for use carefully. Observe the warnings and safety notes. Keep these instructions for use for future reference. Make the instructions for use accessible to other users. If the device is passed on, provide the instructions for use to the next user as well.

Table of contents

1. Warnings and safety notes.....	4	6. Cleaning and maintenance.....	9
2. Signs and symbols.....	6	7. Accessories and replacement parts.....	9
3. Included in delivery	6	8. Disposal.....	9
4. Device description.....	7	9. Technical data	10
5. Usage	7	10. Warranty	10

1. WARNINGS AND SAFETY NOTES

⚠ WARNING

- The device must only be used for the purpose for which it was designed and in the manner specified in the instructions for use. Any improper use may be dangerous.
- The device is only intended for domestic/private use, not for commercial use.
- This device may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely, and are fully aware of the consequent risks of use.
- Children must not play with the device.
- Cleaning and user maintenance must not be performed by children unless supervised.
- Do not use the device if it shows signs of damage or does not function properly. In such cases, contact Customer Services.
- Repairs must only be carried out by Customer Services or authorised retailers.
- Under no circumstances should you open or repair the device yourself, as correct functioning of the device can no longer be guaranteed should you do so. Failure to observe this will invalidate the warranty.

- Check the results regularly during the treatment. It is particularly important for diabetics to do so as they have a lower sensitivity to pain and could injure themselves more easily. The attachments **9** **10** **11** **17** **18**, which are included, are generally suitable for diabetics as they are only intended for use over larger areas and not spot treatment.
- In contrast, attachments **12** to **16** are less suitable for diabetics. Always work very carefully. If you have any doubts, consult your doctor.
- The device may heat up faster during prolonged, intensive use, for example when removing calluses on the feet. Allow the device to cool down for a relatively long time between individual applications to prevent skin burns. For your own safety, continuously check the heat generated by the device. This applies in particular to persons that are not as sensitive to heat as others.
- The manufacturer is not liable for damage resulting from improper or incorrect use.
- Keep packaging material away from children. to avoid danger of suffocation.
- In the event of defects and operational faults, switch off the device immediately.
- Only use the device with the supplied accessories.
- Do not use on animals.
- Do not allow the device to come into contact with water (except in the case of cleaning with a slightly damp cloth). Water must never enter inside the device. Never submerge the device in water. Never use the device in the bath, in the shower, in a swimming pool or above a sink filled with water. If water enters the housing of the device nevertheless, immediately disconnect the device from the mains supply and contact your electronics retailer or Customer Services.
- Make sure that no hair can get caught in the rotating attachments when using the device. Use a hair tie for your safety.
- Hands must always be dry when using the device and mains adapter plug.
- Wear appropriate protective equipment (FFP2 mask, protective gloves and protective glasses) when using on acrylic, gel or artificial nails.

Intended use

This device is intended for the treatment of hands (manicure) and feet (pedicure) only.

NOTE

- Keep the device away from sources of heat.
- Never use the device under a blanket, pillow or cushion, etc.
















⚠ CAUTION

Notes on handling batteries

- If your skin or eyes come into contact with fluid from a battery cell, wash the affected areas with water and seek medical assistance.
- Protect batteries from excessive heat.
- Risk of explosion! Never throw batteries into a fire.
- Do not disassemble, split or crush the batteries.
- Batteries must be charged correctly prior to use. The instructions from the manufacturer and the specifications regarding correct charging in these instructions for use must be observed at all times.
- Fully charge the battery prior to initial use. In order to achieve as long a battery service life as possible, fully charge the battery at least 2 times a year.

2. SIGNS AND SYMBOLS

The following symbols are used on the device, in these instructions for use, on the packaging and on the device's type plate:

	Read the instructions		Manufacturer
	Indicates a potentially imminent danger. If it is not avoided, death or serious injury may result.		Indicates a potentially harmful situation. If it is not avoided, the system or something in its vicinity may be damaged.
	Indicates a potentially imminent danger. If it is not avoided, slight or minor injuries may result.		CE labelling This product satisfies the requirements of the applicable European and national directives.
	Disposal in accordance with the Waste Electrical and Electronic Equipment EC Directive – WEEE		Separate the packaging elements and dispose of them in accordance with local regulations.
	Separate the product and packaging elements and dispose of them in accordance with local regulations.		Marking to identify the packaging material. A = Material code, B = Material number: 1-7 = Plastics, 20-22 = Paper and cardboard
	The products demonstrably meet the requirements of the Technical Regulations of the EAEU		Product information Note on important information
	United Kingdom Conformity Assessed Mark		Polarity of d.c. power connector
	Importer symbol		

3. INCLUDED IN DELIVERY

Check that the device packaging has not been tampered with and make sure that all contents are present. Before use, ensure that there is no visible damage to the device or accessories and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Services address.

- 1 manicure/pedicure set
- 10 high-quality attachments made from sapphire and felt
- 1 protective nail dust cap
- 1 USB-C cable
- 1 charging and storage case
- 1 instructions for use

4. DEVICE DESCRIPTION

The associated drawings are shown on page 3.

- | | |
|--|--------------------------------------|
| [1] Manicure/pedicure device | [11] Felt cone |
| [2] +/- speed regulation | [12] Crystal callus file |
| [3] Speed setting display | [13] Round sapphire cutter |
| [4] LED display for direction of rotation (red for anti-clockwise rotation; green for clockwise rotation) | [14] Nail cutter |
| [5] Slide switch for clockwise/anti-clockwise rotation and OFF position | [15] Flame-shape cutter |
| [6] LED light | [16] Cylindrical cutter |
| [7] USB-C connection (device) | [17] Sapphire cone |
| [8] USB-C connection (charging and storage case) | [18] Sapphire callus file |
| [9] Fine-grain sapphire wheel | [19] Protective nail dust cap |
| [10] Coarse-grain sapphire wheel | |

5. USAGE

1. Charge the device for approx. 3 hours before the first use. You can either charge the device directly via the USB-C connection on the device **[7]** or via the USB-C connection on the charging and storage case **[8]**.
2. Connect the USB-C connection (device) **[7]** / (charging and storage case) **[8]** to a suitable mains adapter (mains adapter not included in delivery) or via a device with a suitable interface.
3. When the 3 blue charger indicator lights **[3]** flash continuously, it means the battery is charging. Once all 3 LEDs are permanently illuminated, the device is fully charged. One charge is sufficient for approx. 2 hours of operation.













Before using the device, please do not carry out pre-treatment in a water bath, as the callus attachments are less effective on soaked or wet skin.

4. Make sure that the device is switched off beforehand.
5. Select the desired attachment part and carefully press it onto the axle of the device. To remove, pull apart the attachment and the device in opposing directions.
6. Switch on the device by moving the sliding switch **[5]** down (anti-clockwise rotation, LED lights up red) or up (clockwise rotation, LED lights up green).
7. You can select the speed of the drive axle using the plus (+) and minus (-) speed control buttons **[2]**. Start each application at a low speed and then increase as required. Blue LEDs light up on the speed setting display **[3]** depending on the selected speed.
8. Do not press too hard and always carefully move the attachments towards the area to be treated. Move the device over the area to be treated and apply slight pressure while slowly moving the device in circles.
9. When filing, always move from the outside of the nail towards the tip. Check the results regularly during the treatment. Stop treatment as soon as it becomes unpleasant. Do not remove all calluses to maintain natural skin protection.
10. Ensure the axle can always rotate freely. The axle must not be permanently blocked, as otherwise the device will become too hot and may become damaged.
11. Apply moisturiser to the treated areas after each use.



The device switches off if an attachment is prevented from moving for approx. 3 seconds during use. To restart the device, switch it briefly off and then on again.

Attachments

<p>Fine-grain sapphire wheel ⁹</p> <p>Suitable for filing nails to reduce length. Whilst the sapphire disk rotates, the external housing remains fixed to prevent friction burns to the skin around the nails.</p>	
<p>Coarse-grain sapphire wheel ¹⁰</p> <p>Suitable for filing thicker nails to reduce length. Whilst the sapphire disk rotates, the external housing remains fixed to prevent friction burns to the skin around the nails.</p>	
<p>Felt cone ¹¹</p> <p>Suitable for smoothing and buffing nail tips after filing and for cleaning the surface of the nails. Position the manicure tool and move around the nail in a constant circular motion.</p>	
<p>Crystal callus file ¹²</p> <p>Coarse crystal callus attachment to quickly remove thick hard skin or large calluses on the sole of the foot and heel.</p>	
<p>Round sapphire cutter ¹³</p> <p>Suitable for removing corns. Take care to remove the corn slowly, layer by layer to prevent damage to the healthy skin beneath.</p>	
<p>Nail cutter ¹⁴</p> <p>Suitable for exposing ingrown nails and removing dead nail parts. When using this attachment, use at a low speed.</p>	
<p>Flame-shape cutter ¹⁵</p> <p>Suitable for removing ingrowing nails.</p>	
<p>Cylindrical cutter ¹⁶</p> <p>Suitable for smoothing rough and ridged toenail surfaces. Simply, place the cylindrical cutter horizontally on the nail surface and removed the rough layer with slow circular movements.</p>	
<p>Sapphire cone ¹⁷</p> <p>Suitable for removing dry skin and softening calluses on the sole and heel. Take care not to remove hardened skin entirely to protect the healthy skin beneath. File until a thin layer remains then moisturise to soften.</p>	
<p>Sapphire callus file ¹⁸</p> <p>For removing calluses on the soles of the feet and heel. This attachment is intended for application on large areas.</p>	

Protective nail dust cap ¹⁹

Captures nail dust as you file to minimise inhalation and clean up time.



6. CLEANING AND MAINTENANCE

⚠ WARNING

Risk of electric shock

Unplug the device each time before cleaning. Clean the device using only the method specified. Never submerge the device or USB-C cable in water or other liquids.

- Do not use any chemical or abrasive cleaning agents.
- Clean the device with a slightly damp cloth. If it is very dirty, you can also moisten the cloth with a mild soapy solution.
- For hygienic reasons, the attachments can be cleaned with a cloth moistened with alcohol.

7. ACCESSORIES AND REPLACEMENT PARTS

To purchase accessories and replacement parts, please visit www.beurer.com or contact the service address for your country (see the service address list). Accessories and replacement parts are also available from retailers.

Designation	Item number and/or order number
Attachment set (includes the following attachments) 1 fine-grain sapphire wheel 1 coarse-grain sapphire wheel 1 felt cone 1 crystal callus file 1 round sapphire cutter 1 nail cutter 1 flame-shape cutter 1 cylindrical cutter 1 sapphire cone 1 sapphire callus file 1 protective nail dust cap	110.025

8. DISPOSAL

For environmental reasons, do not dispose of the device in household waste at the end of its service life. Dispose of the device at a suitable local collection or recycling point in your country. Observe the local regulations for material disposal. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment).

If you have any questions, please contact the local authorities responsible for waste disposal.

You can obtain the location of collection points for old devices from the local or municipal authorities, local waste disposal company or your dealer, for example.



The empty, completely flat batteries must be disposed of in specially designated collection boxes, at recycling points or at electronics retailers. You are legally required to dispose of the batteries. The codes below are printed on rechargeable batteries containing harmful substances:

Pb = battery contains lead,
Cd = battery contains cadmium,
Hg = battery contains mercury.



9. TECHNICAL DATA

Power supply	Input: 5.0 V === 1.0 A; 5.0 W
Case dimensions:	223 x 74 x 67.5 mm
Device dimensions:	155 x 37.4 x 38.3 mm
Weight	Case weight including accessories: approx. 323 g Device weight: approx. 135 g
Battery: Capacity Nominal voltage Type designation	1500 mAh 3.7 V Lithium-ion

Subject to technical changes.

The Declaration of Conformity for this product can be found at the following address:
<https://www.beurer.com/web/we-landingpages/de/cedclarationofconformity.php>

10. WARRANTY

Further information on the warranty and warranty conditions can be found in the warranty leaflet supplied.



Beurer GmbH • Söflinger Str. 218 • 89077 Ulm, Germany
www.beurer.com • www.beurer.healthguide.com
www.beurer-gesundheitsratgeber.com



UK-Importer: Beurer UK Ltd.
Suite 16, Stonecross Place • Yew Tree Way • WA3 2SH Golborne
United Kingdom

