

FWM 45



EN Massaging foot warmer Instructions for use

ENGLISH



Read these instructions for use carefully. Observe the warnings and safety notes. Keep these instructions for use for future reference. Make the instructions for use accessible to other users. If the device is passed on, provide the instructions for use to the next user as well.

Contents

1. Included in delivery			
2. Important instructions		3	
3. Intended use	6	8. What if there are problems?	8
4. Operation	6	9. Technical data	8
4.1 Initial use	6	10. Guarantee / Service	8
4.2 Switching on			
4.3 Massage settings/heat settings	6		
4.4 Switching off			

Explanation of symbols

The following symbols are used on the device, in these instructions for use, on the packaging and on the type plate for the device:

Ţ	WARNING: Warning of risks of injury or health hazards		
<u> </u>	CAUTION: Safety information about possible damage to appliance/accessories		
i	NOTE: Important information		
	Read the instructions	<u></u>	Do not insert pins
	Do not use folded or rucked	<u></u>	Not to be used by very young children (0 - 3 years)
•••	Manufacturer		
	The device has double protective insulation and therefore complies with protection class 2.		
	For indoor use only		
IPX1	Protected against vertically falling drops of water		
IS -	Switch mode power supply unit		
VI	Energy efficiency level 6		
IP20	Protected against solid foreign objects 12.5 mm in diameter and larger		

	Direct current			
0	Safety isolating transformer, short-circuit proo			
♦•• ◆	Polarity of d.c. power connector			
K	Do not use the power adapter if the plug is damaged.			
A	Please dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment).			
•	Separate the packaging elements and dispose of them in accordance with local regulations.			
Z _A S	Marking to identify the packaging material. A = Material code, B = Material number: 1-7 = Plastics, 20-22 = Paper and cardboard			
(F	Separate the product and packaging elements and dispose of them in accordance with local regulations.			
CE	This product satisfies the requirements of the applicable European and national directives.			
UK	United Kingdom Conformity Assessed Mark			
EAC	The products demonstrably meet the requirements of the technical Regulations of the EAEU.			
×	Do not wash	₩ (Do not iron	
		\boxtimes	Do not bleach	
\boxtimes	Do not dry-clean		Do not dry in a tumble dryer	


1. Included in delivery

Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are present. Before use, ensure that there is no visible damage to the device or accessories and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.

- 1 Foot warmer with fleece lining
- 1 Mains adapter
- 1 Instructions for use

1.1 Unit description

- 1. Cable
- 2. Mains adapter
- Control
- 4. Sliding switch for massage settings (0-1-2)
- 5. Sliding switch for heat settings (0-1-2)
- 6. Fleece lining
- 7. Foot warmer

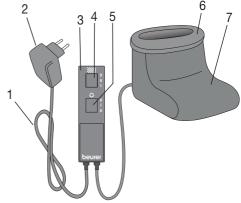

2. Important instructions Retain for future reference



∕N WARNING

- Non-observance of the following notes may result in personal injury or material damage (electric shock, skin burns, fire). The following safety and hazard information is not only intended to protect your health and the health of others, it should also protect the product.
 For this reason, pay attention to these safety notes and include these instructions when handing over the product to others.
- This foot warmer must not be used by persons who are not sensitive to heat or by other vulnerable persons who may not be able to react to overheating (e.g. diabetics, people with skin alterations due to illness or scarred tissue in the application area, after taking pain relief medication or alcohol).
- This foot warmer must not be used by very young children (0-3 years old) as they are unable to respond to overheating.
- This foot warmer can be used by children older than 3 and younger than 8 years of age provided they are supervised. For this, the control must always be set to the minimum temperature.
- This foot warmer may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the foot warmer safely, and are fully aware of the consequent risks of use.
- Children must not play with the foot warmer.
- Cleaning and user maintenance must not be performed by children unless supervised.
- This foot warmer is not designed for use in hospitals.

- This foot warmer is only intended for domestic/private use, not for commercial use.
- This foot warmer must not be used to keep animals warm.
- Do not use this foot warmer with shoes.
- Do not insert pins.
- Do not use folded or rucked.
- Do not use if wet.
- Use only the original mains adapter provided (see "Technical data" chapter).
- This foot warmer must only be connected to the power voltage that is specified on the label.
- If the foot warmer is being used over several hours, we recommend that you set the lowest temperature setting on the controller to avoid overheating the feet, which may lead to burns to the skin.
- The electrical and magnetic fields emitted by this foot warmer may interfere with the function of a pacemaker. However, they are still well within the limits: electrical field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 millitesla. Please consult your doctor and the manufacturer of your pacemaker before using this foot warmer.
- Do not pull, twist or make sharp bends in the cables.
- If cable and control are not positioned properly, there may be a risk of becoming entangled in, being strangled by, tripping over, or stepping on the cable and control of the foot warmer. The user must ensure that excess lengths of cable, and cables in general, are safely routed.
- Please check this foot warmer frequently for signs of wear and tear
 or damage. If any such signs are evident, if the foot warmer has been
 used incorrectly or if it no longer heats up, it must be checked by the
 manufacturer before being switched on again.
- Under no circumstances should you open or repair the foot warmer (including the accessories) yourself because faultless functionality can no longer be guaranteed thereafter. Failure to observe this will invalidate the guarantee.
- If the power connection cable of this foot warmer is damaged, it must be disposed of. If it cannot be removed, the foot warmer must be disposed of.
- Do not expose control and cables to direct sunlight.
- When this foot warmer is switched on:
 - Do not place any sharp objects on it
 - Do not place any heat sources, such as hot water bottles, heat pads or similar, on it

- The electronic components in the control warm up when the foot warmer is in use. For this reason, the control must never be covered or placed on the foot warmer when it is in use.
- Allow the foot warmer to cool down before storing it away. Otherwise the foot warmer may get damaged.
- To avoid severe creasing in the foot warmer, do not place any objects on top of it while it is being stored.
- It is essential to observe the information relating to the following chapters: Operation, Cleaning and maintenance, Storage.
- If you should have any questions about using our devices, please contact Customer Services.

3. Intended use



WARNING

This product is intended for warming and massaging human feet.



This foot warmer is suitable for feet up to shoe size 47 (EU)/12.5 (UK).

4. Operation

4.1 Initial use

- Connect the mains adapter cable to the foot warmer control.
- Insert the mains adapter into the socket.

4.2 Switching on

- The fastest way to warm up the foot warmer is to initially select the highest heat setting (setting 2). The setting can be reduced later if necessary.
- The foot warmer can, of course, be used at any time, even when it is switched off: its fleecy fabric will warm the feet if there is no socket nearby.

4.3 Massage settings/heat settings

- Massage only: (*****)

Setting I (low): relaxing massage

Setting II (high): invigorating massage

The sliding switch for the heat settings is in the "0" position.

- Heat only: (☆)

Setting I: minimum heat

Setting II: maximum heat


The sliding switch for the massage settings is in the "0" position.

- Massage with heat: (∜₩, ♥)

Massage and heat setting freely selectable.

- No massage or heat:

Both sliding switches are set to "0".

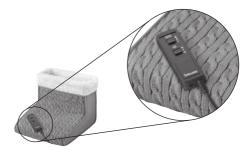



WARNING

If the foot warmer is being used over several hours, we recommend that you select the lowest heat setting on the control to avoid overheating the feet, which may lead to burns to the skin.

4.4 Switching off

To switch the foot warmer off, set the sliding switch for massage and heat settings to the setting "0" (OFF).



NOTE

If the foot warmer is not in use, set the sliding switch to "0" (OFF). Disconnect the mains adapter from the foot warmer. Remove the mains adapter from the socket.

5. Cleaning and maintenance



WARNING

Before cleaning, always remove the mains adapter from the socket first. Then disconnect the mains adapter cable from the foot warmer control. Otherwise, there is a risk of damage.



IMPORTANT

The control must never come into contact with water or other liquids, as this may cause damage

- To clean the control, use a dry, lint-free cloth. Do not use any chemical or abrasive cleaning agents.
- Small marks on the foot warmer can be removed with a damp cloth and, if necessary, with a little liquid detergent for delicate laundry.



IMPORTANT

Please note that the foot warmer must not be washed, chemically cleaned, wrung out, tumble dried, put through a mangle or ironed. Failure to observe this may result in damage to the foot warmer.

- The removable fleece lining can be washed by hand.
- Use a delicate laundry detergent and measure it out according to the manufacturer's instructions.



WARNING

Only use the foot warmer again once the foot warmer and fleece insert have fully dried. Otherwise, there is a risk of damage.

6. Storage

If you do not plan to use the foot warmer for a long period of time, we recommend that you store it in the original packaging.

7. Disposal

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the unit at a suitable local collection or recycling point. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal.



Subject to errors and changes

8. What if there are problems?

Problem	Cause	Solution
The foot warmer does not warm up or the massage function cannot be activated while: - the mains adapter is connected to a working socket. - the foot warmer control is connected to the mains adapter cable. - both sliding switches are set to setting 2 (heat + massage).	The foot warmer is faulty.	Send the foot warmer for servicing.

9. Technical data

Foot warmer technical data: See type plate on the foot warmer control.

For technical data about the mains adapter, see the type plate label on the mains adapter.

Permissible mains adapter: EU mains plug: IVP1200-1500G UK mains plug: IVP1200-2000B

IVP1200-2000B (UK mains plug)
100 V-240 V
50/60 Hz
12.0 V
2.0 A
24.0 W
86.5%
84.8%
0.09 W
2 2 8

10. Guarantee / Service

Further information on the guarantee and guarantee conditions can be found in the guarantee leaflet supplied.



UK UK-Importer: Beurer UK Ltd.

