beurer

BY 33





EN Baby monitor Instruction for Use.....2

beurer Grafik		
Checked according to "Artwork prüfen und freigeben"		
Released without change		
Released after change		
Change and resubmit		
23.10.24 RT		

((

ENGLISH



Read these instructions for use carefully and keep them for later use, be sure to make them accessible to other users and observe the information they contain.

/ WARNUNG

- The device is only intended for domestic/private use, not for commercial use.
- This device may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely, and are fully aware of the consequent risks of use.
- · Children must not play with the device.
- Do not use the device if it shows signs of damage or does not function properly. In such cases, contact Customer Services.
- Repairs must only be carried out by Customer Services or authorised suppliers
- Ensure that the cable is out of the reach of children (at least 1.5 m away). There is a risk of strangulation.
- Cleaning and user maintenance must not be performed by children unless supervised.
- If the mains connection cable of this device is damaged, it must be disposed of. If it cannot be removed, the device must be disposed of.

Contents

1. Included in delivery18	7. Use25
2. Signs and symbols18	8. Cleaning and maintenance26
	9. What if there are problems?27
4. Intended use22	10. Disposal28
	11. Technical specifications28
6. Initial use24	12. Warranty / Service29

1. INCLUDED IN DELIVERY

Check that the device packaging has not been tampered with and make sure that all contents are present. Before use, ensure that there is no visible damage to the device or accessories and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Services address.

- · Baby monitor consisting of baby unit and parent unit
- · Two identical mains part plugs
- . 2 x NiMH batteries for the parent unit
- · These instructions for use

2. SIGNS AND SYMBOLS

The following symbols appear in these instructions:



WARNING

Warning instruction indicating a risk of injury or damage to health



IMPORTANT

Safety note indicating possible damage to the device/accessory



Product information

Note on important information

	Read the instructions			
A	Disposal in accordance with the Waste Electrical and Electronic Equipment EC Directive – WEEE			
Pb Cd Hg	Do not dispose of batteries containing hazardous substances with household waste			
⊹⊕ ◆	Polarity of d.c. power connector			
•••	Manufacturer			
	Only use indoors.			
CE	CE labelling This product satisfies the requirements of the applicable European ar national directives.			
کھے م	Marking to identify the packaging material. A = Material code, B = Material number: 1-7 = Plastics, 20-22 = Paper and cardboard			
RECYCLE	Separate the product and packaging elements and dispose of them in accordance with local regulations.			
UK	United Kingdom Conformity Assessed Mark			

Energy efficiency class 6

3. WARNINGS AND SAFETY NOTES

Notes for the ECO mode

With Eco+ mode you can minimise the radiation between the baby and parent units when the baby is quiet. This ensures the safety of your baby as there is no exposure to any unnecessary radiation. The device automatically switches to Eco+ mode, as soon as no noise is being transmitted.

Safety notes



Warning:

- Always position the device and power cord out of the reach of children. The power cord could result in strangulation or cause injury to children.
- Keep small parts out of the reach of children (risk of swallowing).
- Keep packaging material away from children (risk of suffocation).
- Never place the baby unit in the cot or within the reach of your child.
- Place the baby unit 1.5 m away from your baby, in order to minimize the possibility of electrosmog pollution and noise pollution.
- Make sure that cables are out of the reach of your child (risk of electric shock).
- Always make sure that the devices are fully functioning before use and check that the devices have sufficiently charged batteries when on battery operation.
- Only use the power supply units included with the delivery (risk of fire and electric shock).



Important: To avoid damage to the device, please observe the following:

- Never submerge the devices in water. Never rinse it in running water.
- Never use the devices in a damp environment.
- Do not use the cable to pull the adapter plug out of the socket.
- Disconnect the adapter plug from the mains when the device is not in use.
- The device and the power supply unit should not come into contact with hot surfaces or sharp-edged objects.
- Do not use any additional parts that are not recommended by the manufacturer or offered as equipment.
- The plug-in power unit must be operated only from a power supply as specified on it.
- The appliance should only be operated with the power unit provided.
- After use, before cleaning and changing any accessory parts, the power unit should always be disconnected.

Notes on handling batteries



Warning:

- Swallowing batteries can be extremely dangerous. Keep batteries out of the reach of small children. Should a battery be swallowed, seek medical assistance immediately.
- Batteries must not be recharged, taken apart, thrown into an open fire or short circuited.
- Batteries can contain toxins that are harmful to health and the environment. Always dispose of batteries in accordance with applicable legal regulations. Do not dispose of batteries with the normal household waste.
- Do not expose the batteries to excessive heat such as sunlight, fire, etc.



Important:

- · Replace weak batteries before they discharge completely.
- Leaking batteries may damage the device. If you do not intend to use the device for longer periods, remove the batteries from the battery compartment.w
- If a battery has leaked, put on protective gloves and clean the battery compartment with a dry cloth.

General notes



- Repairs must only be carried out by Customer Services or authorized suppliers. Under no circumstances should you open or repair the device yourself, as faultless functionality could no longer be guaranteed thereafter. Failure to comply will invalidate the warranty.
- If you should have any questions about using our devices, please contact either your retailer or Customer Services.

4. INTENDED USE

- Only use the device to monitor your baby when you cannot mind your baby directly. It is not a substitute for your own personal, responsible supervision!
- The device is only intended for domestic/private use, not for commercial use.
- This device is not intended for use by people (including children) with restricted physical, sensory or mental skills or a lack of experience and/or a lack of knowledge, unless they are supervised by a person who has responsibility for their safety or are instructed by him in how to use the device.
- Children should be supervised around the device to ensure they do not play with it.
- Improper use can be dangerous.

5. UNIT DESCRIPTION

Overview of parent unit



- 1. LINK/POWER LED
- 2. Noise level light display
- 3. High ◀+/Low ◀- button
- 4. O button
- 5. Mains part socket (underneath)
- 6. Speaker

Overview of baby unit



- 1. POWER LED 2. ON/OFF O
- - 3. Microphone
 - 4. Mains part socket (rear)

6. INITIAL USE

Baby unit

Operation with mains part

Position the baby unit so that it is in an elevated position and is not in proximity to any other devices that may cause interference.

Using the mains part plug, connect the baby unit to a socket.

The device automatically switches on.

The power LED will light up green.

To switch the device off press the ON/OFF button for at least 2 seconds or unplug the mains part. The power LED will go out.

To switch the device on again press the ON/OFF button for approx. 2 seconds.

Parent unit

Set up the parent unit in the room where you are going to be.

Battery operation - charging



To ensure optimal safety, the parent unit is designed so that it can only be operated with batteries inserted.

The battery must be charged for at least 16 hours before the device can be first used independently of the mains; you may use the device during this period.

Switch the parent unit on by pressing the O button for 2 seconds. The power LED of the parent unit will light up green. The device is active.

If the parent unit battery is low the unit will beep twice. If the device is not connected to a socket, it will switch off automatically after a short period. The power LED will go out.

Operation with mains part

Using the mains part plug, connect the parent unit incl. battery to a socket. The device automatically switches on. The power LED will light up green. If the mains part plug is unplugged the device will switch to battery operation. The standby time will depend on the battery charge status. To switch the device off press the O button for approx. 2 seconds. the power LED will go out.



If there is no connection between the devices (baby unit not switched on or out of range), an acoustic warning will sound on the parent unit.

7. USE

Adjusting the volume

You can adjust the volume in 5 levels on the parent unit by pressing the ■+ or ■- button.



The sound intensity is also pictured using an LED noise level light display so that the device can also be used by those with a hearing impairment.

Useful information about the baby monitor

- Battery operation of the baby monitor minimizes electrosmog from electrical and magnetic alternating fields.
- You can increase the range of the baby monitor by positioning the baby unit as high up as possible near a door or window and ensuring that the batteries are not too weak.
- Other radio waves may interfere with the transmission of the baby monitor.
 Therefore, do not position the baby monitor near devices such as microwaves, WLAN, etc.
- The following other factors can interfere with the baby monitor's transmission or shorten its range: covering the units, furniture, walls, houses, trees, environmental factors (such as fog, rain).

Replacing/charging the batteries

If the batteries are too flat, then the units will switch off automatically. The batteries must then be replaced or recharged (see Initial use).



- When changing the batteries, use batteries of the same type, make and capacity.
- Always replace all batteries at the same time.
- Use batteries free from heavy metals.

8. CLEANING AND MAINTENANCE

The service life of the devices depends on careful use.



Important:

- Remove the batteries from the parent unit if the unit is not in use for an extended period.
- You will get the maximum capacity from your battery if you run down the battery at least once every 6 months. To do this, disconnect the device from the mains and run the battery down through normal use. Then fully charge the battery up again.
- The maximum battery capacity can only be reached after it has been charged several times and is dependent on many factors (battery state, ambient temperature, means and frequency of charging, etc.).
- Protect the devices from knocks, damp, dust, chemicals, drastic changes in temperature, electromagnetic fields and nearby sources of heat (ovens, heaters).
- . If dirty, wipe the device with a soft, dry cloth.
- Clean the device with a dry cloth. Do not use any abrasive cleaning products.

9. WHAT IF THERE ARE PROBLEMS?

Faults	Actions	
Power LED does not light up after switchon.	Check whether the relevant adapter plug is properly plugged in, The batteries are full or the rechargeable battery needs charging or is damaged (parent unit).	
An acoustic signal sounds from the parent unit.		
The signal is weak, the connection keeps breaking up or there is interference.	If another technical device such as a microwave is in the area between the parent and baby units, remove the device or switch it off. Check whether other factors, such as trees etc. are in the path of the two devices, and change the position of the devices until the parent unit signals a connection. Check whether the baby and parent units are inside the respective receiving range.	
No acoustic signal sounds from the parent unit.	Adjust the volume on the parent unit.	
A device switches itself off.	Replace the batteries or recharge the battery (parent unit).	

10. DISPOSAL

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life.

Dispose of the device at a suitable local collection or recycling point in your country. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal.

Battery disposal

Empty, completely flat batteries must be disposed of through specially designated collection boxes, recycling points or electronics retailers. You are legally required to dispose of the batteries.

The codes below are printed on batteries containing harmful substances:

Pb = Battery contains lead

Cd = Battery contains cadmium

Hg = Battery contains mercury



11. TECHNICAL SPECIFICATIONS

technology	DECT
frequency	1.882-1.897 MHz
Transmission power	max. 22,20 dBM
channels	120 digital
Dimensions	Parent unit: 6,7 x 10,1 x 4,3 cm Baby unit: 7 x 6,9 x 4,3 cm,
Parent unit:	~100 g, (with. batteries) Weight: Baby unit: ~48 g, Mains part (each): approx. 56 g
Range	300 m range with a clear view

Operation	Baby unit: Supplied mains part (6 V DC/450 mA) Parent unit: NiMH battery (2 x 1.2V/400 mAh) and supplied mains part (6 V DC/450 mA)
Mains part	Manufacturer: Vtech Telecommunications Limited Model no.: VT05EUK06045
Supply	Input: 100 -240 V AC 50/60 Hz Output: 6,0 V DC 0,45 A 2.7 W
Average active efficiency	≥ 74,2%
No-load power consumption	≤ 0,07 W
Rechargeable battery life (dependent on battery state, ambient temperature, means and frequency of charging, etc.)	Parent unit: 10 hours

We hereby confirm that this product complies with the European RED Directive 2014/53/EU.

The CE Declaration of Conformity for this product can be found under: https://www.beurer.com/conformity

12. WARRANTY / SERVICE

Further information on the guarantee and guarantee conditions can be found in the guarantee leaflet supplied.



Beurer UK Ltd. • Suite 16, Stonecross Place • Stonecross Lane North WA3 2SH Lowton • United Kingdom