

# beurer

 
 
## FC 25




**EN** Body brush  
Instructions for use

CE




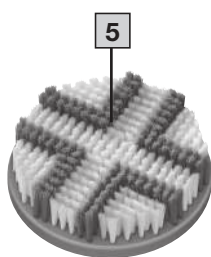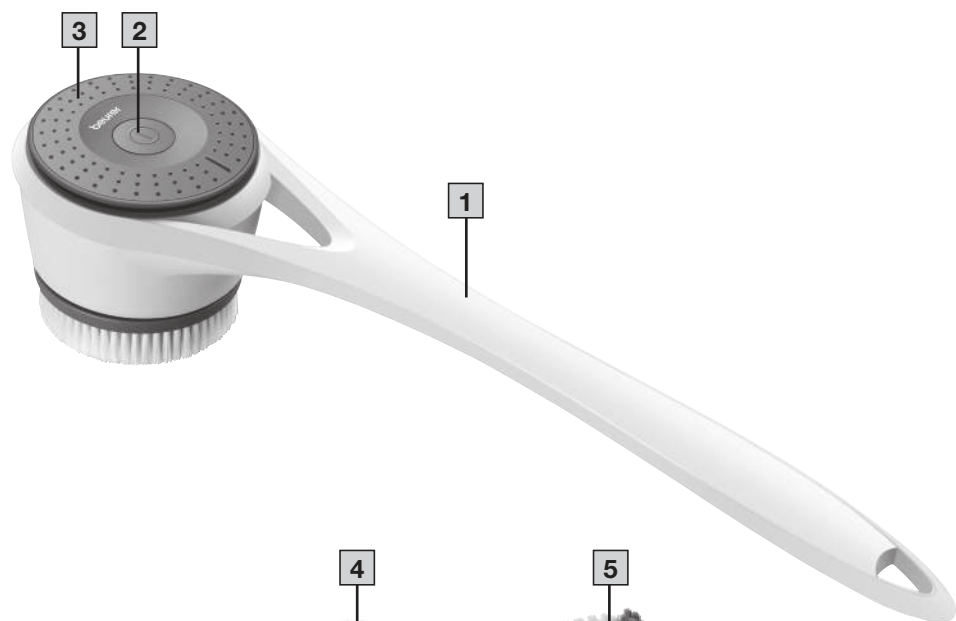


**A**

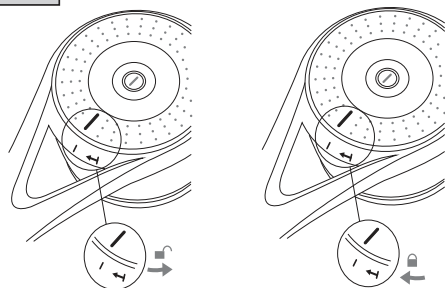 

**B**

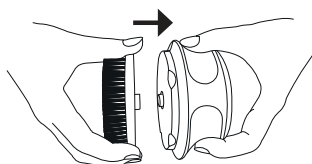 

**C**

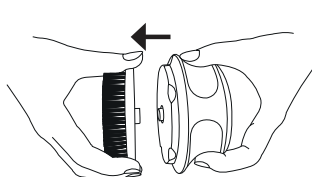 



Read these instructions for use carefully and keep them for later use, be sure to make them accessible to other users and observe the information they contain.

## **WARNING**

- The device is intended only for domestic/private use, not for commercial use.
- This device may be used by children over the age of eight and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely and are fully aware of the consequent risks of use.
- Children must not play with the device.
- Cleaning and user maintenance must not be performed by children unless supervised.
- Under no circumstances should you open or repair the device yourself, as faultless functionality can no longer be guaranteed thereafter. Failure to adhere to this instruction will void the warranty.

## Table of contents

1. Included in delivery .....	4	7.2 Exfoliation treatment function .....	6
2. Signs and symbols .....	4	8. Cleaning and maintenance .....	6
3. Warnings and safety notes .....	5	8.1 Cleaning the attachments .....	6
4. Intended use .....	5	8.2 Cleaning the body brush .....	6
5. Device description .....	5	8.3 Replacing attachments .....	6
6. Initial use .....	5	9. Accessories and replacement parts .....	6
6.1 Insert the batteries .....	5	10. What if there are problems? .....	6
6.2 Choosing and fitting a brush attachment .....	6	11. Disposal .....	7
7. Use .....	6	12. Technical data .....	7
7.1 Cleansing treatment function .....	6	13. Warranty/service .....	7





## 1. INCLUDED IN DELIVERY

Check that the exterior of the delivery cardboard packaging is intact and make sure that all components are present. Before use, ensure that the device and accessories show no visible damage and all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.

- 1 x body brush
- 1 x cleansing attachment
- 1 x exfoliation attachment
- 4 x AA batteries
- 1 x set of these instructions for use

## 2. SIGNS AND SYMBOLS

The following symbols appear in these instructions for use and on the device:

	<b>WARNING</b> Warning notice indicating a risk of injury or damage to health
	<b>IMPORTANT</b> Safety note indicating possible damage to the device/accessory
	<b>Note</b> Note on important information
	Observe the instructions for use

	Suitable for use in a bath or shower
	Disposal in accordance with the Waste Electrical and Electronic Equipment EC Directive – WEEE
	Do not dispose of batteries containing hazardous substances with household waste
	Manufacturer
	Direct current
	<b>CE labelling</b> This product satisfies the requirements of the applicable European and national directives.
	United Kingdom Conformity Assessed Mark
	Separate the packaging elements and dispose of them in accordance with local regulations.
	Separate the product and packaging elements and dispose of them in accordance with local regulations.
	The products demonstrably meet the requirements of the Technical Regulations of the EAEU.
	Marking to identify the packaging material. A = Material code, B = Material number: 1-7 = Plastics, 20-22 = Paper and cardboard
	Importer symbol

### 3. WARNINGS AND SAFETY NOTES

Do NOT use the body brush if one or several of the following warnings applies to you.

#### WARNING

- Before using the body brush, read the safety notes through carefully. Non-observance of the following information may result in personal injury or material damage. Store these instructions for use and make them accessible to other users. Make sure you include these instructions for use when handing over the device to third parties.
- Danger of suffocation due to packaging material. Keep packaging material away from children.
- Before use, inspect the device and accessories for visible damage. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.
- Do **NOT** use the body brush
  - on broken skin.
  - on open wounds.
  - if you suffer from a skin disease or irritated skin.
  - immediately after sunbathing.
  - if you are taking medication that contains steroids.

#### NOTES ON HANDLING BATTERIES

- If your skin or eyes come into contact with battery fluid, rinse the affected area with water and seek medical assistance.
- **Choking hazard!** Small children may swallow and choke on batteries. Store batteries out of the reach of small children.
- Observe the plus (+) and minus (-) polarity signs.
- If a battery has leaked, put on protective gloves and clean the battery compartment with a dry cloth.
- Protect batteries from excessive heat.
- **Risk of explosion!** Do not throw batteries into a fire.
- Do not charge or short-circuit batteries.
- If the device is not to be used for a relatively long period, take the batteries out of the battery compartment.
- Use identical or equivalent battery types only.
- Always replace all batteries at the same time.
- Do not use rechargeable batteries.
- Do not disassemble, open or crush the batteries.

#### IMPORTANT

Only specialist personnel may perform repairs on electrical devices. Improper repairs may subject users to considerable danger. In the event of a fault or damage, have the device repaired by a certified specialist workshop.

### 4. INTENDED USE

The beurer FC 25 body brush with its rotating brush attachments has been specially developed to cleanse the skin of your body. The body brush has a normal cleansing attachment and an exfoliation attachment. You can gently exfoliate your body and therefore ensure soft and radiant skin by using the exfoliation attachment.

The body brush not only cleanses your skin, it also improves circulation. The body brush is waterproof (protection class IPX7) and can thus also be used in the shower and bath.

The body brush has slow and fast speed settings.

The body brush is suitable only for private use, not for medical or commercial purposes. The body brush must only be used on the human body. Do NOT use the body brush on the face or pubic area. Do NOT use the body brush on animals. The body brush is not suitable for children under 8 years. The body brush is only intended for the purpose described in these instructions for use. The manufacturer is not liable for damage resulting from improper or careless use.

### 5. DEVICE DESCRIPTION

The associated drawings are shown on page 3.

- Body brush
- ON/OFF/speed button
- Battery compartment lid
- Cleaning attachment: For daily cleansing
- Exfoliation attachment: For revitalising exfoliation

### 6. INITIAL USE

#### 6.1 Insert the batteries

Turn the battery compartment lid. Insert 4 AA batteries in accordance with the marking. Reapply the battery compartment lid, ensuring correct alignment.

## 6.2 Choosing and fitting a brush attachment

The device has 2 different attachments.

Cleansing attachment: For daily cleansing

Exfoliation attachment: For exfoliating in the shower and in the bath in order to gently remove excess skin cells

1. Carefully fit your desired attachment onto the body brush as shown until you can hear and feel it click into place. **[B]**
2. To remove the attachment again after use, pull it carefully off the body brush. **[C]**


## 7. USE

### 7.1 Cleansing treatment function

The cleansing treatment function using the cleansing attachment is ideally suited to daily cleansing of the skin.

To start the cleansing treatment function, proceed as follows:

1. Ensure that the cleansing attachment is attached to the body brush.
2. To switch on the body brush, press the ON/OFF/speed button. The cleansing attachment starts to rotate. We recommend that you start by using the slow speed setting. To choose the fast speed setting, press the ON/OFF/speed button again.
3. Gently move the body brush in circular motions over your skin. Start with your feet and work upwards from there in the direction of your legs, buttocks, stomach, back, chest, arms and hands. Do NOT use the body brush on the face or in the pubic area. If the treatment is unpleasant, stop using the device or reduce the speed setting.

 To ensure comfortable treatment, do not press the rotating brush attachment too firmly on to the skin. Treat each section of skin for a maximum of 20 seconds.


4. To end the cleansing treatment function, press the ON/OFF/speed button again. The body brush switches itself off.

### 7.2 Exfoliation treatment function

The exfoliation treatment function using the exfoliation attachment is ideally suited for gentle exfoliation to remove dead or dry skin cells. Do not carry out treatment more often than 2x a week. Always carry out the exfoliation treatment in the shower or bath.

To start exfoliating, proceed as follows:

1. Ensure that the exfoliation attachment is attached to the body brush.
2. Moisten the exfoliation attachment.
3. Moisten your skin.
4. Apply a shower gel or cleansing lotion directly onto the bristles of the exfoliation attachment.
5. To switch on the body brush, press the ON/OFF/speed button. The exfoliation attachment starts to rotate. We recommend that you start by using the slow speed setting. To choose the fast speed setting, press the ON/OFF/speed button again.
6. Gently move the body brush in circular motions over your skin. Start with your feet and work upwards from there in the direction of your legs, buttocks, stomach, back, chest, arms and hands. Do NOT use the body brush on the face or pubic area. If the treatment is unpleasant, stop using the device or reduce the speed setting.

 To ensure comfortable treatment, do not press the rotating brush attachment too firmly on to the skin. Treat each section of skin for a maximum of 20 seconds.

7. To end the exfoliation treatment function, press the ON/OFF/speed button again. The body brush switches itself off.

8. Cleanse your skin thoroughly with water to remove any residue from your skin.

9. Pat your skin dry with a towel and then apply a moisturising cream using even, circular movements.

10. Clean the attachment thoroughly with water after each use.

## 8. CLEANING AND MAINTENANCE

### 8.1 Cleaning the attachments

#### IMPORTANT

Before beginning cleaning, pull the attachment off the body brush.

- Clean the attachment thoroughly with water after each use.

### 8.2 Cleaning the body brush

- Clean the body brush using only the methods specified.
- Clean the body brush after use with a soft, slightly damp cloth. If it is very dirty, you can also moisten the cloth with a mild soapy solution. Do not use any abrasive cleaning products.
- Protect the body brush from knocks, moisture, dust, chemicals, drastic changes in temperature and nearby sources of heat (ovens, heaters).

### 8.3 Replacing attachments

- In order to ensure optimum cleansing of your skin, we recommend that you replace the attachments after 4 months of use.

## 9. ACCESSORIES AND REPLACEMENT PARTS

Available commercially or from the relevant service address (as specified in the service address list).

Brush type	Replace	Item number and/or order number
Cleansing attachment	After 4 months	605.14
Exfoliation attachment	After 4 months	605.15

## 10. WHAT IF THERE ARE PROBLEMS?

Problem	Solution
The device will not switch on.	Replace the batteries as described in these instructions for use. If it is still not possible to switch on the device, contact Customer Services.
The device does not cleanse as well as it did to begin with.	The attachment's bristles are worn. Replace the attachment. If you do not have any replacement attachments, they can be reordered (see "10. Accessories and replacement parts").

If you cannot find a solution to your problem here, contact our Customer Services.

11. DISPOSAL

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the device at a suitable local collection or recycling point in your country. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal.



 
Empty, completely flat batteries must be disposed of through specially designated collection boxes, recycling points or electronics retailers. You are legally required to dispose of the batteries.

The codes below are printed on batteries containing harmful substances:

- Pb = Battery contains lead
- Cd = Battery contains cadmium
- Hg = Battery contains mercury



12. TECHNICAL DATA

Supply	4 x 1.5 V  batteries AA
Dimensions	40.5 x 10 x 8.2 cm
Weight	ca. 330 g

13. WARRANTY/SERVICE

Further information on the guarantee and guarantee conditions can be found in the guarantee leaflet supplied.



Beurer UK Ltd., Suite 16, Stonecross Place, Yew Tree Way, WA3 2SH Golborne, United Kingdom



Beurer GmbH • Söflinger Straße 218 • 89077 Ulm, Germany • [www.beurer.com](http://www.beurer.com)  
[www.beurer-gesundheitsratgeber.com](http://www.beurer-gesundheitsratgeber.com) • [www.beurer-healthguide.com](http://www.beurer-healthguide.com)



605.11\_FC25\_2023-05-11\_02\_IM1\_BEU\_EN