


beurer

HC 35




EN Compact hair dryer
Instructions for use



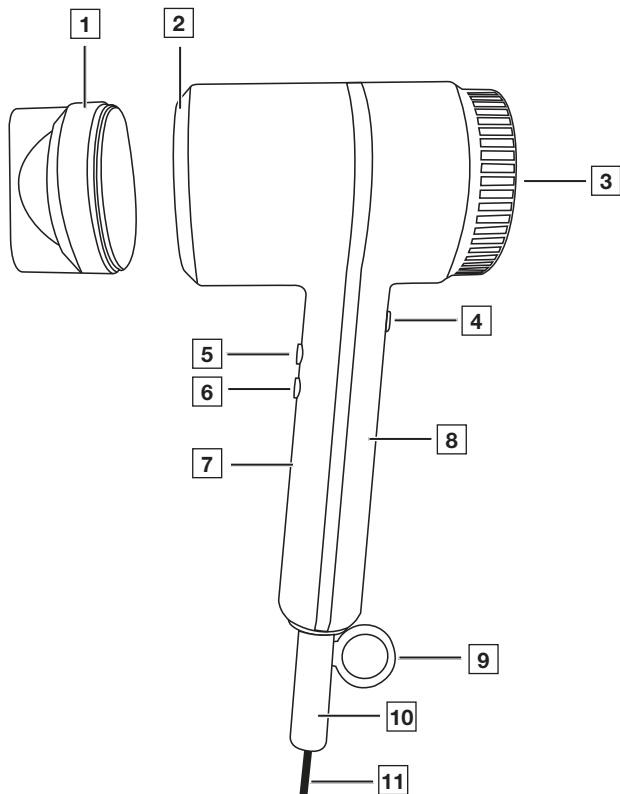

A

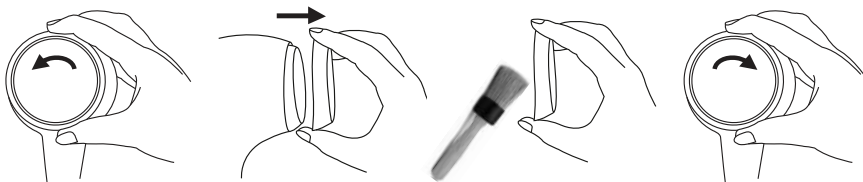



Read these instructions for use carefully and keep them for later use, be sure to make them accessible to other users and observe the information they contain.

INCLUDED IN DELIVERY


Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are included in the delivery. Before use, ensure that there is no visible damage to the product and supplied components, and that all packaging material has been removed. If you have any doubts, do not use the product and contact your retailer or the specified Customer Services waddress.

- 1 x compact hair dryer
- 1 x professional nozzle
- 1 x storage bag
- 1 x set of these instructions for use

TABLE OF CONTENTS

| | |
|----------------------------------|---|
| 1. IMPORTANT SAFETY NOTES | 4 |
| 2. SIGNS AND SYMBOLS | 5 |
| 3. DEVICE DESCRIPTION | 6 |
| 4. USAGE | 6 |
| 5. CLEANING AND MAINTENANCE..... | 6 |
| 6. DISPOSAL | 6 |
| 7. TECHNICAL DATA | 7 |
| 8. WARRANTY | 7 |






1. **IMPORTANT SAFETY NOTES**









- The device must only be used for the purpose for which it was designed and in the manner specified in the instructions for use.
- These devices may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills, or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely, and have understood the risks involved.
- Children must not play with the device.
- Danger of suffocation! Keep packaging materials away from children.
- Cleaning and user maintenance must not be performed by children unless supervised.
-  Do not use this appliance near bathtubs, shower trays or other containers which have water in them.
- Risk of electric shock! Never submerge the device in water or other liquids. If the device falls into water, do not reach into the water! First switch off the fuse at the fuse box and then pull the mains plug out of the socket.
- If using the device in the bathroom, unplug it after use – this is because proximity to water constitutes a danger even when the hair dryer is switched off.
- As an additional safety measure, the installation in the bathroom circuit of a residual current device (FI/RCD) with a rated tripping current not exceeding 30 mA is recommended. Ask your installer for advice.

- This device is not designed for use in commercial areas.
- If the mains connection cable of this device is damaged, it must be replaced by the manufacturer, its customer service department or a similarly qualified person, in order to prevent hazards. Do not use the device if it is damaged or not functioning correctly.
- Do not pull, twist or bend the mains cable [11]. Do not wrap the mains cable [11] around the hair dryer!
- Risk of fire! Ensure that the air outlet opening [2] and the removable guard are [3] not covered.

2. SIGNS AND SYMBOLS

The following symbols are used on the device, in these instructions for use, on the packaging and on the type plate for the device:

| | |
|--|---|
|  | This device must not be used near water or in water (e.g. in a wash basin, or in the shower or bath) – risk of electric shock! |
|  | Warning notice indicating a risk of injury or damage to health. |
|  | Marking to identify the packaging material. A = Material code, B = Material number: 1-6 = Plastics, 20-22 = Paper and cardboard |
|  | Separate the packaging elements and dispose of them in accordance with local regulations. |
|  | Read the instructions for use |

| | |
|---|---|
|  | This product satisfies the requirements of the applicable European and national directives. |
|  | The device is double-protected and thus corresponds to protection class 2 |
|  | The product demonstrably meets the requirements of the Technical Regulations of the EAEU |
|  | Disposal in accordance with the Waste Electrical and Electronic Equipment EC Directive – WEEE |
|  | Manufacturer |
|  | United Kingdom Conformity Assessed Mark |
|  | Do not wrap the cable around the device |
|  | Importer symbol |

3. DEVICE DESCRIPTION

The associated drawings are shown on page 3.

- 1** Removable, rotatable professional nozzle
- 2** Air outlet opening
- 3** Removable guard
- 4** ON/OFF button
- 5** Cold air button (blue)
- 6** Warm air button (red)
- 7** LED display
- 8** Handle
- 9** Hanging loop
- 10** Anti-kink protection
- 11** Mains cable

4. USAGE

1. Wash hair as usual and then dry with a towel. Hairsprays contain flammable substances, so do not use hairspray while using the hair dryer.
2. Stand on a dry, non-conductive surface and make sure your hands are dry.
3. To switch on the hair dryer, press the ON/OFF button **4**. The hair dryer starts on the medium warm air setting and two red LEDs light up on the LED display **7**.
4. Use the warm air button **6** or cold air button **5** to set your preferred level. The illuminated LED display **7** shows the currently set level.

| | | |
|----------------|---|----------------------------------|
| One red LED | = | gentle air flow, warm air |
| Two red LEDs | = | powerful air flow, very warm air |
| Three red LEDs | = | very powerful air flow, hot air |
| One blue LED | = | gentle air flow, cold air |

| | | |
|-----------------|---|----------------------------------|
| Two blue LEDs | = | powerful air flow, cold air |
| Three blue LEDs | = | very powerful air flow, cold air |

5. Dry and/or style your hair as you wish.
6. Switch hair dryer off after each use/interruption. To switch off the hair dryer, press the ON/OFF button **4**. The LEDs on the hair dryer go out.
7. Remove the mains plug from the socket.
8. Allow the hair dryer to cool completely on a fire-proof surface.

5. CLEANING AND MAINTENANCE

1. Disconnect the mains plug and leave the device to cool.
2. Remove and clean the guard as shown in figure **A**. To ensure a long service life, clean the guard at regular intervals.

6. DISPOSAL

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the device at a suitable local collection or recycling point in your country. Observe the local regulations for material disposal. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal. You can obtain the location of collection points for old devices from the local or municipal authorities, local waste disposal company or your dealer, for example.



7. TECHNICAL DATA

| | |
|--------------------------------|------------------------------|
| Weight: | approx. 560 g |
| Voltage supply: | 220-240 V~, 50-60 Hz |
| Power consumption: | 1600-2000 W |
| Protection class: | II |
| Ambient conditions: | only approved for indoor use |
| Permissible temperature range: | -10 to +40°C |

Subject to technical changes.

The CE mark has been applied in accordance with the following European directives:

EMC 2014/30/EU

LVD 2014/35/EU

The Declaration of Conformity for this product can be found at the following address:

<https://www.beurer.com/conformity>

8. WARRANTY

Further information on the warranty and warranty conditions can be found in the warranty leaflet supplied.



Beurer GmbH • Söflinger Str. 218 • 89077 Ulm (Germany)
www.beurer.com • www.beurer-healthguide.com
www.beurer-gesundheitsratgeber.com



Beurer UK Adresse:
BEURER UK Ltd., Suite 16, Stonecross Place
Stonecross Lane North, WA32SH Lowton, United Kingdom



593.92_HC35_2025-01-29_IM1_BEU_EN_EN