 




beurer

MP 64

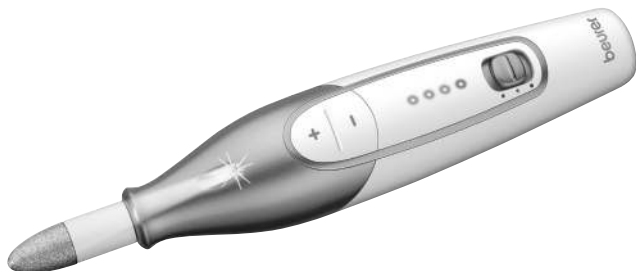

EN Manicure/pedicure set
Instructions for use 4

  CE

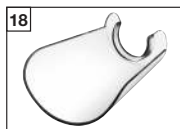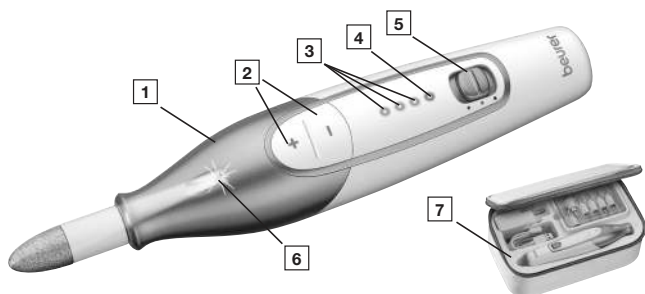

ENGLISH



Read these instructions for use carefully. Observe the warnings and safety notes. Keep these instructions for use for future reference. Make the instructions for use accessible to other users. If the device is passed on, provide the next user with these instructions for use.

Table of contents

1. Warnings and safety notes.....	5
2. Signs and symbols	7
3. Included in delivery	10
4. Device description	11
5. Application	11
6. Cleaning and maintenance.....	14
7. Accessories and replacement parts.....	15
8. Disposal.....	15
9. Technical specification	16
10. Warranty/service.....	16

1. WARNINGS AND SAFETY NOTES

WARNING

- The device is only intended for domestic/private use, not for commercial use.
- This device may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely, and are fully aware of the consequent risks of use.
- Children must not play with the device.
- Cleaning and user maintenance must not be performed by children unless supervised.
- Do not use the device if it shows signs of damage or does not function properly. In such cases, contact Customer Services.
- Repairs must only be carried out by Customer Services or authorised suppliers.
- If the mains connection cable of this device is damaged, it must be disposed of. If it cannot be removed, the device must be disposed of.
- Under no circumstances should you open or repair the device yourself, as faultless functionality can no longer be guaranteed thereafter. Failure to comply will invalidate the warranty.
- Use of this device can create a considerable amount of heat on your skin or nails.
- Check the results regularly during the treatment. It is particularly important for diabetics to do so as they have a lower sensitivity to pain and could injure themselves more easily. The attachments 1, 2, 3, 4 and 5, which are included, are generally suitable for diabetics as they are only intended for use over larger areas and not spot treatment.
- In contrast, attachments 6 to 10 are less suitable for diabetics. Always work very carefully. If you have any doubts, consult your doctor.




- This device may only be used for the purpose for which it is designed and in the manner specified in the instructions for use. Any form of improper use can be dangerous.
- The device may heat up faster during prolonged, intensive use, for example to sand off calluses on the feet. Allow the device to cool down for a relatively long time between individual applications to prevent skin burns. For your own safety, continuously check the heat development of the device. This applies in particular to persons that are not as sensitive to heat as others.
- The device is suitable for private use, and not for medical or commercial purposes.
- For hygienic reasons, the device may only be used on one person.
- The manufacturer is not liable for damage resulting from improper or incorrect use.
- Keep packaging material away from children to avoid danger of suffocation.
- Check the device frequently for signs of wear and tear or damage. If there are signs indicating the above or if this device was used improperly, it must be returned to the manufacturer or retailer before further use.
- In the event of defects and operational faults, switch off the device immediately.
- Never attempt to repair the device yourself!
- Only use the device with the supplied accessories.
- Never leave the device unattended when it is in operation, in particular if there are children nearby.
- Do not use on animals.
- Do not allow the device to come into contact with water (except in the case of cleaning with a slightly damp cloth). Water must never enter the device. Never submerge the device in water. Never use the device in the bath, in the shower, in a swimming pool or above a sink filled with water. If water enters the housing of the device nevertheless, immediately disconnect the device













from the mains supply and contact your electronics retailer or Customer Services.






 

- Please ensure that no hair can get caught in the rotating attachments when using the device. Use a hair tie for your safety.
- Keep the device away from sources of heat.
- Do not use the device under a blanket, pillow or cushion, etc.
- Hands must always be dry when using the device and mains part plug.
- Do not pull on the mains cable or on the device to disconnect the mains part plug from the socket.
- The mains part plug must only be operated using the voltage specified on it.
- The device may only be operated with the supplied mains part plug.
- Wear appropriate protective equipment (FFP2 mask, protective gloves and protective glasses) when using on acrylic, gel or artificial nails.

2. SIGNS AND SYMBOLS

The following symbols are used in these instructions for use, on the packaging and on the type plate for the device:

	Read the instructions
 WARNING	Indicates a potentially imminent danger. If it is not avoided, there is a risk of death or serious injury.
 CAUTION	Indicates a potentially imminent danger. If it is not avoided, slight or minor injuries may result.
NOTE	Indicates a potentially harmful situation. If it is not avoided, the system or something in its vicinity may be damaged.



	Disposal in accordance with the Waste Electrical and Electronic Equipment EC Directive – WEEE
	Manufacturer
	Protection class II device The device is double-protected and thus corresponds to protection class 2
	For indoor use only
	Separate the packaging elements and dispose of them in accordance with local regulations.
	Marking to identify the packaging material. A = Material code, B = Material number: 1-7 = Plastics, 20-22 = Paper and cardboard
	Importeur Symbol (MDR Symbol)
	CE labelling This product satisfies the requirements of the applicable European and national directives.
	United Kingdom Conformity Assessed Mark
	Do not use the power adapter if the plug is damaged.
	The products demonstrably meet the requirements of the Technical Regulations of the EAEU.
	Energy efficiency class 6

	Direct current The device is suitable for use with direct current only
	Alternating current
	Protected against solid foreign objects 12.5 mm in diameter and larger
ta=45°C	Rated ambient temperature Maximum operating temperature
	Power supply unit, switch mode; switch mode power supply unit; SMPS
	Safety isolating transformer, short-circuit proof
 PIN1+ PIN4- PIN1*+ PIN4*-	USB / Micro-USB connection
	Separate the product and packaging elements and dispose of them in accordance with local regulations.

Intended use

This device is intended for the treatment of hands (manicure) and feet (pedicure) only.

NOTE ON HANDLING BATTERIES

- If your skin or eyes come into contact with fluid from a rechargeable battery cell, flush out the affected areas with water and seek medical assistance.
-  **Choking hazard!** Small children may swallow and choke on batteries. Store batteries out of the reach of small children.
- Protect batteries from excessive heat.
-  **Risk of explosion!** Never throw batteries into a fire.

- Do not disassemble, split or crush the batteries.
- Only use chargers specified in the instructions for use.
- Batteries must be charged correctly prior to use. The instructions from the manufacturer and the specifications in these instructions for use regarding correct charging must be observed at all times.
- Fully charge the battery prior to initial use.
- In order to achieve as long a battery service life as possible, fully charge the battery at least twice per year.

3. INCLUDED IN DELIVERY

Check that the device packaging has not been tampered with and make sure that all contents are present. Before use, ensure that there is no visible damage to the device or accessories and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Services address.

- 1 x Manicure/pedicure set
- 10 x high-quality attachments made from sapphire and felt
- 1 x Protective cap for nail dust
- 1 x Mains adapter with micro USB cable
- 1 x Storage bag
- 1 x These instructions for use

4. DEVICE DESCRIPTION

The associated drawings are shown on page 3.

- | | |
|--|--|
| 1 Manicure/pedicure device | 2 +/- speed regulation |
| 3 Speed setting display | 4 LED display for direction of rotation (red for anti-clockwise rotation; green for clockwise rotation) |
| 5 Sliding switch for clockwise/anti-clockwise rotation and off position | 6 LED light |
| 7 Storage bag | |

5. APPLICATION

- Charge the device for approximately 3 hours before the first use.
- When the 3 blue charger indicator lights flash continuously, it means the battery is charging. Once all 3 LEDs are permanently illuminated, the device is fully charged. You can now begin using the device on battery power.
- If the blue LEDs flash quickly (1, 2 or 3 LEDs depending on the speed setting) during battery operation, this indicates that the battery is dead.
- You can charge the device by plugging it into the mains, or alternatively using the USB cable.
- One charge is sufficient for approx. 2 hours of cordless operation.
- Make sure that the device is switched off beforehand.
- Select the desired attachment part and carefully press it onto the axle of the device. To remove, pull apart the attachment and the device in opposing directions.
- Switch on the device by moving the sliding switch down (anti-clockwise rotation, LED lights up red) or up (clockwise rotation, LED lights up green).

- You can select the speed of the drive axle using the plus (+) and minus (-) buttons. Start each application at a low speed and then increase as required.
- Blue LEDs light up on the surface of the device depending on the selected speed.
- All filing and callus attachments are coated with a sapphire grain. This guarantees a long service life and ensures practically no wear.
- Do not press too hard and always carefully move the attachments towards the area to be treated.
- Move the device over the area to be treated and apply slight pressure while slowly moving the device in circles.
- Please note that the callus attachments show reduced performance on soaked or wet skin. For this reason, we ask that you do not soak the foot in water before treatment.
- To maintain natural skin protection, do not remove all calluses.
- Ensure the axle can always rotate freely. The axle must not be permanently blocked, as otherwise the device will become too hot and may become damaged.
- Apply moisturiser to the treated areas after each use.

NOTE

The device switches off automatically after 20 minutes. After this time, have a break of at least 15 minutes to prevent the motor from overheating.

NOTE

The device switches off if an attachment is prevented from moving for approx. 3 seconds during use. To restart the device, switch it briefly off and then on again.

! Important:

Check the results during the treatment. This applies in particular for diabetics as they have less sensitive hands and feet.

Attachments

8 Fine-Grain Sapphire Wheel

Suitable for filing nails to reduce length. Whilst the sapphire disk rotates, the external housing remains fixed to prevent friction burns to the skin around the nails.

9 Coarse-Grain Sapphire Wheel

Suitable for filing thicker nails to reduce length. Whilst the sapphire disk rotates, the external housing remains fixed to prevent friction burns to the skin around the nails.

10 Sapphire Cone

Suitable for removing dry skin and softening calluses on the sole and heel. Take care not to remove hardened skin entirely to protect the healthy skin beneath. File until a thin layer remains then moisturise to soften.

11 Felt Cone

Suitable for smoothing and buffing nail tips after filing and for cleaning the surface of the nails. Position the manicure tool and move around the nail in a constant circular motion.

12 Fine sapphire callus file

For removing calluses on the soles of the feet and heel. This attachment is intended for application on large areas.

13 Crystal callus file

Coarse crystal callus attachment to quickly remove thick hard skin or large calluses on the sole of the foot and heel.

14 Cylindrical Cutter

Suitable for smoothing rough and ridged toenail surfaces. Simply, place the cylindrical cutter horizontally on the nail surface and removed the rough layer with slow circular movements.

15 Flame-Shape Cutter

Suitable for removing ingrowing nails.

16 Nail Cutter

Suitable for exposing ingrown nails and removing dead nail parts. When using this attachment, use at a low speed.

17 Round Sapphire Cutter

Suitable for removing corns. Take care to remove the corn slowly, layer by layer to prevent damage to the healthy skin beneath.

18 Protective Nail Dust Cap

Captures nail dust as you file to minimise inhalation and clean up time.

6. CLEANING AND MAINTENANCE

Always unplug the mains part from the socket before cleaning the device.

- Clean the device with a slightly damp cloth. If it is very dirty, you can also moisten the cloth with a mild soapy solution.
- For hygiene reasons, you may use alcohol and a cloth or brush to clean the attachments if required. Please dry carefully afterwards.
- Do not drop the device.
- Please make sure that no water enters the device. If this should happen, only reuse the device once it has fully dried out.
- Do not use any chemical or abrasive cleaning agents.
- Never immerse the device or mains adapter in water or other liquids.

7. ACCESSORIES AND REPLACEMENT PARTS

To purchase accessories and replacement parts, please visit www.beurer.com or contact the service address for your country (see the service address list). Accessories and replacement parts are also available from retailers.

Designation	Item number and/or order number
1 x Fine-Grain Sapphire Wheel 1 x Coarse-Grain Sapphire Wheel 1 x Sapphire Cone 1 x Felt Cone 1 x Fine sapphire callus file 1 x Crystal callus file 1 x Cylindrical Cutter 1 x Flame-Shape Cutter 1 x Nail Cutter 1 x Round Sapphire Cutter 1 x Protective Nail Dust Cap	572.16

8. DISPOSAL

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the device at a suitable local collection or recycling point in your country. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal.



- The empty, completely flat batteries must be disposed of through specially designated collection boxes, recycling points or electronics retailers. You are legally required to dispose of the batteries.

- The codes below are printed on rechargeable batteries containing harmful substances:
 Pb = Battery contains lead,
 Cd = Battery contains cadmium,
 Hg = Battery contains mercury.



9. TECHNICAL SPECIFICATION

Supply	Input: 100-240 V ~ 50/60 Hz, 0.2 A Output: 5.0 V --- 1.0 A, 5.0 W
Dimensions	155 x 37.4 x 38.3 mm
Average active efficiency	$\geq 73,62 \%$
No-load power consumption	$\leq 0,09 \text{ W}$
Weight	approx. 133 g
Battery: Capacity Nominal voltage Type designation	1500 mAh 3.7 V Lithium-ion

Subject to technical changes

10. WARRANTY/SERVICE

Further information on the warranty and warranty conditions can be found in the warranty leaflet supplied.



Beurer GmbH • Söflinger Str. 218 • 89077 Ulm (Germany)
www.beurer.com • www.beurer-healthguide.com



Subject to errors and changes

570.37_MP64_2022-06-01_09_IM2_BEU_EN