



beurer

FC 59




EN Facial brush
Instructions for use

  
CE

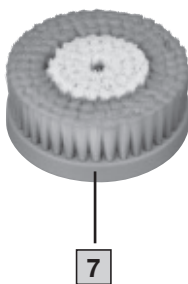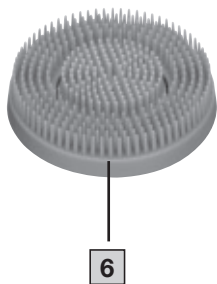

A

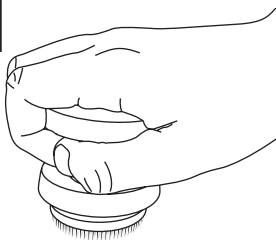 

B

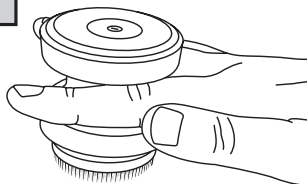 

ENGLISH



Read these instructions for use carefully and keep them for later use, be sure to make them accessible to other users and observe the information they contain

Table of contents

1. Included in delivery	3
2. Signs and symbols	3
3. Intended use	4
4. Warnings and safety notes	4
5. Device description	6
6. Usage	6
6.1 Initial use	6
6.2 Starting use	6
6.3 Button lock	7
7. Cleaning and maintenance	7
8. Accessories and replacement parts	7
9. Troubleshooting	8
10. Disposal	8
11. Technical specifications	9
12. Warranty	9

1. INCLUDED IN DELIVERY

Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are present. Before use, ensure that there is no visible damage to the device or accessories and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Services address.

- 1 hand-held device
- 1 brush attachment Exfoliation
- 1 brush attachment Sensitive
- 1 brush attachment Silicon
- 1 USB-C charging cable

2. SIGNS AND SYMBOLS

The following symbols are used on the device, in these instructions for use, on the packaging and on the type plate for the device:

WARNING

Indicates a potentially impending danger. If it is not avoided, there is a risk of death or serious injury.

CAUTION

Indicates a potentially impending danger. If it is not avoided, slight or minor injuries may result.

NOTICE

Indicates a potentially harmful situation. If it is not avoided, the system or something in its vicinity may be damaged.

	Product information Note on important information
	Read the instructions
	The electronic device must not be disposed of with household waste
 Pb Cd Hg	Do not dispose of batteries containing hazardous substances with household waste
	Manufacturer
	CE labelling This product satisfies the requirements of the applicable European and national directives.
 	Separate the product and packaging elements and dispose of them in accordance with local regulations.
	Marking to identify the packaging material. A = material abbreviation, B = material number: 1-7 = plastics, 20-22 = paper and cardboard
	Protection class II device
	The products demonstrably meet the requirements of the Technical Regulations of the EAEU
	Protection against temporary submersion. Device can be immersed to a depth of 1 metre for up to 30 minutes.

	Suitable for use in a bath or shower
	Direct current
	USB-C
	United Kingdom Conformity Assessed Mark
	Importer

3. INTENDED USE

The device is only to be used on the human face (apart from the eye and mouth area).

The device is only intended for the purpose described in these instructions for use. The manufacturer is not liable for damage resulting from improper or careless use.

4. WARNINGS AND SAFETY NOTES

▲ WARNING

- Danger of suffocation by packaging material. Keep packaging material away from children.
- Before use, inspect the device and accessories for visible damage. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.
- The hand-held part must be disconnected from the connection cable before it is cleaned in water.
- When using the device in the bathroom, unplug the plug after charging as water in the vicinity constitutes a danger, even when the device is switched off.
- Keep the device away from extended exposure to direct sunlight, extreme heat or boiling water.

- Avoid using corrosive cleaning products or care products which are clay or silicone based.
- The device is only intended for domestic/private use, not for commercial use.
- This device may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely, and are fully aware of the consequent risks of use.
- Children must not play with the device.
- Cleaning and user maintenance must not be performed by children unless supervised.
- If the mains connection cable of this device is damaged, it must be disposed of.
- Under no circumstances should you open or repair the device yourself, as faultless functionality can no longer be guaranteed thereafter. Failure to adhere to this instruction will void the warranty.

WARNING

Do **NOT** use the device

- on broken skin.
- on open wounds.
- if you suffer from a skin disease or irritated skin.
- immediately after sunbathing.
- if you are taking medication that contains steroids.

CAUTION

Only specialist personnel may perform repairs on electrical devices. Improper repairs may subject users to considerable danger. In the event of a fault or damage, have the device repaired by a certified specialist workshop.

Notes on handling batteries

WARNING

- **Risk of explosion! Risk of fire!** Failure to comply with the points mentioned can result in personal injury, overheating, leakage, venting, breakage, explosion, or fire.
- Always use the correct or supplied charging cable for charging.
- Avoid continuous charging or overcharging. Unplug the charger when charging is complete.
- Only use with the corresponding mains adapter.
- Charge the device under supervision, paying attention to any heat generated, deformation, or release of gases. If in doubt, stop charging.
- If batteries/charging cables/chargers are defective, immediately dispose them properly (see chapter 10 on disposal).
- Do not throw the device or batteries into a fire.
- Never forcibly discharge, heat, disassemble, open, crush, deform, encapsulate, modify, or knock the device or batteries.
- Never short-circuit batteries or the connections of the battery-powered device.
- Protect the device or batteries from direct sunlight, rain, heat, and water.
- Exposure of batteries to an environment with extremely high temperatures or an extremely low air pressure may result in explosion or leakage of flammable liquids and gases.
- If fluid from a battery comes into contact with your skin or eyes, wash the affected areas with water and seek medical assistance.
- Do not use modified or damaged batteries/charging cables/chargers.
- Always select the correct battery type. Contact Customer Services for information on whether a battery replacement part can be replaced.
- Always insert the batteries correctly, taking into account the polarity (+/-).

- If a battery has leaked, put on protective gloves and clean the battery compartment with a dry cloth.
- **Choking hazard!** Keep batteries out of the reach of children. Seek medical attention immediately if swallowed. Swallowing them may cause severe internal burns and death.
- Never allow children to replace batteries without adult supervision.

NOTICE

- Information on how to remove and/or replace the battery can be found in chapter 10 or on the website.
- Store battery replacement parts away from metal objects in a well-ventilated, dry, and cool place.
- Keep batteries clean and dry.
- Keep batteries away from water.

5. DEVICE DESCRIPTION

The associated drawings are shown on page 2.

- 1 ON/OFF button
- 2 LED ring
- 3 Brush attachment
- 4 Recessed grip
- 5 USB-C-port
- 6 Brush attachment Silicon
- 7 Brush attachment Exfoliation
- 8 Brush attachment Sensitive

6. USAGE

6.1 Initial use

You must fully charge the device for 90 minutes before the first use. The device will run for approx. 50 minutes when fully charged.

To do this, proceed as follows:

1. Connect the supplied USB-C cable to the USB-C-port and a mains adapter (not included in delivery).
2. Insert the mains adapter into a suitable socket. The LED ring 2 lights up white during the charging process.
3. Attach the desired brush attachment to the appliance. If necessary, turn it carefully to the right and left until you can hear and feel it click into place.

NOTICE

The device cannot be used while charging.

4. As soon as the LED ring 2 lights up white continuously, the battery is fully charged. Once the charging process is complete, the LED ring 2 lights up for another 10 minutes and then goes out. If you unplug the USB-C cable from the device, the LED ring 2 also goes out. The device is now ready for operation.



If the battery life is less than 10%, the LED ring 2 starts to flash red.

6.2 Starting use

CAUTION

Stop use immediately if use of the facial brush leads to reactions, and consult your doctor.

To use the device, you can either grip it with your hand or place the recessed grip 4 between your index finger and middle finger (see illustrations A and B on fold-out page 3).

1. Moisten the attached brush attachment with water. Never use the device with a dry brush attachment as this can irritate the skin.

2. Apply the cleansing gel to your facial skin.
3. To switch on the device, briefly press and hold the ON/OFF button **1**. The LED ring **2** lights up white and the brush attachment will begin to rotate.
4. The device features two speed settings. To switch between the individual speed settings, briefly press the ON/OFF button **1**. The LED ring **2** lights up brighter at the higher speed level.
5. Now apply the device gently to your face and cleanse your facial skin using even movements to remove residue, dirt and dead skin cells.

i To ensure comfortable treatment, do not apply the rotating brush attachment too firmly to the skin. Treat each section of skin for a maximum of 20 seconds only. The recommended application period per use is 1 minute. The appliance switches off automatically after 5 minutes.

6. Switch off the device after use. To switch off the device, press the ON/OFF button **1** repeatedly until the appliance switches off (press twice at level 1, press once at level 2). The LED ring **2** goes out.
7. Cleanse your face thoroughly with water to remove any residue from your skin.
8. Pat your skin dry with a towel and then apply a moisturising cream using even, circular movements.

6.3 Button lock

The device has a button lock to prevent the device from being accidentally switched on (e.g. when traveling in a suitcase or bag).

1. To activate the button lock, press and hold the ON/OFF button **1** for 3 seconds. The LED ring **2** flashes three times to confirm.
2. To deactivate the button lock, press and hold the ON/OFF button **1** again for 3 seconds.

7. CLEANING AND MAINTENANCE




NOTICE

Before beginning cleaning, pull the brush attachment up and off.

- Never clean the device with cleaning products containing alcohol, petrol or acetone.
- Clean the device using only the methods specified.
- Pat dry the device with a lint-free cloth.
- Ensure that no water enters the device. If this should happen, the device should only be used again once it has fully dried out.

8. ACCESSORIES AND REPLACEMENT PARTS

To purchase accessories and replacement parts, please visit www.beurer.com or contact the corresponding service address (according to the service address list) in your country. Accessories and replacement parts are also available from retailers.

			
Brush type	Brush attachment Exfoliation	Brush attachment Sensitive	Brush attachment Silicone
Intended purpose	Weekly exfoliation to gently remove excess skin cells	Gentle daily cleansing	Daily cleansing
Skin type	Normal skin, combination skin, oily skin	Sensitive skin	All skin types
Replacements	After 4 months	After 4 months	After 6 months
Item number	110.187	110.186	110.185

9. TROUBLESHOOTING

Problem	Solution
The device will not switch on.	When switching on, ensure that you press the ON/OFF button with sufficient force and hold the button down for a sufficient amount of time. Charge the device as described in these instructions for use. If it is still not possible to switch on the device, contact Customer Services.
The device does not cleanse as well as it did to begin with.	The brush is worn. Replace the brush. If you do not have any replacement brushes, they can be reordered (see "11. ACCESSORIES AND REPLACEMENT PARTS").

10. DISPOSAL

For environmental reasons, do not dispose of the device in household waste at the end of its service life. Dispose of the device at a suitable local collection or recycling point in your country. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal.



Empty, completely flat batteries must be disposed of through specially designated collection boxes, recycling points or electronics retailers. You are legally required to dispose of the batteries:

The codes below are printed on batteries containing harmful substances:

Pb = Battery contains lead,

Cd = Battery contains cadmium,


Hg = Battery contains mercury.



Environmentally friendly disposal

For the sake of the environment, we recommend you to dispose of the individual components separately, especially the batteries.

1. Unscrew the screw on the USB-C port using a suitable screwdriver.
2. Unscrew the top cover clockwise and pull upwards with the button.
3. Pull the water cover upwards.
4. Pull off the battery connection.
5. Pull battery upwards and dispose of separately.

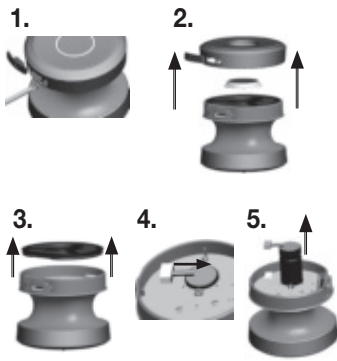

11. TECHNICAL SPECIFICATIONS

Input	5.0 V === 1.0 A; 5.0 W
Dimensions	<u>Device:</u> diameter 60 mm Height with brush attachment Silicone: 60 mm Height with attachment Exfoliation und Sensitive: 67 mm <u>Brush attachments</u> Silicone: diameter 48 mm and height 13 mm Exfoliation und Sensitive: diameter 47 mm and height 20 mm
Weight	<u>Device:</u> 89 g brush attachment Silicone: 11 g brush attachment Exfoliation/Sensitive: 14 g
<u>Battery:</u> Capacity Nominal voltage Type designation	350 mAh 3.7 V Rechargeable Li-ion battery

12. WARRANTY

Further information on the warranty and warranty conditions can be found in the warranty leaflet supplied.

