


beurer

HC 55



EN Hair dryer
Instructions for use



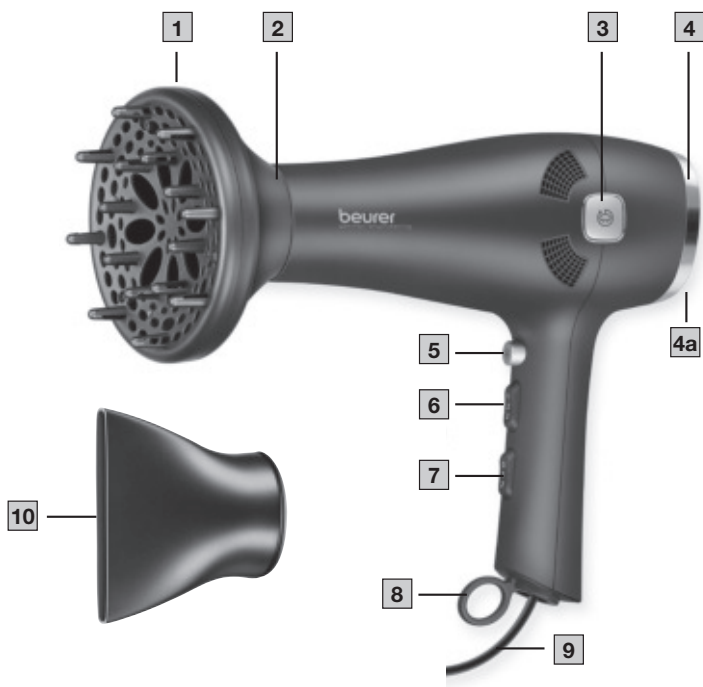



Read these instructions for use carefully. Follow the warnings and safety notes. Keep these instructions for use for future reference. Make the instructions for use accessible to other users. If the product is passed on, provide the instructions for use to the next user as well.

⚠ WARNING

- The device is only intended for domestic/private use, not for commercial use.
- This device may be used by children over the age of eight and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely and are fully aware of the consequent risks of use.
- Children must not play with the device.
- Cleaning and user maintenance must not be performed by children unless supervised.
- If the mains connection cable of this device is damaged, it must be disposed of.
- When using the device in the bathroom, unplug the mains plug after use as water in the vicinity constitutes a danger, even when the device is switched off.
- As an additional safety measure, we recommend the installation of a residual-current-operated protective device (RCD=**R**esidual-**C**urrent **C**ircuit **D**evice) with a rated operational current not exceeding 30 mA in the bathroom circuit. Your local electrical specialist can provide you with the relevant information.
- Never use the device near baths, wash basins, showers or other objects containing water or other liquids – risk of electric shock!

- Under no circumstances should you open or repair the device yourself, as faultless functionality can no longer be guaranteed thereafter. Failure to adhere to this instruction will void the warranty.

Table of contents

1. Included in delivery	4
2. Signs and symbols	4
3. Warnings and safety notes	5
4. Device description	6
5. Usage	6
6. Cleaning and maintenance	7
7. What if there are problems?	7
8. Disposal	7
9. Technical specifications	7
10. Warranty	7

1. INCLUDED IN DELIVERY

Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are present. Before use, ensure that the device and accessories have no visible damage and all packaging material is removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Services address.

- 1 x Hair dryer
- 1 x Professional concentrator nozzle
- 1 x Volume diffuser
- 1 x This instruction manual

2. SIGNS AND SYMBOLS

The following symbols are used on the product, in these instructions for use, on the packaging and on the type plate for the product:

NOTICE

Indicates a potentially harmful situation. If it is not avoided, the system or something in its vicinity may be damaged.



Product information
Note on important information



Read the instructions



The electronic device must not be disposed of with household waste



Do not dispose of batteries containing harmful substances with household waste



Manufacturer



CE labelling
This product satisfies the requirements of the applicable European and national directives.



Marking to identify the packaging material. A = material abbreviation, B = material number. 1–7 = plastics, 20–22 = paper and cardboard



Separate the product and packaging elements and dispose of them in accordance with local regulations.



Protection class II device

⚠ DANGER






Indicates an imminent danger. If it is not avoided, it will result in death or serious injury.

⚠ WARNING

Indicates a potentially impending danger. If it is not avoided, there is a risk of death or serious injury.

⚠ CAUTION

Indicates a potentially impending danger. If it is not avoided, slight or minor injuries may result.

	The products demonstrably meet the requirements of the Technical Regulations of the EAEU
	Conformity assessed marking for the United Kingdom
	Importer
	Danger This device must not be used near water or in water (e.g. in a wash basin, or in the shower or bath) – risk of electric shock!
	Do not wind the cable around the device!

3. WARNINGS AND SAFETY NOTES

The product is only intended for the purpose described in these instructions for use. The manufacturer is not liable for damage resulting from improper or careless use. Failure to observe the following information may result in personal injury or material damage.

Intended use

The hair dryer must be used only for individual, private drying and professional styling of your hair!

WARNING

Use the unit only:

- For external use
- For the purpose for which it was developed and in the manner specified in these instructions for use.

Any improper use can be dangerous!

DANGER




To avoid damage to health, we strongly advise against using the device in the following situations:

- Never submerge the device in water or other liquids! Risk of electric shock!
- If the device should fall into water despite following all safety precautions, immediately pull the mains plug from the socket! Do not reach into the water! Risk of electric shock!
- Have the device checked by an authorised specialist workshop before using it again! Danger to life due to electric shock!
- Keep metal objects (such as jewellery) away from the air intake to prevent them from being sucked in – risk of electric shock!
- Do not insert any objects into the casing! Risk of electric shock!


- If the device has been dropped or has suffered any other damage, it must no longer be used. Risk of electric shock and risk of injury!
- If there is visible damage to the device,
- mains cable/plug or accessories. If you have any doubts, do not use the device and contact your retailer or the specified Customer Services address. Risk of electric shock!
- Do not use extension cables in the bathroom to ensure the mains plug can be accessed quickly in an emergency.
- Keep packaging material away from children – risk of suffocation!

WARNING

To avoid damage to health, please note the following:


- Do not cover the hair dryer, air blower or air inlet – risk of fire!
- The removable filters , , the air intake and the air outlet  of the hair dryer must be free of fluff, dust and hair that has been sucked in – risk of fire!
- Do not use the device on synthetic hair – risk of fire!
- Ensure that no highly flammable liquids are located near the device. Risk of fire!
- After use, place the device on a heat-resistant surface.

NOTICE

- Only pull the mains cable from the socket by the mains plug.
- Untangle the mains cable  if it is twisted.
- Remove all packaging material before using the device.
- Only connect the device to a socket that has the voltage shown on the type plate.
- Do not use any additional parts that are not recommended by the manufacturer or offered as equipment.
- Under no circumstances should you open or repair the device yourself, as faultless functionality can no longer be guaranteed thereafter. Failure to comply will result in voiding of the warranty.
- In the event of a fault or damage, have the device repaired by a certified specialist workshop.
- Never leave the device unattended during use.
- Do not use the device outside.
- If you pass on the device to someone else, make sure to also pass on these instructions for use.

4. DEVICE DESCRIPTION

The associated drawings are shown on page 3.

- 1** Volume diffuser
- 2** Air outlet
- 3** Cable rewinder button
- 4** Removable filter
- 4a** Interior removable filter
- 5** Cold air button 
- 6** Heat setting switch with three settings:
 - 1 Low temperature
 - 2 Medium temperature
 - 3 High temperature
- 7** Blower switch with three settings:
 - 0 Off
 - 1 Gentle air flow
 - 2 Strong air flow
- 8** Hanging loop
- 9** Mains cable
- 10** Rotating professional nozzle

5. USAGE

WARNING

- Position yourself on a dry, non-conductive surface. Risk of electric shock!
- Make sure that your hands are dry! There is a risk of electric shock!
- The volume diffuser **1**, the professional nozzle **10** and the hair dryer may become very hot depending on the switch setting and period of use – risk of burns and fire!
- Do not touch the volume diffuser **1** and the professional nozzle **10** during use, as they will become hot. Risk of fire and burns!
- Place the hair dryer on non-flammable surfaces only. Risk of fire!
- Do not place the device on or near wet towels after use. Risk of electric shock!
- Ensure that no hair can be directly sucked into the device. Risk of fire!

CAUTION

- Do not jam the mains cable **9** in drawers or doors, for example.

- Untangle the mains cable **9** if it is twisted.
- Do not pull, twist or bend the mains cable **9** and do not pull or route it over/on sharp, pointed objects or hot surfaces. Damaged or tangled mains cables increase the risk of electric shock!
- Please always make sure to completely unplug the mains cable from the device before use.

NOTICE

A slight odour initially develops after switching on the device for the first time. This is normal and not harmful to your health. Allow the device to run for three to five minutes. After that you can use the device as normal.

Drying the hair

- Switch on the hair dryer using the blower switch **7**
 - 1 Gentle air flow
 - 2 Strong air flow
- Select the heat setting using the heat setting switch **6**:
 - 1 Low temperature
 - 2 Medium temperature
 - 3 High temperature
- Dry and/or style your hair as desired.

After each use/at each break, always switch off the hair dryer at the blower switch **7 (setting 0).**


- For your safety, the device switches off automatically if it overheats.
- Pull the mains plug out of the socket and allow the device to cool down.
- Before switching on again, check the air outlet **2** and the filters **4**, **4a** for blockage (e.g. fluff, dust and hair that has been sucked in).
- Do not place the device on or near wet towels after use.

NOTICE

For best results with the ion technology, use the hair dryer without an attachment.

Select function

The hair dryer has a cool setting that can be selected using the cold air button **5**:

Function	Description
	The cold setting provides the perfect finish for styling. It cools your hair down and adds hold for an improved result. The cold setting can be activated at any time by pressing and holding the button [5] . Once you release the button, the device returns to the previously selected heat setting.

Accessories

The following attachments are supplied:

- Volume diffuser **[1]**: gives the style volume and tone.
- Professional nozzle **[10]**: allows you to style and shape your hair exactly how you want it.

After use

- After each use, pull the mains plug out of the socket.
- Allow the device to cool down.
- Press the cable rewinder button **[6]** to rewind the cable into the hair dryer. Make sure that the mains cable is not twisted.

CAUTION

- The mains cable is wound back into the housing fairly quickly. Make sure to guide the cable with your other hand in order to prevent injuries.
- Store the device in a dry place out of the reach of children.
- The device can be hung on a hook using the hanging eyelet **[8]**.

6. CLEANING AND MAINTENANCE

Cleaning

CAUTION

- Always remove the plug from the socket before cleaning.
- Ensure that no water enters the inside of the unit!
- Do not clean it with any highly flammable liquids!

NOTICE

- Your device is maintenance-free.
- Protect the device from dust, dirt and humidity.
- Do not clean the device in a dishwasher.
- Do not use any aggressive, caustic, abrasive or corrosive cleaning products or hard brushes.
- The casing of the hair dryer and the accessories may be cleaned with a soft cloth dampened with warm water.

- Before each use, remove any fluff, dust and hair from the air outlet **[2]** and the filters **[4]**, **[4a]** using an appropriately sized brush.

7. WHAT IF THERE ARE PROBLEMS?

Problem	Solution
The cable does not rewind properly	Solution: pull out the cable completely, keep your arm extended and then press the in-feed button. Attention! Guide the cable with your other hand. Make sure that the cable is not twisted too much.

8. DISPOSAL

In the interest of protecting the environment, the unit must not be thrown out with the household waste at the end of its service life. Dispose of the unit at a suitable local collection or recycling point.

Observe the local regulations for material disposal.

Please dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment).

If you have any queries, please contact the appropriate local authorities.

You can find out about collection points for your old units e.g. from the local municipal government, the local waste disposal company or your dealer.



9. TECHNICAL SPECIFICATIONS

Weight	Approx. 646 g
Power supply	220-240 V~, 50-60 Hz
Power consumption	2000W
Safety class	II
Ambient conditions	Only approved for indoor use
Allowable temperature range	-10 to +40 °C

Subject to technical modifications.

10. WARRANTY

Further information on the warranty and warranty conditions can be found in the warranty leaflet supplied.

