

beurer

HC 17



EN Foldable compact hair dryer
Instructions for use

CE





Read these instructions for use carefully. Follow the warnings and safety notes. Keep these instructions for use for future reference. Make the instructions for use accessible to other users. If the product is passed on, provide the instructions for use to the next user as well.

⚠ WARNING

- The product is only intended for domestic/private use, not for commercial use.
- This product can be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or people lacking experience or knowledge, provided that they are supervised or have been instructed on how to use the product safely and are aware of the consequent risks of use.
- Children must not play with the product.
- Danger of suffocation! Keep packaging materials away from children.
- Cleaning and user maintenance must not be performed by children unless supervised.
- Under no circumstances should you open or repair the product yourself. If you do so, it may no longer function correctly. Failure to comply will invalidate the guarantee.

- When using the product in the bathroom, unplug the plug after use as water in the vicinity constitutes a danger, even when the product is switched off.
- As an additional safety measure, we recommend the installation of a residual-current device (RCD) with a rated operational current not exceeding 30 mA in the bathroom circuit. Your local electrical specialist can provide you with the relevant information.

CONTENTS

1. Included in delivery	4	6. Cleaning and maintenance.....	7
2. Signs and symbols	4	7. Disposal.....	7
3. Warnings and safety notes	5	8. Technical data	8
4. Product description.....	7	9. Warranty	8
5. Usage	7		

1. INCLUDED IN DELIVERY

Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are included in the delivery. Before use, ensure that there is no visible damage to the product and supplied components, and that all packaging material has been removed. If you have any doubts, do not use the product and contact your retailer or the specified Customer Services address.

- 1 Foldable compact hair dryer
- 1 professional nozzle
- 1 set of these instructions for use

2. SIGNS AND SYMBOLS

The following symbols are used on the product, in these instructions for use, on the packaging and on the type plate for the product:

DANGER

Indicates an imminent danger. If it is not avoided, it will result in death or serious injury.

WARNING

Indicates a potentially impending danger. If it is not avoided, there is a risk of death or serious injury.

⚠ CAUTION

Indicates a potentially impending danger. If it is not avoided, slight or minor injuries may result.

NOTICE

Indicates a potentially harmful situation. If it is not avoided, the system or something in its vicinity may be damaged.



Product information
Note on important information



Read the instructions



The electronic device must not be disposed of with household waste



Manufacturer



CE labelling

This product satisfies the requirements of the applicable European and national directives.



Marking to identify the packaging material. A = material abbreviation, B = material number: 1–7 = plastics, 20–22 = paper and cardboard



Separate the product and packaging elements and dispose of them in accordance with local regulations.



Protection class II device



The products demonstrably meet the requirements of the Technical Regulations of the EAEU



Conformity assessed marking for the United Kingdom



Importer



Danger

This device must not be used near water or in water (e.g. in a wash basin, or in the shower or bath) – risk of electric shock!



Do not wind the cable around the device!

3. WARNINGS AND SAFETY NOTES

The product is only intended for the purpose described in these instructions for use. The manufacturer is not liable for damage resulting from improper or careless use. Failure to observe the following information may result in personal injury or material damage.

Intended purpose

⚠ WARNING

- Only use the product for external use and for the purpose for which it was developed and in the manner specified in these instructions for use.
- The product must only be used by individuals for drying and professionally styling hair!
- Only pull the cable from the socket by the mains plug.
- If the product is not used in the manner specified by the manufacturer, safety cannot be guaranteed.

NOTICE

- Do not use the product outside.
- Do not use any additional parts that are not recommended by the manufacturer or offered as accessories.

Risk of electric shock

⚠ DANGER

- Never use the product near baths, wash basins, showers or other objects containing water or other liquids.

- Never submerge the product in water or other liquids! If the product falls into water, do not reach into the water! First switch off the fuse at the fuse box and then pull the mains plug out of the socket. Have the product checked by an authorised specialist workshop before using it again!
- Make sure that no water gets inside the product!
- Never touch the product with wet or damp hands or feet.
- Keep metal objects (such as jewellery) away from the air intake to prevent them from being sucked in.
- Do not insert any objects into the casing!
- If there is visible damage to the product, mains cable/plug or accessories, do not use the product if you have any doubts and contact your retailer or the specified Customer Services address.
- Position yourself on a dry, non-conductive surface.
- Do not pull, twist or bend the mains cable and do not pull or route it over/on sharp, pointed objects or hot surfaces. Do not wind the mains cable around the product! Damaged or tangled mains cables increase the risk of electric shock!
- If the product has been dropped or has sustained any other damage, it must be replaced by the manufacturer, its customer service department or a similarly qualified person to avoid any risk. Do not use the product if it is damaged or not functioning correctly.

WARNING

- Only connect the product to a socket that has the correct voltage as indicated on the type plate.
- In the event of a fault, have the product repaired by a certified specialist workshop.
- The product must be disconnected from the mains when performing maintenance work and exchanging the attachments.

- Do not use extension cables in the bathroom. This ensures that the mains plug can be accessed quickly in an emergency.
- Do not jam the mains cable in drawers or doors, for example.
- Untangle the mains cable if it is twisted.

Risk of burns and fire

WARNING

- When the product is in operation, only hold the product by the handle **1**.
- Do not cover the product with towels or other objects while it is in operation or still hot.
- Do not cover the product, blower or air inlet.
- Ensure that you do not use flammable substances during usage and cleaning. Likewise, highly flammable liquids must not be located near the product.
- When using the product, unplug the mains plug after use as flammable substances in the vicinity constitutes a danger, even when the product is switched off.
- The product and the attachments used can become very hot during use, depending on the duration of use. Do not touch! Allow the product and attachments to cool down sufficiently on a non-flammable surface before disconnecting them!
- The removable filter, the air intake and the air outlet of the product must be free of lint, dust and hair that has been sucked in.
- The air supply must not be obstructed during use. Regularly check that the air vent is clean and free of hair.
- Place the product on non-flammable surfaces only.
- Keep the hot product away from easily damaged surfaces and the skin.
- Do not use the product on artificial hair.

4. PRODUCT DESCRIPTION

The related illustrations are on page 2.

1	Folding device handle
2	Anti-kink protection with hanging eyelet
3	Mains cable
4	Sliding switch with three settings: 0: Off 1: Low air flow, warm air 2: High air flow, hot air
5	Removable, rotating professional nozzle
6	Air outlet

5. USAGE

NOTICE

- A slight odour initially develops after switching on the product for the first time. This is normal and not harmful to your health. Allow the product to run for three to five minutes. After that you can use the product as normal.
 - Never leave the product unattended during use.
 - Switch off the product after each use and interruption.
 - For your safety, the product switches off automatically if it overheats.
1. Switch on the Foldable compact hair dryer using the sliding switch. **[4]**:
 - 0: Off
 - 1: Low air flow, warm air
 - 2: High air flow, hot air
 2. You can use the rotating professional nozzle **[5]** to adjust the direction of the hot air as required.
 3. Dry and/or style your hair as desired.
 4. After each use/at each break, always switch the foldable compact hair dryer off at the sliding switch **[4]** (setting 0).

5. After each use, pull the mains plug out of the socket.
6. Allow the device to cool down.
7. Do not wind the mains cable around the device! Store the device in a dry place out of the reach of children. The device can be hung on a hook using the hanging eyelet **[2]**.

6. CLEANING AND MAINTENANCE

NOTICE

- Your device is maintenance-free.
 - Protect the device from dust, dirt and humidity.
1. Disconnect the mains plug and leave the device to cool.
 2. Do not clean the foldable compact hair dryer with any highly flammable liquids! Risk of fire!
 3. The casing of the hair dryer and the accessories may be cleaned with a soft cloth dampened with warm water.
 4. Before each use, remove any fluff, dust and hair from the air outlet using an appropriately sized brush.

7. DISPOSAL

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the device at a suitable local collection or recycling point in your country. Observe the local regulations for material disposal. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment).

If you have any questions, please contact the local authorities responsible for waste disposal.



You can obtain the location of collection points for old devices from the local or municipal authorities, local waste disposal company or your dealer, for example.

8. TECHNICAL DATA

Weight	Approx. 359 g
Voltage supply	AC 220-240 V, 50-60 Hz
Power consumption	1300 W
Protection class	II
Ambient conditions	Only approved for indoors
Permissible temperature range	-10 to +40°C

Subject to technical changes.

The CE mark has been applied in accordance with the following European directives:

EMC 2014/30/EU

LVD 2014/35/EU

The Declaration of Conformity for this product can be found at the following address:

<https://www.beurer.com/conformity>

9. WARRANTY

Further information on the warranty and warranty conditions can be found in the warranty leaflet supplied.

Subject to errors and changes



Beurer GmbH • Söflinger Str. 218 • 89077 Ulm (Germany)
www.beurer.com • www.beurer-healthguide.com
www.beurer-gesundheitsratgeber.com



100.72_HC17_2025-07-18_05_IM2_BEU_EN