 
 
 
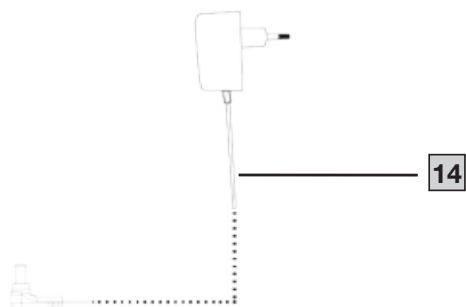 
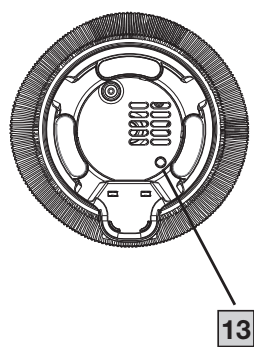 
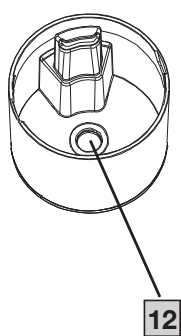 


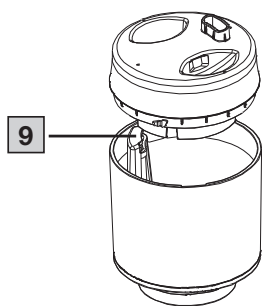

EN	Aroma diffuser	
	Instructions for use.....	3

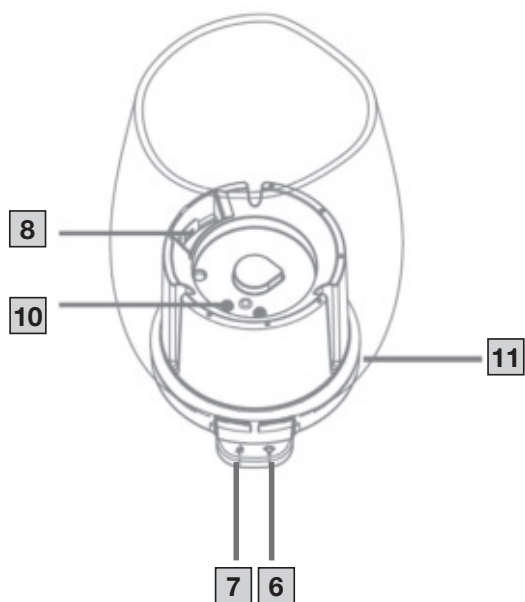

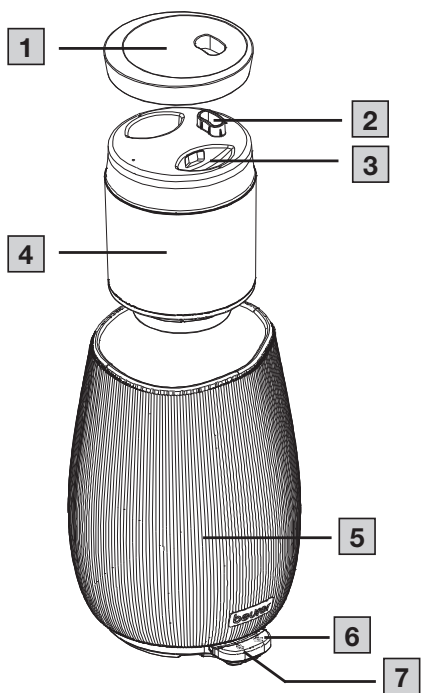

Read these instructions for use carefully. Follow the warnings and safety notes. Keep these instructions for use for future reference. Make the instructions for use accessible to other users. If the device is passed on, provide the instructions for use to the next user as well.

CONTENTS

1. Included in delivery	4	6.3 Setting the mist intensity and light.....	6
2. Signs and symbols	4	6.4 After use.....	6
3. Intended purpose	4	7. Cleaning and maintenance.....	7
4. Warnings and safety notes	4	8. What if there are problems?	7
5. Device description.....	5	9. Accessories and replacement parts.....	7
6. Usage.....	5	10. Disposal.....	7
6.1 Initial use.....	5	11. Technical specifications	7
6.2 Switching on the device.....	6	12. Guarantee.....	7

⚠ WARNING

- This device may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely, and are fully aware of the consequent risks of use.
- Children must not play with the device.
- Cleaning and user maintenance must not be performed by children unless supervised.
- Disconnect the device from the mains supply during filling or cleaning.
- Do not use any solvent-based cleaning products.
- Do not allow the area around the device to become wet or damp. If moisture is present, reduce the humidification output of the device. If the humidification output cannot be reduced, temporarily suspend use of the device. Make sure that absorbent materials such as carpets, curtains, drapes or tablecloths do not become damp.
- If the mains connection cable of this device is damaged, it must be disposed of. If it cannot be removed, the device must be disposed of.
- Note that high moisture levels may promote the growth of biological organisms in the environment.
- Never leave water in the tank when the device is not in use.
- Micro-organisms that may be in the water or in the environment where the device is used or stored may thrive in the water tank and become airborne. This can pose serious health risks if the water is not replaced every three days and the tank is not properly cleaned.
- Empty and clean the device before storing it away. Clean the device before the next use.




1. INCLUDED IN DELIVERY











Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are present. Before use, ensure that there is no visible damage to the device and the supplied components and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.













- 1 aroma diffuser
- 1 mains adapter
- 1 these instructions for use

2. SIGNS AND SYMBOLS

The following symbols are used on the device, in these instructions for use, on the packaging and on the type plate for the device:

	WARNING Indicates a potentially impending danger. If it is not avoided, there is a risk of death or serious injury.
	CAUTION Indicates a potentially impending danger. If it is not avoided, slight or minor injuries may result.
	NOTICE Indicates a potentially harmful situation. If it is not avoided, the device or something in its vicinity may be damaged.


	Product information Note on important information
	Read the instructions
	The electronic device must not be disposed of with household waste
	Manufacturer
	CE labelling This product satisfies the requirements of the applicable European and national directives.
	Separate the product and packaging elements and dispose of them in accordance with local regulations.
	Marking to identify the packaging material. A = material code, B = material number: 1–7 = plastics, 20–22 = paper and cardboard
	Protection class II device
	Protection class III device
	The products demonstrably meet the requirements of the Technical Regulations of the EAEU

	Importer
	Energy efficiency level 6
	Water tank, periodical cleaning
	For indoor use only
	Do not use the mains adapter if the plug is damaged.
	Safety isolating transformer, short-circuit proof
	Polarity of DC power connection
	Switch mode power supply unit
	Tested for safety in accordance with the requirements of the “Produktsicherheitsgesetz” (German Product Safety Act)
	United Kingdom Conformity Assessed Mark
	Packaging made from recycled material
	Standard for independent certification of recycled material

3. INTENDED PURPOSE

The aroma diffuser is only to be used for improving the ambient scent in a room. The device is intended for private use. Use the device for the purpose it was developed for only and in the manner specified in these instructions for use. Any form of improper use can be dangerous. The manufacturer is not liable for damage resulting from improper or incorrect use.

4. WARNINGS AND SAFETY NOTES

	WARNING Failure to observe the following information may result in personal injury or material damage. <ul style="list-style-type: none">• Only operate the device using the supplied mains adapter.• Danger of suffocation! Keep packaging material away from children.• If you suffer from a severe respiratory or lung disease, consult your doctor before using the device.• If you start to feel unwell while the device is in use, stop using it immediately, switch the device off and ventilate the room.• The device is only to be used with the recommended vaporization agent. The use of other substances may trigger toxic reactions, or pose a fire risk.
---	---

⚠ WARNING

Electric shock

- Water must never enter inside the device.
- As with every electrical device, use this device carefully and cautiously, in order to avoid hazards due to electric shock.
- Therefore, observe the following instructions for use:
 - Only use this device with the voltage specified on the device
 - Never use the device if it shows visible signs of damage
 - Do not use the device during a storm
- In the event of defects or operational faults, switch the device off immediately and disconnect it from the mains socket. Do not pull on the mains cable or on the device to disconnect the mains adapter from the socket. Never hold or carry the device by the mains cable.
- Only use the device in dry rooms (e.g. never in the bath, sauna).
- Never pick up a device that has fallen into water. Disconnect the mains adapter immediately.
- Do not drop the device or subject it to any impacts.
- Do not clamp or pinch the mains cable.
- Ensure that the mains cable and mains adapter do not come into contact with water, steam or other liquids.

⚠ WARNING

Repairs

Only specialist personnel may perform repairs on electrical devices. Improper repairs may put users in significant danger. For repairs, please contact Customer Services or an authorised retailer.

⚠ WARNING

Risk of fire

There may be a risk of fire if the device is used improperly or these instructions for use are ignored.

Therefore, observe the following instructions for use:

- Never use the device underneath a cover, such as a blanket, pillow, etc.
- Never use the device near petrol or other highly flammable substances.

⚠ CAUTION

Handling

- The device must be switched off and disconnected after every use and before cleaning.
- Ensure that the mains cable does not pose a trip hazard.
- Do not insert any objects into openings on the device.
- Do not place any objects on the device.
- Ensure that the device is placed on a firm, secure surface that is not susceptible to moisture.

NOTICE

- Do not expose the device to high temperatures.
- Avoid water damage by handling the device carefully (e.g. water damage from splashing in the vicinity of wooden floors).
- If the device should accidentally tip over, water may escape, even if the device is switched off and unplugged.
- The immediate vicinity of the device can become damp.
- Depending on the water quality and temperature, the amount of mist may be lower at the beginning.
- Calcareous water can leave white deposits.
- Do not place the device on the floor, but in a raised position (e.g. on a table or chest of drawers).
- Position the device so that the mist outlet is not directed towards objects.
- Empty any remaining water when the device is not in use.

- The water tank and the cover are made of oil-resistant materials. Keep aroma oils away from other components of the device as these could become damaged by certain ingredients within the oils.

5. DEVICE DESCRIPTION

The associated drawings are shown on page 3.

- | | |
|--------------------------|-------------------------------|
| 1 Cover | 8 Ventilation opening |
| 2 Outlet | 9 Ventilation duct |
| 3 Water tank lid | 10 Contacts |
| 4 Water tank | 11 Air inlet |
| 5 Ceramic housing | 12 Ultrasound membrane |
| 6 Light button | 13 Water drainage hole |
| 7 Mist button | 14 Mains adapter |

6. USAGE

6.1 Initial use


⚠ WARNING

- Only fill the device when the mains adapter is unplugged!
- NEVER fill the device when the cover is still attached.
- **When using aroma oils, always observe the manufacturer's instructions regarding proper use.**
- Open the cardboard packaging, remove all the packaging materials and check the device for damage.

1. Plug the mains cable of the mains adapter **14** into the connection socket on the bottom of the device. Feed out the cable at the recess marked "cable outlet".




2. Pull the cover **1** up and off.
3. Grasp the water tank lid **3** by the recessed handles and pull the water tank **4** up and off.

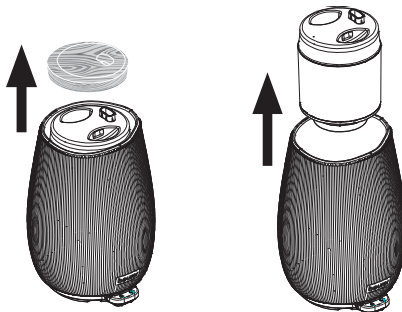


4. Unscrew the water tank lid **3** from the water tank **4**.



5. Carefully fill the water tank with water. Ensure that you do not fill the water tank above the "MAX" marking.

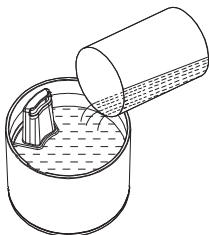


6. Place three to five drops of the desired aroma oil (not included in delivery) into the water tank.

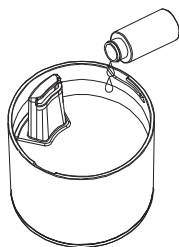


7. Screw the water tank lid **3** onto the water tank **4** until it engages securely. Then insert the water tank into the ceramic housing **5**. Make sure that the gold contacts on the underside of the water tank touch the two gold contacts **10** on the ceramic housing.



8. Place the cover **1** back onto the water tank lid **3** from above.

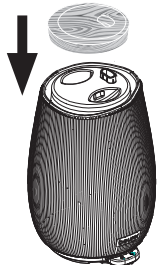


9. Insert the mains adapter **14** into a suitable socket. The device is now ready for use.

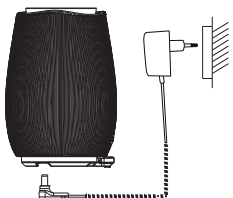

6.2 Switching on the device

Press the mist button **7** or light button **6** to switch on the device.

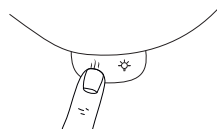

6.3 Setting the mist intensity and light



Set the mist

Press 1x
Continuous mist

Press 2x
Intermittent mist
(5 sec. on/off)

Press 3x
Mist switched off

Set the light

Press 1x
Warm, bright light

Press 2x
Cold, bright light

Press 3x
Red light

Press 4x
Pink light

Press 5x
Purple light

Press 6x
Dark blue light

Press 7x
Turquoise light

Press 8x
Green light

Press 9x
Yellow light

Press 10x
Mood light with change of colour

Hold down and release
To dim the current colour

Press 11x
Mood light switched off

i When the device is switched off, the most recent colour setting is saved.

6.4 After use

1. Disconnect the device from the socket and the mains adapter **14**.
2. Pull the cover **1** up and off.
3. Grasp the water tank lid **3** by the recessed handles and pull the water tank **4** up and off.
4. Unscrew the water tank lid **3** from the water tank **4**.
5. Pour any remaining water as shown inside the housing down the drain.

⚠ WARNING

When pouring out the water, ensure that the ventilation duct **9** is located at the top. Ensure that no water gets inside the device.

6. Clean all parts with a dry cloth.
7. Clean the device as described under chapter "7. Cleaning and maintenance".

What to do if the device tips over during use

If the device should tip over during use, then water may enter the ventilation opening. In the event of this, there is a water drainage hole **13** on the underneath of the device so that the water can drain out of the ventilation opening. To drain the water from the water drainage hole **13**, proceed as follows:


1. Remove the mains adapter **14** from the mains socket.
2. Empty the water tank **4** with the ventilation opening **8** at the top so that no water can enter the ventilation opening **8**.

3. Tip the device in the direction of the water drainage hole **13** so that the water can drain.
4. Allow the device to dry for at least 24 hours.

7. CLEANING AND MAINTENANCE

Before cleaning the device, ensure that the device is disconnected from the power supply and that there is no water left in the water tank **4**. Regular cleaning is a prerequisite for hygienic and fault-free operation. The device can be dismantled for cleaning easily and without tools (see chapter “6.1 Initial use”).

- In the middle of the water tank **4**, the device has an ultrasound membrane **12**. Carefully clean the ultrasound membrane **12** using a cotton bud each week. Depending on the frequency of use, you can also clean the ultrasound membrane **12** several times a week.
- Clean the device after every use using a soft, slightly damp cloth, paying particular attention to the inside of the water tank **4**. Never use abrasive, corrosive or solvent-based cleaning products.
- If a layer of limescale forms in the water tank **4**, briefly apply a citric acid or vinegar solution beforehand.

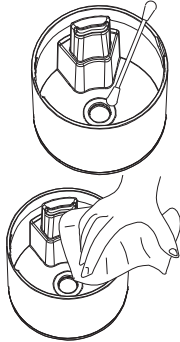

8. WHAT IF THERE ARE PROBLEMS?

Problem	Possible cause	Solution
No mist, or very little mist, is coming out of the device.	Mains adapter 14 is not plugged in.	Insert the mains adapter 14 into a suitable socket.
	There is not enough water in the water tank 4 .	Fill the water tank 4 up to the “MAX” marking.
	There is too much water in the water tank 4 .	Pour away excess water from the water tank 4 until it only reaches the “MAX” marking.
	Ultrasound membrane 12 is clogged.	Clean the ultrasound membrane 12 as described in chapter “7. Cleaning and maintenance”.
	The outlet 2 is blocked.	Check that the outlet 2 is not blocked.
	Water tank 4 is making insufficient contact with the device.	Clean the contacts 10 with a dry cloth. Dust may have accumulated there.
	The water that has been added is too cold.	Pour in warm, but not boiling, water.

If you cannot find a solution to your problem here, contact our Customer Services.

9. ACCESSORIES AND REPLACEMENT PARTS


To purchase accessories and replacement parts, please visit www.beurer.com or contact the corresponding service address (according to the service address list) in your country. Accessories and replacement parts are also available from retailers.

Article	Article number
Beurer by Taoasis “Vitality” aroma oil (10 ml)	681.30

10. DISPOSAL

The device can be recycled more easily if you dispose of the individual elements (ceramic, wood, plastic, electronics, cables) separately. **Always disconnect the appliance from the power supply before dismantling.**

1. Pull the cover **1**, the water tank lid **3** and the water tank **4** out of the ceramic housing **5**.
2. Open the three rubber feet on the base of the housing and remove them. Unscrew the screws underneath.
3. Separate the individual components from each other.
4. Now dispose of the cover **1**, water tank lid **3**, water tank **4**, ceramic housing **5**, mains adapter **14** and electrical components separately from each other.

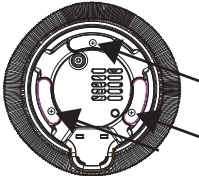

For environmental reasons, do not dispose of the device in household waste at the end of its service life. Dispose of the device at a suitable local collection or recycling point in your country. Observe the local regulations for material disposal. Dispose of the device in accordance with EC Directive Waste Electrical and Electronic Equipment (WEEE). If you have any questions, please contact the local authorities responsible for waste disposal. You can obtain the location of collection points for old devices from the local or municipal authorities, local waste disposal companies or your retailer, for example.



11. TECHNICAL SPECIFICATIONS

Product name	LA 45
Power supply	Input: 100-240 V ~ 50/60 Hz 0.35 A Output: 24.0 V === 0.5 A; 12.0 W
Water tank capacity	140 ml
Room size	up to approx. 20 m²
Operating principle	Ultrasonic atomiser
Mist settings	Continuous mist and intermittent mist
Running time	Approx. 4 hours of continuous mist Approx. 8 hours of intermittent mist
Weight	Approx. 855 g
Dimensions	Approx. 13 x 13 x 18.3 cm
Average efficiency during operation	85.63 %
Efficiency at low load (10%)	79.48 %
No-load power consumption	0.069 W
Mains adapter	Manufacturer: KPTEC Guangdong Quanjin Electronics Technology Co. Ltd EU (110.183): K12E240050G, UK: K12E240050B

12. GUARANTEE

Further information on the guarantee and guarantee conditions can be found in the guarantee leaflet supplied.



Beurer GmbH • Söflinger Str. 218 • 89077 Ulm, Germany
www.beurer.com • www.beurer-gesundheitsratgeber.com • www.beurer-healthguide.com



105.08_LA45GP_2025-09-17_02_IM2_BEU_EN