

beurer

HC 25




EN Travel Hair Dryer
Instructions for use

CE



A

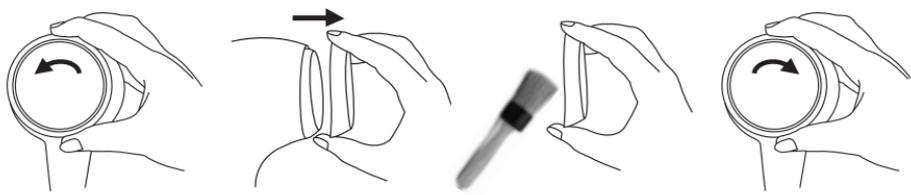



Read these instructions for use carefully. Read the warnings and safety notes carefully. Keep these instructions for use for future reference. Make the instructions for use accessible to other users. If the device is passed on, provide the instructions for use to the next user as well.

1. INCLUDED IN DELIVERY

Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are included in the delivery. Before use, ensure that there is no visible damage to the product and supplied components, and that all packaging material has been removed. If you have any doubts, do not use the product and contact your retailer or the specified Customer Services waddress.

- 1 compact hair dryer
- 1 professional nozzle
- 1 set of these instructions for use

TABLE OF CONTENTS

1. INCLUDED IN DELIVERY	3
2. IMPORTANT SAFETY NOTES	4
3. SIGNS AND SYMBOLS	5
4. DEVICE DESCRIPTION	6
5. USAGE	6
6. CLEANING AND MAINTENANCE.....	6
7. DISPOSAL	6
8. TECHNICAL DATA	7
9. WARRANTY	7

2. **IMPORTANT SAFETY NOTES**

- The device must only be used for the purpose for which it was designed and in the manner specified in the instructions for use.
- These devices may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills, or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely, and have understood the risks involved.
- Children must not play with the device.
- Danger of suffocation! Keep packaging materials away from children.
- Cleaning and user maintenance must not be performed by children unless supervised.
-  Do not use this appliance near bathtubs, shower trays or other containers which have water in them.
- Risk of electric shock! Never submerge the device in water or other liquids. If the device falls into water, do not reach into the water! First switch off the fuse at the fuse box and then pull the mains plug out of the socket.
- If using the device in the bathroom, unplug it after use – this is because proximity to water constitutes a danger even when the hair dryer is switched off.
- As an additional safety measure, the installation in the bathroom circuit of a residual current device (FI/RCD) with a rated tripping current not exceeding 30 mA is recommended. Ask your installer for advice.

- This device is not designed for use in commercial areas.
- If the mains connection cable of this device is damaged, it must be replaced by the manufacturer, its customer service department or a similarly qualified person, in order to prevent hazards. Do not use the device if it is damaged or not functioning correctly.
- Do not pull, twist or bend the mains cable . Do not wrap the mains cable  around the hair dryer!
- Risk of fire! Ensure that the air outlet opening  and the removable guard are  not covered.

3. SIGNS AND SYMBOLS

The following symbols are used on the device, in these instructions for use, on the packaging and on the type plate for the device:

	This device must not be used near water or in water (e.g. in a wash basin, or in the shower or bath) – risk of electric shock!
	Warning notice indicating a risk of injury or damage to health.
	Marking to identify the packaging material. A = Material code, B = Material number: 1-6 = Plastics, 20-22 = Paper and cardboard
	Separate the packaging elements and dispose of them in accordance with local regulations.
	Read the instructions for use
	This product satisfies the requirements of the applicable European and national directives.

	The device is double-protected and thus corresponds to protection class 2
	The product demonstrably meets the requirements of the Technical Regulations of the EAEU
	Disposal in accordance with the Waste Electrical and Electronic Equipment EC Directive – WEEE
	Manufacturer
	United Kingdom Conformity Assessed Mark
	Do not wrap the cable around the device
	Importer symbol

4. DEVICE DESCRIPTION

The associated drawings are shown on page 3.

1	Removable, rotating professional nozzle
2	Folding device handle
3	Voltage switchover
4	Anti-kink protection with hanging eyelet
5	Mains cable
6	Cold air button ❄️
7	Sliding switch with three settings: 0 Off 1 Low air flow, warm air 2 High air flow, hot air
8	Removable protective grille with lint filter
9	Air outlet

5. USAGE

- Switch on the travel hair dryer at the sliding switch **7**:
 - 0 Off
 - 1 Low air flow, warm air
 - 2 High air flow, hot air
- You can use the rotating professional nozzle **1** to adjust the direction of the hot air as required.
- Dry and/or style your hair as desired.
- The cold level offers the perfect styling finish. It cools down your hair and holds it in place for a better result. You can enable the cold level at any time by holding down the button. As soon as you release the button, the previously selected heat level returns.
- After each use/at each break, always switch off the travel hair dryer at the sliding switch **7** (setting 0).
- After each use, pull the mains plug out of the socket.
- Allow the device to cool down.

- Do not wind the mains cable around the device! Store the device in a dry place out of the reach of children. The device can be hung on a hook using the hanging eyelet **4**.

6. CLEANING AND MAINTENANCE

- Disconnect the mains plug and leave the device to cool.
- Remove and clean the guard as shown in figure **A**. To ensure a long service life, clean the guard at regular intervals.

7. DISPOSAL

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the device at a suitable local collection or recycling point in your country. Observe the local regulations for material disposal. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal. You can obtain the location of collection points for old devices from the local or municipal authorities, local waste disposal company or your dealer, for example.



8. TECHNICAL DATA

Weight	Approx. 426 g
Voltage supply	AC 100-120 / 220-240 V, 50-60 Hz
Power consumption	800-1200 / 1350-1600 W
Protection class	II
Ambient conditions	Only approved for indoors
Permissible temperature range	-10 to +40°C

Subject to technical changes.

The CE mark has been applied in accordance with the following European directives:

EMC 2014/30/EU

LVD 2014/35/EU

The Declaration of Conformity for this product can be found at the following address:

<https://www.beurer.com/conformity>

9. WARRANTY

Further information on the warranty and warranty conditions can be found in the warranty leaflet supplied.



UK-Importer: Beurer UK Ltd.
Suite 16, Stonecross Place • Yew Tree Way • WA3 2SH Golborne
United Kingdom



Beurer GmbH • Söflinger Str. 218 • 89077 Ulm (Germany)
www.beurer.com • www.beurer-healthguide.com
www.beurer-gesundheitsratgeber.com

