


beurer

HS 50



EN Hair straightener
Instructions for use

CE

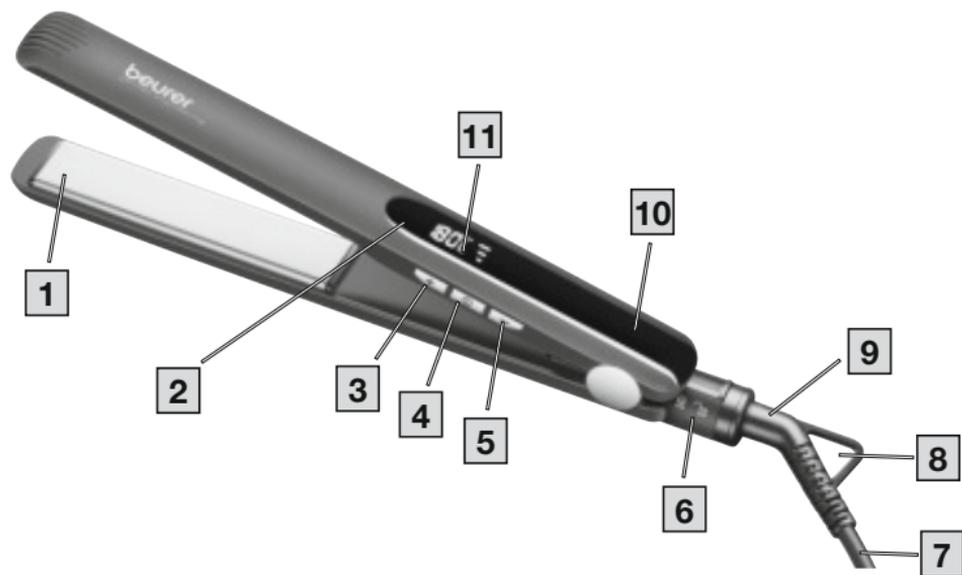

ENGLISH



Read these instructions for use carefully. Observe the warnings and safety notes. Keep these instructions for use for future reference. Make the instructions for use accessible to other users. If the device is passed on, provide the instructions for use to the next user as well.

⚠ WARNING

- The device is only intended for domestic/private use, not for commercial use.
- This device may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely, and are fully aware of the consequent risks of use.
- Children must not play with the device.
- Cleaning and user maintenance must not be performed by children unless supervised.
- If the mains connection cable of this device is damaged, it must be replaced by the manufacturer, its customer service department or a similarly qualified person to avoid any risk.
- When using the device in the bathroom, unplug the plug after use as water in the vicinity constitutes a danger, even when the device is switched off.

- Never use the device near baths, wash basins, showers or other objects containing water or other liquids – risk of electric shock!
- As an additional safety measure, we recommend the installation of a residual-current-operated protective device (RCD) with a rated operational current not exceeding 30 mA in the bathroom circuit. Your local electrical specialist can provide you with the relevant information.

Table of contents

1. Signs and symbols.....	4	6. Usage.....	6
2. Intended use.....	5	7. Cleaning and maintenance.....	7
3. Warnings and safety notes.....	5	8. Disposal.....	8
4. Included in delivery.....	6	9. Technical specifications.....	8
5. Device description.....	6	10. Warranty.....	8

1. SIGNS AND SYMBOLS

The following symbols are used on the device, in these instructions for use, on the packaging and on the type plate for the device: wendet:

DANGER

Indicates an imminent danger. If it is not avoided, it will result in death or serious injury.

WARNING

Indicates a potentially impending danger. If it is not avoided, there is a risk of death or serious injury.

CAUTION

Indicates a potentially impending danger. If it is not avoided, slight or minor injuries may result.

NOTICE

Indicates a potentially harmful situation. If it is not avoided, the system or something in its vicinity may be damaged.



Danger

The device must not be used near to water or in water (e.g. in a wash basin, or in the shower or bath) – risk of electric shock!



Read the instructions

3. WARNINGS AND SAFETY NOTES

	Manufacturer
	The electronic device must not be disposed of with household waste
	Marking to identify the packaging material. A = Material code, B = Material number: 1-7 = Plastics, 20-22 = Paper and cardboard
	The products demonstrably meet the requirements of the Technical Regulations of the EAEU.
	Protection class II device
	CE labelling This product satisfies the requirements of the applicable European and national directives.
	United Kingdom Conformity Assessed Mark
	Separate the product and packaging elements and dispose of them in accordance with local regulations.
	Importer

2. INTENDED USE

The hair straightener must only be used for private use to straighten and style your own hair.

⚠ WARNING

The device is suitable only:

- for external use.
- for the intended purpose and as specified in these instructions for use.

Any form of improper use can be dangerous.

⚠ DANGER

- Risk of electric shock! Never submerge the device in water or other liquid! 
- Risk of electric shock! If the device should fall into water despite following all safety precautions, immediately pull the mains plug from the socket! Do not reach into the water!
- Danger to life due to electric shock! Have the device checked by an authorised specialist workshop before using it again.

⚠ WARNING

- Risk of electric shock and injury! If the device has been dropped or has suffered any other damage, it must no longer be used.
- Risk of electric shock! If there is visible damage to the device, mains cable/plug or accessories: If you have any doubts, do not use the device and contact your retailer or the specified Customer Services address.
- Danger of suffocation! Keep packaging materials away from children.
- Do not use extension cables in the bathroom. This ensures that the mains plug can be accessed quickly in an emergency.
- Risk of fire! Do not use the device on synthetic hair.

NOTICE

- Remove all packaging material before using the device. Also remove the protective film from the display **[2]**.
- Only pull the mains cable **[7]** from the socket by the mains plug.

- Do not use any additional parts that are not recommended by the manufacturer or offered as equipment.
- Under no circumstances should you open or repair the device yourself, as faultless functionality can no longer be guaranteed thereafter. Failure to comply with this instruction will void the warranty.
- Never leave the device unattended during use.
- Do not use the device outside.

9 360° swivel joint

10 Handle

11 Keylock

6. USAGE

6.1 Please note the following before use

▲ WARNING

Risk of burns and fire!

The device becomes very hot. When the device is switched on, it must only be held using the handle. Do not touch the coated hot plates **1**. Do not clamp objects between the coated hot plates **1**.

▲ CAUTION

- Untangle the mains cable **7** if it is twisted.
- Do not pull, twist or bend the mains cable **7** and do not pull or route it over/on sharp, pointed objects or hot surfaces.
- Do not jam the mains cable **7** in drawers or doors, for example. The risk of electric shock is increased if the mains cable **7** is damaged or tangled.

6.2 Straightening/styling hair

1. Dry your hair thoroughly before using the hair straightener. Position yourself on a dry, non-conductive surface. Make sure that your hands are dry!
2. Hair should be clean and free from styling products. The exception to this is special products designed to help straighten hair.
3. Comb your hair with a large-toothed comb to get rid of any tangles.
4. Unlock the hair straightener at the lock mechanism **6** by pushing the switch to the position .

4. INCLUDED IN DELIVERY

Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are present. Before use, ensure that there is no visible damage to the device or accessories and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Services address.

- 1 hair straightener
- 1 set of instructions for use

5. DEVICE DESCRIPTION

The associated drawings are shown on page 3.

- 1** Ceramic-keratin-coated hot plates with tourmaline crystals
- 2** LED display
- 3** Button for increasing the temperature (+)
- 4** On/off switch 
- 5** Button for decreasing the temperature (-)
- 6** Locking mechanism
- 7** Mains cable
- 8** Anti-kink protection with hanging eyelet

- To switch on the hair straightener, press and hold the ON/OFF switch **4** for three seconds.
- The heat-up phase is shown through three alternating flashing bars in the LED display **2**. When the three bars are permanently illuminated, the temperature shown in the LED display **2** has been reached and the hair straightener is ready for use.
- The temperature can be increased by pushing button **3**. The temperature can be decreased by pushing button **5**.

We recommend the following temperature settings:

- 120 °C to 140 °C: Fine, brittle, dyed, bleached hair
 - 160 °C to 180 °C: Normal hair
 - 200 °C to 220 °C Thick and resistant hair
- The temperature can be fixed by pressing the **5** button for 3 seconds. The button lock **11** appears in the LED display **2**. To cancel the button lock **11**, press the **5** button for 3 seconds. The button lock **11** goes out in the LED display **2**.
 - Part the hair into individual sections that are approximately 3 to 4 cm wide. Hold a section taut and place it between the hot plates **1** at the roots.
 - Slowly move the hair straightener from the roots to the tips in a fluid motion. Do not hold the hair straightener in one place for more than two seconds. This will achieve the best results without subjecting your hair to excess stress or damage.
 - You can style the ends of your hair by turning the hair straightener inwards or outwards before running it over the tips of the hair.

NOTICE

The hair straighteners feature a safety switch-off function. After approx. 25 minutes, the three bars in the LED display **2** start to

flash simultaneously to remind you about the automatic switch-off. If you want to use the hair straighteners for longer than 30 minutes, switch the device off and then immediately on again. The safety switch-off function is then reset to activate again in 30 minutes.

6.3 After use

The hair straightener can only be switched off when the button lock **11** is deactivated.

- To switch off the hair straightener, press and hold the ON/OFF switch **4** for three seconds. "OFF" appears in the LED display **2** of the hair straightener.
- Place the hair straightener on a non-flammable surface.
- After each use, pull the mains plug out of the socket.
- Allow the device to cool down.
- Do not wind the mains cable **7** around the device!
- Store the device in a dry place out of the reach of children.
- Lock the hair straightener at the lock mechanism **6** by pushing the switch to the position **8**.
- The device can be hung on a hook using the hanging eyelet **8**.

7. CLEANING AND MAINTENANCE

Cleaning

⚠ WARNING

- Risk of electric shock! Always pull the mains plug out of the socket before cleaning the device.
- Risk of electric shock! Ensure that no water gets inside the device!
- Risk of fire! Do not clean the device with liquids.

NOTICE

- Your device is maintenance-free.
- Protect the device from dust, dirt and moisture.
- Do not clean the device in the dishwasher.
- Do not use any aggressive, caustic, abrasive or corrosive cleaning products or hard brushes.
- The housing of the hair straightener and the hot plates **1** may be cleaned with a soft cloth dampened with warm water.

8. DISPOSAL

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life.

Dispose of the device at a suitable local collection or recycling point in your country.

Please dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment).

If you have any questions, please contact the local authorities responsible for waste disposal.



9. TECHNICAL SPECIFICATIONS

Weight	Approx. 345 g
Voltage supply	100-240 V~, 50-60 Hz
Power consumption	42-52 W
Protection class	II
Ambient conditions	Only approved for indoors
Permissible temperature range	-10 to +40 °C

Subject to technical changes

10. WARRANTY

Further information on the warranty and warranty conditions can be found in the warranty leaflet supplied.



UK: Beurer UK Ltd., Suite 16, Stonecross Place, Stonecross Lane North, WA3 2SH Lowton, United Kingdom



Beurer GmbH, Söflinger Str. 218, 89077 Ulm, Germany,
www.beurer.com

