

# beurer



## HS 100



**EN** Hair straightener  
Instructions for use

CE



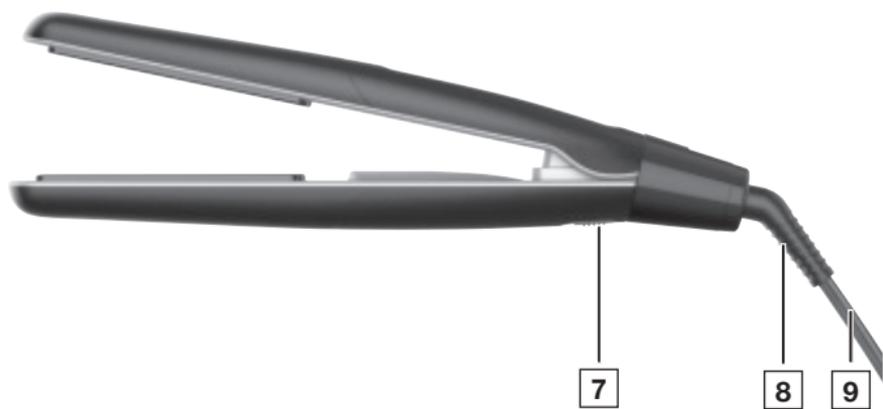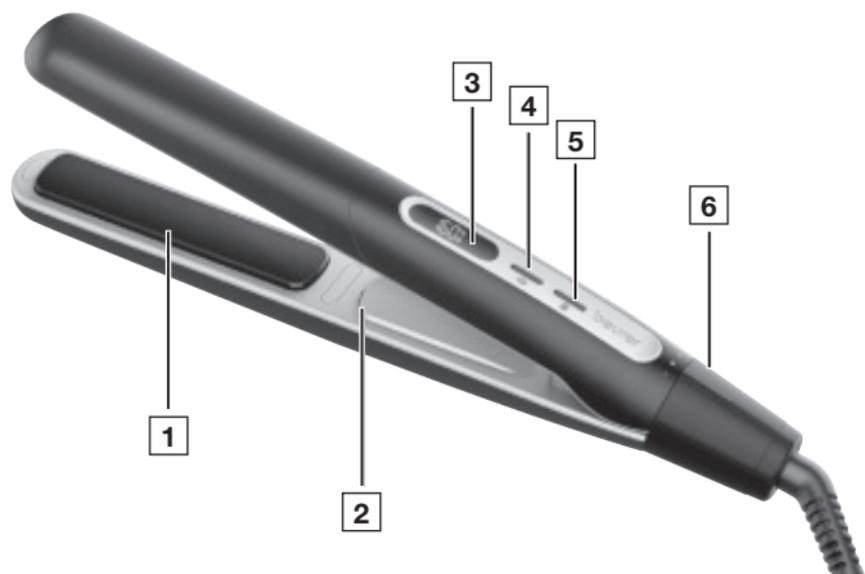



**Read these instructions for use carefully. Observe the warnings and safety notes. Keep these instructions for use for future reference. Make the instructions for use accessible to other users. If the device is passed on, provide the instructions for use to the next user as well.**

## **Included in delivery**

Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are present. Before use, ensure that there is no visible damage to the device or accessories and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address

- 1 Hair straightener
- 1 storage box
- 1 set of these instructions for use

## **Table of contents**

1. IMPORTANT SAFETY NOTES.....	5	5. CLEANING AND MAINTENANCE .....	10
2. SIGNS AND SYMBOLS .....	7	6. DISPOSAL .....	11
3. DEVICE DESCRIPTION .....	8	7. TECHNICAL DATA .....	11
4. USAGE .....	8	8. WARRANTY .....	11

## 1. **IMPORTANT SAFETY NOTES**

- The device must be used for the purpose for which it was designed and in the manner specified in these instructions for use. Any form of improper use can be dangerous.
- This device may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely, and are fully aware of the consequent risks of use.
- Children must not play with the device.
- Danger of suffocation! Keep packaging materials away from children.
- Cleaning and user maintenance must not be performed by children unless supervised.
-  Do not use this device near bathtubs, shower trays or other containers which have water in them.
- Risk of electric shock! Never submerge the device in water or other liquids. If the device falls into water, do not reach into the water! First switch off the fuse at the fuse box and then pull the mains plug out of the socket.
- When using the device in the bathroom, unplug the plug after use as water in the vicinity constitutes a danger, even when the device is switched off.

- As an additional safety measure, the installation in the bathroom circuit of a residual current device (FI/RCD) with a rated tripping current not exceeding 30 mA is recommended. Ask your installer for advice.
- If the mains connection cable of this device is damaged, it must be replaced by the manufacturer, its customer service department or a similarly qualified person to avoid any risk. Do not use the device if it is damaged or not functioning correctly.
- This device is not designed for use in commercial areas.
- Do not pull, twist or bend the mains cable ! Untangle the mains cable  if it is twisted. Do not wind the mains cable  around the device!
- Under no circumstances should you open or repair the device yourself, as correct functioning of the device can no longer be guaranteed should you do so. Failure to observe this will invalidate the warranty.
- The Hair straightener must only be used for private use to straighten and style your own hair.

## 2. SIGNS AND SYMBOLS

The following symbols are used on the device, in these instructions for use, on the packaging and on the type plate for the device:

	<b>DANGER</b> This device must not be used near water or in water (e.g. in a wash basin, or in the shower or bath) – risk of electric shock!
	Warning notice indicating a risk of injury or damage to health.
	<b>Product information</b> Note on important information
	Separate the packaging elements and dispose of them in accordance with local regulations.
	Marking to identify the packaging material. A = Material code, B = Material number: 1-7 = Plastics, 20-22 = Paper and cardboard
	Read the instructions for use
	<b>CE labelling</b> This product satisfies the requirements of the applicable European and national directives.
	<b>Protection class II device</b> The device is double-insulated and is, therefore, in protection class 2
	The products demonstrably meet the requirements of the Technical Regulations of the EAEU
	<b>Manufacturer</b>
	Disposal in accordance with the Waste Electrical and Electronic Equipment EC Directive – WEEE
	<b>United Kingdom Conformity Assessed Mark</b>



Separate the product and packaging elements and dispose of them in accordance with local regulations.

### 3. DEVICE DESCRIPTION

The associated drawings are shown on page 3.

- |                      |   |
|----------------------|---|
| 1 Coated hot plates  | 6 Temperature switch                          |
| 2 Ion outlet         | 7 Plate locking system                        |
| 3 LED display        | 8 360° swivel joint with anti-kink protection |
| 4 ON/OFF button      | 9 Mains cable                                 |
| 5 Button lock button |   |

### 4. USAGE

#### **Risk of burns and fire!**

The device becomes very hot. When the device is switched on, it must only be held using the handle. Do not touch the coated hot plates **1**. Do not clamp objects between the coated hot plates **1**.

1. Position yourself on a dry, non-conductive surface. Make sure that your hands are dry!
2. Hair should be clean and free from styling products. The exception to this is special products designed to help straighten hair.
3. Comb your hair with a large-toothed comb to get rid of any tangles.

4. Open the device using the plate locking system **[7]**.
5. Briefly hold down the ON/OFF button **[4]** to switch on the device.
6. Use the temperature switch **[6]** to set your desired temperature. The current set temperature setting is shown in the LED display **[3]**. You can use the temperature switch **[6]** to increase or decrease the temperature in 10°C increments. We recommend the following temperature settings:

120 °C to 140 °C	for fine, brittle, coloured or bleached hair
160 °C to 180 °C	for normal hair
200 °C to 220 °C	for thick and resistant hair

7. The LED display **[3]** flashes during the heat-up phase. As soon as the device is heated up, an acoustic signal sounds and the LED display **[3]** lights up continuously. The device is now ready for use.
8. Part the hair into individual sections of approximately 3 to 4 cm.
9. Place the individual sections between the coated hot plates **[1]** close to the root.
10. Slowly move the device from the roots to the tips in a fluid motion. Never hold the device in one place for more than two seconds. This will achieve the best results without subjecting your hair to excess stress or damage.
11. To shape the tips, turn the device outwards or inwards before moving it over the tips.
12. Press the ON/OFF button **[4]** to switch off the device. Place the device on a non-flammable surface.
13. After each use, pull the mains plug out of the socket. Leave the device to completely cool down.

14. Store the device in a dry place out of the reach of children. The fully cooled device can be stored and transported in the heat-resistant storage box.

### **i Note**

The device has an automatic switch-off function and switches off automatically after 30 minutes for safety reasons.

### **i Note**

The device has a button lock so that the device does not switch off if you press the ON/OFF button **4** unintentionally during use.

1. To activate the button lock, press and hold the button lock button **5** for 2 seconds. The LED display **3** shows **7**.
2. To deactivate the button lock, press and hold the button lock button **5** for 2 seconds. The LED display **3** no longer shows **7**.

## **5. CLEANING AND MAINTENANCE**

1. Risk of electric shock! Always pull the mains plug out of the socket before cleaning the device. Make sure that the device has cooled down completely.
2. Only clean the housing of the device and the coated hot plates **1** with a soft cloth dampened with warm water. Ensure that no water gets inside the device.
3. Protect the device from dust, dirt and humidity.
4. Risk of fire! Do not clean the device with highly flammable liquids.
5. Do not clean the device in the dishwasher. Do not use any aggressive, caustic, abrasive or corrosive cleaning products or hard brushes.

## 6. DISPOSAL

For environmental reasons, do not dispose of the device in household waste at the end of its service life. Dispose of the device at a suitable collection point in your country. Observe the local regulations for material disposal. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment).



If you have any questions, please contact the local authorities responsible for waste disposal.

You can obtain the location of collection points for old devices from the local or municipal authorities, local waste disposal company or your dealer, for example.

## 7. TECHNICAL DATA

Weight: approx. 425 g
Voltage supply: 220-240 V~, 50-60 Hz
Power consumption: 45 W
Temperature range: 120-220 °C

Protection class: II
Ambient conditions: Only approved for indoor use
Permissible temperature range: -10 to +40 °C

Subject to technical changes.

## 8. WARRANTY

Further information on the warranty and warranty conditions can be found in the warranty leaflet supplied.

Subject to errors and changes



Beurer GmbH • Söflinger Str. 218 • 89077 Ulm (Germany)  
[www.beurer.com](http://www.beurer.com) • [www.beurer-healthguide.com](http://www.beurer-healthguide.com)  
[www.beurer-gesundheitsratgeber.com](http://www.beurer-gesundheitsratgeber.com)



594.16\_HS100\_2026-02-19\_06\_IM2\_BEU\_EN