


# beurer

## FC 95



**EN** Facial brush  
Instructions for use

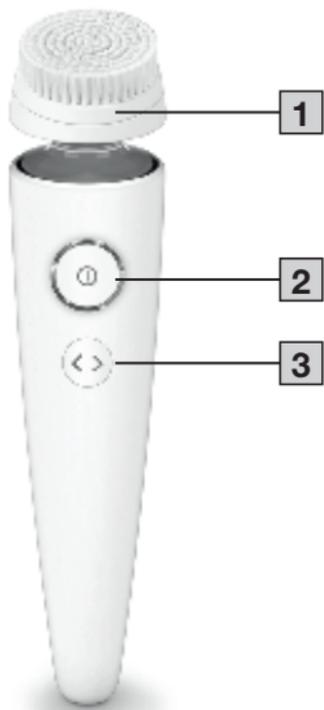

# ENGLISH



Read these instructions for use carefully. Follow the warnings and safety notes. Keep these instructions for use for future reference. Make the instructions for use accessible to other users. If the product is passed on, provide the instructions for use to the next user as well.

## **⚠ WARNING**

- The device is only intended for domestic/private use, not for commercial use.
- This device may be used by children over the age of eight and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely, and are fully aware of the consequent risks of use.
- Children must not play with the device.
- Cleaning and user maintenance must not be performed by children unless supervised.
- If the mains connection cable of this device is damaged, it must be disposed of. If it cannot be removed, the device must be disposed of.
- Under no circumstances should you open or repair the device yourself, as faultless functionality can no longer be guaranteed thereafter. Failure to comply will invalidate the warranty.

# CONTENTS

1. Included in delivery .....	4
2. Signs and symbols .....	4
3. Intended use.....	5
4. Warnings and safety notes.....	5
5. Product description .....	6
6. Initial use .....	6
7. Usage .....	7
8. Cleaning and maintenance.....	7
9. Accessories and replacement parts.....	8
10. Cleaning and maintenance.....	8
11. What if there are problems? .....	9
12. Disposal.....	9
13. Technical specifications .....	9
14. Guarantee.....	9

## 1. INCLUDED IN DELIVERY

Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are included in the delivery. Before use, ensure that there is no visible damage to the product and supplied components, and that all packaging material has been removed. If you have any doubts, do not use the product and contact your retailer or the specified Customer Services address.

- 4 x protective cap
- 1 x brush attachment for normal skin
- 1 x brush attachment for deep-pore cleansing
- 1 x charger
- 1 x mains adapter
- 1 x hand-held device
- 1 x brush attachment for sensitive skin
- 1 x brush attachment for deep-cleansing exfoliation
- 1 x set of instructions for use

## 2. SIGNS AND SYMBOLS

The following symbols are used on the product, in these instructions for use, on the packaging and on the type plate for the product:

### **DANGER**

Indicates an imminent danger. If it is not avoided, it will result in death or serious injury.

### **WARNING**

Indicates a potentially impending danger. If it is not avoided, there is a risk of death or serious injury.

### **CAUTION**

Indicates a potentially impending danger. If it is not avoided, slight or minor injuries may result.

### **NOTICE**

Indicates a potentially harmful situation. If it is not avoided, the system or something in its vicinity may be damaged.

	Product information Note on important information
	Read the instructions
	The electronic device must not be disposed of with household waste
	Do not dispose of batteries containing harmful substances with household waste
	Manufacturer
	<b>CE labelling</b> This product satisfies the requirements of the applicable European and national directives.

	Marking to identify the packaging material. A = material abbreviation, B = material number: 1–7 = plastics, 20–22 = paper and cardboard
	Separate the product and packaging elements and dispose of them in accordance with local regulations.
	Protection class II device
	The products demonstrably meet the requirements of the Technical Regulations of the EAEU
	Conformity assessed marking for the United Kingdom
	Suitable for use in a bath or shower
	For indoor use only
	Safety isolating transformer, short-circuit proof
	Energy efficiency level 6
	Switch mode power supply unit
	Direct current
	Polarity of d.c. power connector
	Protected against solid foreign objects that are 1 mm in diameter and larger, and against splashing water from all sides
	Rated ambient temperature
	Importer
	Do not use the power adapter if the plug is damaged.
	Protection against temporary submersion. Device can be immersed to a depth of 1 metre for up to 30 minutes.

### 3. INTENDED USE

The device is only to be used on the human face (apart from the eye area).

Do not use the facial brush on animals. The device is not suitable for children under 8 years.

The device is only intended for the purpose described in these instructions for use. The manufacturer is not liable for damage resulting from improper or careless use.

### 4. WARNINGS AND SAFETY NOTES

#### WARNING

Danger of suffocation by packaging material. Keep packaging material away from children.

Before use, inspect the device and accessories for visible damage. If you have any doubts, do not use the device and contact your retailer or the specified Customer Services address.

Keep the mains adapter away from water. To charge the battery, only use the detachable mains adapter supplied with this device.

**Risk of explosion! Risk of fire!** Failure to comply with the points mentioned can result in personal injury, overheating, leakage, venting, breakage, explosion, or fire.

Always use the correct or supplied charging cable/charger/mains adapter for charging. Avoid continuous charging or overcharging. Charge the device under supervision, paying attention to any heat generated, deformation, or release of gases. If in doubt, stop charging.

If batteries/charging cables/chargers are defective, stop using them and dispose of them properly as soon as possible (see chapter on disposal).

Do not throw the device or batteries into a fire.

Never forcibly discharge, heat, disassemble, open, crush, deform, encapsulate, modify, or knock the device or batteries.

Never short-circuit batteries or the connections of the battery-powered device.

Protect the device or batteries from direct sunlight, rain, heat, and water.

Exposure of batteries to an environment with extremely high temperatures or an extremely low air pressure may result in explosion or leakage of flammable liquids and gases.

If fluid from a battery comes into contact with your skin or eyes, wash the affected areas with water and seek medical assistance.

### NOTICE

- This device contains a battery that is not replaceable. Once a battery has reached the end of its service life, the device must be disposed of properly (see chapter on disposal).
- Information on how to remove and/or replace the battery can be found on the website.

### WARNING

Do **NOT** use the device:

- on broken skin.
- on open wounds.
- if you suffer from a skin disease or irritated skin.
- immediately after sunbathing.
- if you are taking medication that contains steroids.

### Notes on handling batteries

- This device contains batteries that are not replaceable.
- If your skin or eyes come into contact with fluid from the battery cell, flush out the affected areas with plenty of water and seek medical assistance.
- Risk of explosion! Never throw batteries into a fire.
- Do not disassemble, split or crush the batteries.
- Only use chargers specified in the instructions for use.

- Batteries must be charged correctly prior to use. The instructions from the manufacturer and the specifications in these instructions for use regarding correct charging must be observed at all times.
- Fully charge the battery prior to initial use (see Chapter 7.1).
- In order to achieve as long a battery service life as possible, fully charge the battery at least twice per year.

### CAUTION

Only specialist personnel may perform repairs on electrical devices. Improper repairs may subject users to considerable danger. In the event of a fault or damage, have the device repaired by a certified specialist workshop.

## 5. PRODUCT DESCRIPTION

The related illustrations are on page 2.

- 1** Brush attachment
- 2** ON/OFF/speed button
- 3** Rotation button
  
- A** Brush attachment for normal skin
- B** Brush attachment for sensitive skin
- C** Brush attachment for deep-pore cleansing
- D** Brush attachment for deep-cleansing exfoliation

## 6. INITIAL USE

### 6.1 Charging the device

Charge the device for at least 1,5 hours before initial operation. To do this, proceed as follows:

1. Insert the mains cable into the charger.
2. Insert the mains adapter into the socket.

3. Insert the facial brush into the charger from above. While charging is in progress, the LED lights for the ON/OFF/speed button light up alternately in a circle. Once the facial brush has been fully charged, the LED lights for the ON/OFF/speed button light up permanently.

## 6.2 Attaching the brush

The device features four different brush attachments.

- Brush attachment for normal skin
- Brush attachment for sensitive skin
- Brush attachment for deep-pore cleansing
- Exfoliating brush attachment to gently remove excess skin cells

1. The attachment you wish to use should be fixed from above onto the mounting fixture of the device.
2. To remove the brush attachment after use, pull it up and off.

## 7. USAGE

1. Moisten the attached brush attachment with water. Never use the device with a dry brush attachment as this can irritate the skin.
2. Apply the cleansing gel to your facial skin.
3. To switch on the device, press and hold the ON/OFF/speed button for 1 second. The brush attachment will begin to rotate.
4. The device features a slow, medium and fast speed setting. To switch between the individual speed settings, briefly press the ON/OFF/speed button. The selected speed setting is displayed via the corresponding LEDs that are lit up.
5. Using the *rotation button*, select your desired rotation level. The device has circular rotation for gentle facial cleansing and oscillating rotation for thorough facial cleansing.

6. Now apply the device gently to your face and cleanse your facial skin using even movements to remove residue, dirt and dead skin cells.

### NOTICE

To ensure comfortable treatment, do not apply the rotating brush attachment too firmly to the skin. Treat each section of skin for a maximum of 20 seconds only.

The brush features a 1-minute timer and stops every 20 seconds for 1 second to indicate that you should switch to cleansing a different area. The facial brush switches itself off automatically after 3x 20 seconds. The recommended application period per use is 1 minute.

7. Switch off the device after use. To switch off the device, press and hold the ON/OFF/speed button for 1 second.
8. Cleanse your face thoroughly with water to remove any residue from your skin.
9. Pat your skin dry with a towel and then apply a moisturising cream using even, circular movements.

## 8. CLEANING AND MAINTENANCE

### 8.1 Cleaning the brush attachments

#### ⚠ CAUTION

Before beginning cleaning, pull the brush attachment up and off.

- Clean the brush attachment thoroughly with water after each use.

### 8.2 Cleaning the device and the charger

- Only clean the appliance in the manner specified.
- Clean the unit after use with a soft, slightly moistened cloth. In case of more extreme soiling you can also moisten the

cloth with mild soapy water. Do not use any abrasive cleaning products.

- Ensure that the device is fully dry before placing it into the charger.
- Ensure that no water enters the device. If this should happen, the device should only be used again once it has fully dried out.
- Clean the charger from time to time with a soft, slightly damp cloth.
- Protect the device from impacts, humidity, dust, chemicals, marked temperature fluctuations and nearby sources of heat (ovens, heaters).

## 9. ACCESSORIES AND REPLACEMENT PARTS

For replacement parts and additional items visit [www.beurer.com](http://www.beurer.com) or contact the corresponding service address in your country (according to the service address list).

Replacement parts and additional items are also available from retailers.

### Brush type **A**

Intended purpose	Daily cleansing
Skin type	Normal skin, combination skin, oily skin
Replacements	After 4 months
Item number and/or order number	605.56

### Brush type **B**

Intended purpose	Gentle daily cleansing
Skin type	Sensitive skin
Replacements	After 4 months
Item number and/or order number	605.57

### Brush type **C**

Intended purpose	Weekly exfoliation to gently remove excess skin cells
Skin type	All skin types
Replacements	After 4 months
Item number and/or order number	605.58

### Brush type **D**

Intended purpose	Deep-pore daily cleansing for combating enlarged and blocked pores
Skin type	All skin types
Replacements	After 6 months
Item number and/or order number	605.59

## 10. CLEANING AND MAINTENANCE

### 10.1 Cleaning the brush attachments

#### **⚠ CAUTION**

Before beginning cleaning, pull the brush attachment up and off.

- Clean the brush attachment thoroughly with water after each use.

### 10.2 Cleaning the device and the charger

- Only clean the appliance in the manner specified.
- Clean the unit after use with a soft, slightly moistened cloth. In case of more extreme soiling you can also moisten the cloth with mild soapy water. Do not use any abrasive cleaning products.
- Ensure that the device is fully dry before placing it into the charger.

- Ensure that no water enters the device. If this should happen, the device should only be used again once it has fully dried out.
- Clean the charger from time to time with a soft, slightly damp cloth.
- Protect the device from impacts, humidity, dust, chemicals, marked temperature fluctuations and nearby sources of heat (ovens, heaters).

## 11. WHAT IF THERE ARE PROBLEMS?

Problem	Solution
The device does not charge.	Ensure that the charger is connected to a functioning socket and that the device is correctly positioned on the charger. If you have connected everything correctly and the device still fails to charge, contact Customer Services.
The device will not switch on.	When switching on, ensure that you press the ON/OFF button with sufficient force and hold the button down for a sufficient amount of time. Charge the device as described in these instructions for use. If it is still not possible to switch on the device, contact Customer Services.
The device does not cleanse as well as it did to begin with.	The brush is worn. Replace the brush. If you do not have any replacement brushes, they can be reordered (see "11. Replacement parts and wearing parts").

If you cannot find a solution to your problem here, contact our Customer Services.

## 12. DISPOSAL

For environmental reasons, do not dispose of the device in household waste at the end of its service life. Dispose of the device at a suitable local collection or recycling point in your country. Observe the local regulations for material disposal. Dispose of the device in accordance with EC Directive Waste Electrical and Electronic Equipment (WEEE). If you have any questions, please contact the local authorities responsible for waste disposal. You can obtain the location of collection points for old devices from the local or municipal authorities, local waste disposal companies or your retailer, for example.



## 13. TECHNICAL SPECIFICATIONS

Mains operation:	100-240 V~; 50/60 Hz;
Input	0.2 A
Output	5.0 V $\overline{\text{---}}$ 1.0 A; 5.0 W
Average active efficiency:	$\geq 73.62 \%$
No-load power consumption:	$\leq 0.1 \text{ W}$
Dimensions	18,5 x 4 x 4 cm
Weight	approx. 120 g
Battery:	
Capacity	800 mAhs
nominal voltage	3,7 V
type designation	Li-Ion

## 14. GUARANTEE

Further information on the guarantee and guarantee conditions can be found in the guarantee leaflet supplied.





