

monogram[®]
by beurer

Instructions



These instructions are for the Komfort heated mattress cover / heated under-blanket.



Approved to European Safety Standard EN 60335-2-17

Important instructions

Please read these instructions carefully before you use your heated underblanket, and keep them for future use

Dear customer,

Thank you for choosing a product from our range. Our name stands for high-quality, thoroughly tested products for applications in the areas of heat, weight, blood pressure, body temperature, pulse, gentle therapy, massage, beauty, air and baby.










With kind regards
Your Beurer team













Contents

1. Items included in the package	4	4.5 Selecting the temperature setting.....	8
1.1 Description	4	4.6 Switching off.....	9
2. Important instructions – Retain for future use ...	4	5. Cleaning and maintenance.....	9
3. Intended use.....	6	6. Storage.....	10
4. Operation.....	7	7. Disposal.....	10
4.1 Safety.....	7	8. What if there are problems?	11
4.2 Electrical safety	7	9. Technical data	11
4.3 Putting into operation	7	10. Guarantee / service	11
4.4 Using your heated underblanket	8	11. Helpline.....	12

Explanation of symbols

The following symbols are used on the device, in these instructions for use, on the packaging and on the type plate for the device:

	Read the instructions!		Wash at a maximum temperature of 30 °C, Very gentle wash
	Do not insert pins!		Do not bleach
			Use tumble dryer on the lowest heat only
	Do not use folded or rucked!		Do not iron
	Not to be used by very young children (0 - 3 years).		Do not dry-clean

	<p>Dispose of packaging in an environmentally friendly manner</p>		<p>Manufacturer</p>
	<p>This product satisfies the requirements of the applicable European and national directives.</p>		<p>United Kingdom Conformity Assessed Mark</p>
	<p>The device has double protective insulation and therefore complies with protection class 2.</p>		<p>Please dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment).</p>
	<p>The KEMA-KEUR symbol documents the safety and compliance with standards of an electrical product.</p>		
	<p>The BEAB certification mark proves that this device meets the specifications stipulated in the Low Voltage Directive (LVD)</p>		
	<p>The textiles used for this device meet the stringent human ecological requirements of OEKO-TEX® Standard 100, as verified by Hohenstein Research Institute.</p>		
	<p>WARNING: Warning of risks of injury or health hazards</p>		
	<p>CAUTION: Safety information about possible damage to appliance/accessories.</p>		
	<p>NOTE: Important information.</p>		

 
1. Items included in the package

Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are present. Before use, ensure that there is no visible damage to the device or accessories and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.

- 1 Heated underblanket
- 1 Control
- 1 Operating instructions

1.1 Description

- 1 Supply plug
- 2 Supply cord
- 3 Control
- 4 Control light
- 5 Slider for ON / OFF and temperature setting
- 6 Slider for timer settings
- 7 Connector

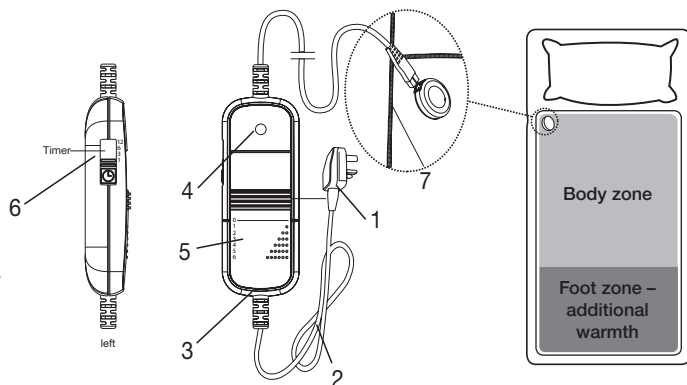

2. Important instructions – Retain for future use

⚠ WARNING

- Non-observance of the following notes may result in personal injury or material damage (electric shock, skin burns, fire). The following safety and hazard information is not only intended to protect your health and the health of others, it should also protect the product. For this reason, pay attention to these safety notes and include these instructions when handing over the product to others.
- This heated underblanket must not be used by persons who are not sensitive to heat or by other vulnerable persons who may not be able to react to overheating (e.g. diabetics, people with skin alterations due to illness or scarred tissue in the application area, after taking pain relief medication or alcohol).
- This heated underblanket must not be used by very young children (0-3 years old) as they are unable to respond to overheating.

- This heated underblanket can be used by children older than 3 and younger than 8 years of age provided they are supervised. For this, the control must always be set to the minimum temperature.
- This heated underblanket may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised and have been instructed on how to use the heated underblanket safely, and are fully aware of the consequent risks of use.
- Children must not play with the heated underblanket.
- Cleaning and user maintenance must not be performed by children unless supervised.
- This heated underblanket is not designed for use in hospitals.
- This heated underblanket is only intended for domestic/private use, not for commercial use.
- Do not insert pins.
- Do not use folded or rucked.
- Do not use if wet.
- Before using it on an adjustable bed, check that the heated underblanket and the cables are not, for example, trapped in a hinge or bunched up.
- This heated underblanket may only be used in conjunction with the control specified on the label.
- This heated underblanket must only be connected to the mains voltage that is specified on the label.
- The electrical and magnetic fields emitted by this heated underblanket may interfere with the function of a pacemaker. However, they are still well below the limits: electrical field strength: max. 5000 V/m, magnetic field strength: max. 80 A/m, magnetic flux density: max. 0.1 millitesla. Please therefore consult your doctor and the manufacturer of your pacemaker before using this heated underblanket.
- Do not pull, twist or make sharp bends in the cables.
- If cable and control are not positioned properly, there may be a risk of becoming entangled in, being strangled by, tripping over, or stepping on the cable and control of the heated underblanket. The user must ensure that excess lengths of cable, and cables in general, are safely routed.

- Please check this heated underblanket frequently for signs of wear and tear or damage. If any such signs are evident, if the heated underblanket has been used incorrectly or if it no longer heats up, it must be checked by the manufacturer before being switched on again.
- Under no circumstances should you open or repair the heated underblanket (including the accessories) yourself because faultless functionality can no longer be guaranteed thereafter. Failure to observe this will invalidate the guarantee.
- If the mains connection cable of this heated underblanket is damaged, it must be disposed of. If it cannot be removed, the heated underblanket must be disposed of.
- Do not expose control and cables to direct sunlight.
- When this heated underblanket is switched on:
 - Do not place any sharp objects on it
 - Do not place any heat sources, such as hot water bottles, heat pads or similar, on it.
- The electronic components in the control warm up when the heated underblanket is in use. For this reason, the control must never be covered or placed on the heated underblanket when it is in use.
- It is essential to observe the information relating to the following chapters: Operation, Cleaning and maintenance, Storage.
- If you should have any questions about using our devices, please contact our Customer Services department.

3. Intended use



CAUTION

This heated underblanket is designed for warming beds, only.



CAUTION

Heated underblankets are not suitable to be used with memory foam mattresses.

4. Operation

4.1 Safety



 
CAUTION

- Your heated underblanket has been designed and fully tested to the European Safety Standards. It has been certified by the Intertek Testing and Certification Ltd. UK and shows the safety mark “BEAB Approved”.
- This heated underblanket is equipped with a SAFETY SYSTEM. This sensor technology prevents the entire surface of the heated underblanket from overheating by automatically switching off the heated underblanket in the event of a fault. If the safety system has switched off the heated underblanket, the temperature setting is not illuminated any more even when the heated underblanket is switched on.
- Please note that the heated underblanket is not operable due to safety reasons, therefore contact Beurer Customer Service for further advice.
- Do not connect the defective heated underblanket with another control of the same type. This would trigger a permanent switch-off via the control safety system.

4.2 Electrical safety

Your heated underblanket has an UK plug. If your heated underblanket becomes damaged or worn, you should have the plug top replaced by a qualified electrician who understands how to carry out this repair safely.

The plug needs a 3-amp fuse (BS1362 rated).

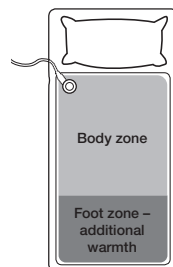

4.3 Putting into operation

We recommend that you vacuum off your mattress before using the heated underblanket for the first time. Then spread out the heated underblanket flat on your mattress so that the cable entrance is located approximately at shoulder height (see illustration). The head area of the heated underblanket is not heated. Then pull the side section over the sides of your mattress like a contour sheet.

Then secure your contour sheet as accustomed so that the heated underblanket is between your mattress and the contour sheet.

Make sure that the heated underblanket is always spread out flat and does not push together or wrinkle during use. Check its position when making the bed. The heated underblanket may only be switched on when it is spread out flat. We recommend switching on the heated underblanket approx. 8 minutes before going to bed and covering it with the duvet in order to prevent heat loss. First select the highest temperature setting (level 6). This produces the fastest warming. This heated underblanket may only be operated in conjunction with the switch type specified on the unit.



CAUTION

 
The electronic components in the control will normally warm up slightly when the product is being used. The control should not lie on or be covered by blankets, pillows etc.



CAUTION

Make sure that the heated underblanket is spread out entirely flat and that it will not rumple up or crease when in use.

- To operate the heated underblanket connect the control to the heated underblanket by plugging in the connector.
- Then plug in the supply plug into the mains outlet.

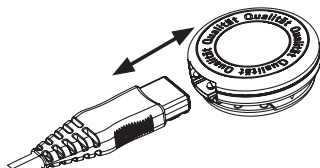

4.4 Using your heated underblanket

Your heated underblanket has a preheat facility for your bed which will allow you to change the heat setting of the heated underblanket when you get into bed. The heated underblanket is safe to use all night.

All our heated underblankets have a choice of preheat settings 1 to 6, with 6 being the warmest. Turn the heated underblanket on approx. 8 minutes before you go to bed and choose your favourite setting. Just before you get into bed, you must change the control to the all-night setting of '1'.

The second slider let you turn the heated underblanket on for one, three, six or 12 hours. Choose the amount of time you want the heated underblanket on for and turn the heated underblanket on to the heat setting you want. Once the heated underblanket has been on for the set time, it will automatically turn itself off.

 
When the timer has worked, the light on the control will flash.

Please note that it is normal for the control and wire to become warm when the heated underblanket is on.

To restart the time period, change the control position to '0' and wait 5 seconds, then turn the heated underblanket to the temperature setting you want.

Turbo preheat will give extra power to your heated underblanket for a set period of time. This will improve the time it takes your heated underblanket to heat up.

The turbo preheat will only work once each time the heated underblanket is switched on. For safety reasons you must switch off the heated underblanket for 8 minutes before you use the turbo again.

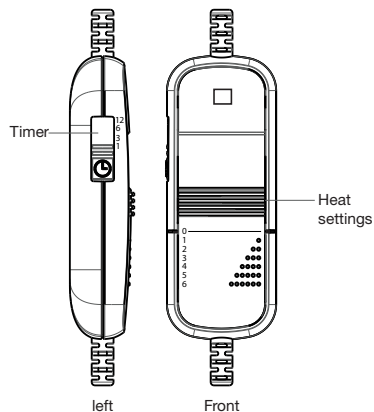

4.5 Selecting the temperature setting

- Setting 0: OFF
- Setting 1: minimum heat
- Setting 2-5: individual heat
- Setting 6: maximum heat



WARNING

If the heated underblanket is being used over several hours, we recommend that you set the lowest temperature setting on the control to avoid the body overheating and thereby any potential burns to the skin or heat stroke.

**NOTE:**

 
- The quickest way to heat up the heated underblanket is to select the highest temperature setting of the switch, first.
- We strongly recommend switching on the heated underblanket approx. 15 minutes before going to bed and covering it with the quilt to prevent the warmth from escaping.
- The foot zone provides additional warmth for cold feet.

4.6 Switching off

Switch off the heated underblanket by shoving the slider to setting 0 (OFF). After switching off, the control light on the control is not illuminated any more.

**NOTE:**

If the heated underblanket won't be used for several days, switch it off (Slider to setting "0"/OFF), remove the supply plug from the mains outlet and remove the control from the heated underblanket.

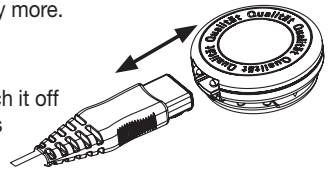

5. Cleaning and maintenance

**WARNING**

Always remove the supply plug from the mains outlet and remove the control from the heated underblanket by disconnecting it at the connector. Otherwise there is a risk of an electric shock. (See picture at chapter 4.6)

**CAUTION**

The Control must never come into contact with water or other liquids, as this may cause damage.

- To clean the control use a dry, lint-free cloth. Do not use cleaning agents containing solvent or scouring agents.
- To remove stains from the heated underblanket use a damp cloth and, if necessary, a mild cleaning agent.

**CAUTION**

Note that the heated underblanket must not be dry-cleaned, wrung out or ironed. Otherwise the heated underblanket may be damaged.

- The heated underblanket is machine washable.
- Set the washing machine to a particularly gentle, 30 °C cycle (woolens programme). Use a mild detergent with dosage according to the manufacturer's instructions.
- You can dry your underblanket with a tumble dryer on the lowest heat.



CAUTION

Note that the heated underblanket will suffer from too frequent washing and drying. For its entire life, therefore, the heated underblanket should be washed and dried not more than 5 times.

- While the heated underblanket is still damp after washing and drying, shape it to its original form and size and place it flat over a clothes drying rack to dry.



CAUTION

- Do not attach the heated underblanket to washing lines with washing pegs or the like. Otherwise the heated underblanket may be damaged.
- Only reconnect the control to the heated underblanket after the connector and the heated underblanket are completely dry. Otherwise the heated underblanket may be damaged.



WARNING

Under no circumstances switch on the heated underblanket to dry it. Otherwise there is a risk of an electric shock

6. Storage

When not in use we recommend to store the heated underblanket in its original packaging. Remove the control from the heated underblanket by disconnecting it at the connector.



CAUTION

- Allow the heated underblanket to cool down before folding.
- Do not crease the heated underblanket by placing items on top of it during storage. Otherwise the heated underblanket may be damaged.

7. Disposal

For environmental reasons, do not dispose of the device in the household waste at the end of its useful life. Dispose of the unit at a suitable local collection or recycling point. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal.



8. What if there are problems?

Problem	Cause	Remedy
The temperature settings are not illuminated while: <ul style="list-style-type: none"> - the setting is 1, 2, 3, 4, 5 or 6 - the supply plug is connected to the mains outlet with correct function - the control is fully connected to the heated underblanket 	The Safety System switched off the heated underblanket irreversibly	Contact Beurer Customer Service for further advice.

9. Technical data

	Type	Supply Voltage	Input
Single	W 1	230–240V / 50–60 Hz	65 W
Double Single Control	W 2	230–240V / 50–60 Hz	85 W
Double Dual Control	W 3	230–240V / 50–60 Hz	2 x 50 W
King Size	W 1	230–240V / 50–60 Hz	2 x 65 W
Super King Size	W 1	230–240V / 50–60 Hz	2 x 65 W

10. Guarantee / service

Beurer GmbH, Söflinger Straße 218, 89077 Ulm, Germany (hereinafter referred to as “Beurer”) provides a guarantee for this product, subject to the requirements below and to the extent described as follows.

Claiming the guarantee shall not affect the Purchaser’s statutory guarantee rights arising from the purchase agreement with the Seller in the event of defects. The Purchaser may exercise these statutory guarantee rights free of charge. The guarantee shall apply without prejudice to any mandatory statutory provisions on liability.

Beurer guarantees the perfect functionality and completeness of this product.

The worldwide guarantee period is 3 years, commencing from the purchase of the new, unused product from the seller.

The guarantee only applies to products purchased by the buyer as a consumer and used exclusively for personal purposes in the context of domestic use.

German law shall apply.

During the guarantee period, should this product prove to be incomplete or defective in functionality in accordance with the following provisions, Beurer shall carry out a repair or a replacement delivery free of charge, in accordance with these guarantee conditions.

If the buyer wishes to make a guarantee claim, they should approach their retailer at first instance. For further assistance, they can revert to the attached “International Service list” of service addresses.

The buyer will then receive further information about the processing of the guarantee claim, e.g. where they can send the product and what documentation is required.

A guarantee claim shall only be considered if the buyer can provide Beurer, or an authorised Beurer partner, with

- a copy of the invoice/purchase receipt, and
- the original product.

The following are explicitly excluded from this guarantee:

- deterioration due to normal use or consumption of the product;
- accessories supplied with this product which are worn out or used up through proper use (e.g. batteries, rechargeable batteries, cuffs, seals, electrodes, light sources, attachments and nebuliser accessories);
- products that are used, cleaned, stored or maintained improperly and/or contrary to the provisions of the instructions for use, as well as products that have been opened, repaired or modified by the buyer or by a service centre not authorised by Beurer;
- damage that arises during transport between manufacturer and customer, or between service centre and customer;
- products purchased as seconds or as used goods;
- consequential damage arising from a fault in this product (however, in this case, claims may exist arising from product liability or other compulsory statutory liability provisions).

Repairs or an exchange in full do not extend the guarantee period under any circumstances.

11. Helpline

Distributors:

(EN) Beurer UK Ltd, Suite 9, Stonecross Place, Yew Tree Way,
Golborne, WA3 2SH, Phone 0844 488 9100

(IRL) Charlie Shields Ltd., 3 & 4 Goldenbridge Industrial Est.,
Dublin 8, Phone + 353 1 454 5844

UK-Importer:

Beurer UK Ltd., Suite 9, Stonecross Place,
Yew Tree Way, WA3 2SH Golborne, United Kingdom



Manufacturer:

Beurer GmbH
Soeflinger Strasse 218
89077 Ulm/Germany



Website: www.beurer.com

We have a policy of continuously improving product design and quality.
We have the right to improve our heated underblanket models at any time.