




beurer

WL 65 Wake up+Charge



EN Wake-up light
Instructions for use

CE

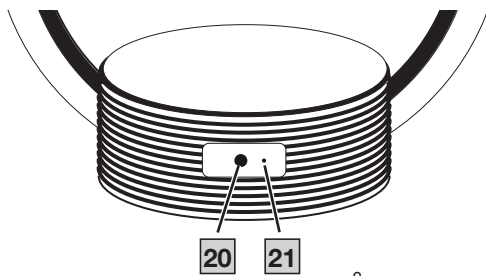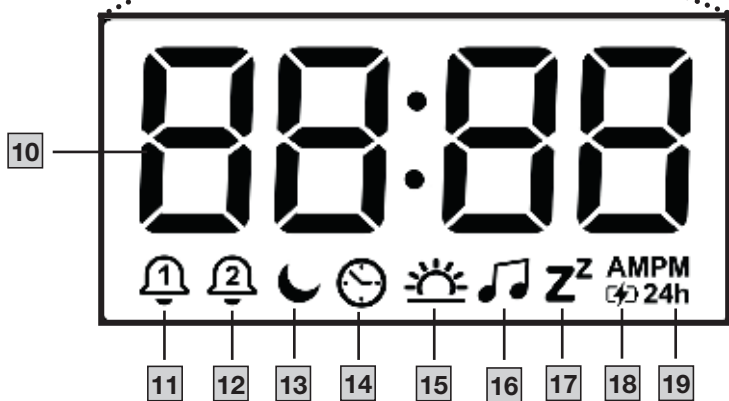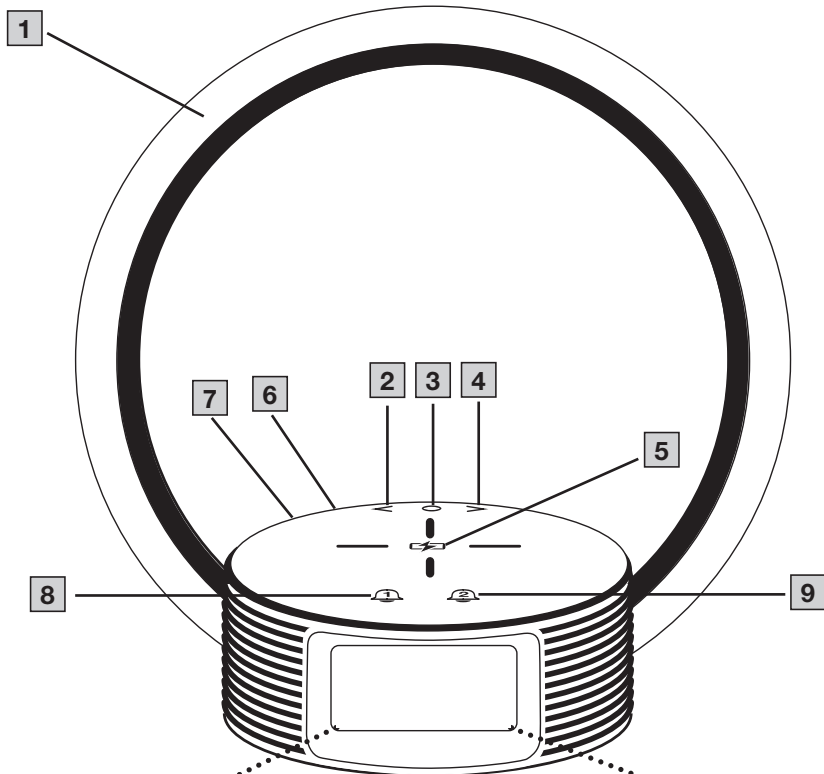



Read these instructions for use carefully. Follow the warnings and safety notes. Keep these instructions for use for future reference. Make the instructions for use accessible to other users. If the device is passed on, provide the instructions for use to the next user as well.

CONTENTS

1. Included in delivery	3	6.5 Sleep function/sunset	5
2. Signs and symbols	3	6.6 Setting the time	5
3. Intended purpose	3	6.7 Setting the display brightness	5
4. Warnings and safety notes	4	6.8 Lamp/mood light	5
5. Device description	4	6.9 Charging a smartphone	5
6. Usage	4	6.10 Resetting to factory settings	6
6.1 Initial use	4	7. Cleaning and maintenance	6
6.2 Setting the alarm		8. What if there are problems?	6
(with wake-up function and sunrise)	4	9. Disposal	6
6.3 Switching off the alarm	5	10. Technical specifications	6
6.4 Activating/deactivating the alarm	5	11. Guarantee	6

1. INCLUDED IN DELIVERY

Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are present. Before use, ensure that there is no visible damage to the device and the supplied components and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.

- 1 wake-up light
- 1 mains adapter
- 1 copy of instructions for use

2. SIGNS AND SYMBOLS

The following symbols are used on the device, in these instructions for use, on the packaging and on the type plate for the device:

⚠ WARNING

Indicates a potentially impending danger. If it is not avoided, there is a risk of death or serious injury.

⚠ CAUTION

Indicates a potentially impending danger. If it is not avoided, slight or minor injuries may result.

NOTICE

Indicates a potentially harmful situation. If it is not avoided, the device or something in its vicinity may be damaged.



Product information

Note on important information



Read the instructions



Disposal in accordance with the Waste Electrical and Electronic Equipment EC Directive (WEEE)



Manufacturer



CE labelling

This product satisfies the requirements of the applicable European and national directives.



Separate the product and packaging elements and dispose of them in accordance with local regulations.



Marking to identify the packaging material. A = material abbreviation, B = material number: 1–7 = plastics, 20–22 = paper and cardboard



Protection class II device

The device is double-insulated and, therefore, is in protection class 2



The products demonstrably meet the requirements of the Technical Regulations of the EAEU



United Kingdom Conformity Assessed Mark



Energy efficiency level 6



Replacement of the light source not possible



For indoor use only



Tested for safety in accordance with the requirements of the "Produktsicherheitsgesetz" (German Product Safety Act)



Polarity of DC power connection



Safety isolating transformer, short-circuit proof



Protection class III device



Manufacturer in accordance with the Packaging Regulation (PPWR)

3. INTENDED PURPOSE

⚠ WARNING

The device may only be used for the purpose for which it is designed and in the manner specified in the instructions for use. Any form of improper use can be dangerous. The manufacturer is not liable for damage resulting from improper or incorrect use.

4. WARNINGS AND SAFETY NOTES

▲ WARNING

- The device is only intended for domestic/private use, not for commercial use.
- This device may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely, and are fully aware of the consequent risks of use.
- Children must not play with the device.
- Under no circumstances should you open or repair the device yourself, as faultless functionality can no longer be guaranteed thereafter. Failure to comply will invalidate the guarantee.
- Cleaning and user maintenance must not be performed by children unless supervised.
- If the mains adapter is damaged, it must be disposed of.
- Danger of suffocation! Keep packaging material away from children.
- Only operate the device with the mains adapter provided and at the mains voltage specified on the mains adapter.
- Place the device on a firm, even surface.
- The device must be placed near an easily accessible socket.
- Inspect the device and accessories for visible damage before use. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.
- Keep the device, mains adapter and mains cable away from water.
- Never plug in or unplug the mains adapter when you have wet hands.
- In the event of defects or operational faults, switch the device off immediately and disconnect it from the mains socket.
- Arrange the mains cable such that it is not a trip hazard.
- Protect the device from impacts, moisture, dirt, severe temperature fluctuations and direct sunlight.
- Do not drop the device.
- Only operate the device within the performance limits specified in the "Technical specifications" chapter.

5. DEVICE DESCRIPTION

The associated drawings are shown on page 3.

- | | |
|--------------------------------------|--|
| 1 Light ring | 12 Alarm2 icon |
| 2 < button | 13 Sleep icon |
| 3 O button | 14 Clock icon |
| 4 > button | 15 Sunrise icon |
| 5 Smartphone charging surface | 16 Music icon |
| 6 Mains adapter connection | 17 Snooze icon |
| 7 Reset button | 18 Charging icon for smartphone |
| 8 Alarm1 button | 19 Hour format |
| 9 Alarm2 button | 20 Mains adapter connection |
| 10 Time | 21 Reset button |
| 11 Alarm1 icon | |

6. USAGE

6.1 Initial use

1. Remove the packaging material.
2. Check that all parts listed are present.
3. Check the device and mains cable for damage.
4. Place the device on a firm, even surface.
5. Place the device near an easily accessible socket.
6. Connect the mains adapter to the mains adapter connection **6** on the back of the device.
7. Insert the mains adapter into a suitable socket.
↳ The time "0:00" appears on the device display for two minutes, and "24h" flashes. 
8. Use the < > buttons to set your preferred hour format ("24h" for 24-hour format or "AM/PM" for 12-hour format).
9. Confirm by pressing the O button.
↳ The time in hours flashes on the display.
10. Use the < > buttons to set the time in hours. Confirm by pressing the O button.
↳ The time in minutes flashes on the display.
11. Use the < > buttons to set the time in minutes. Confirm by pressing the O button.
↳ "End" appears on the display. The time is now set and the device is ready for operation.

 
 
 
 If it is not possible to set the time, refer to the "Setting the time" chapter.

6.2 Setting the alarm (with wake-up function and sunrise)

You can set a colour sunrise and an alarm tone for the alarm. If this is selected, the light ring **1** simulates the sun's colour sunrise (red – orange – yellow – white light). In addition, an invigorating alarm tone can be selected (6 sounds available) – for a gentle, energising start to the day.

The device has two alarm memory spaces ( and ) to which you assign different alarm times.

- | | |
|--|--|
| 1. Press and hold the Alarm 1 or Alarm 2 button on the switched-on device. |  |
| ↳ The alarm hour flashes on the display. | |
| 2. Use the < > buttons to set the alarm hour. Confirm by pressing the O button. |  |
| ↳ The alarm minute flashes on the display. | |
| 3. Use the < > buttons to set the alarm minute. Confirm by pressing the O button. |  |
| ↳ The sunrise icon 15 appears on the display and "no" flashes. | |
| 4. Use the < > buttons to set the duration of the sunrise to ("no", 05, 10, 15 or 30 minutes). Confirm by pressing the O button. | |
| The set time defines how long the sunrise simulation takes before the wake-up time starts in order to support a gentle waking-up process. At the end of the simulation, the alarm starts with the selected alarm tone. |  |

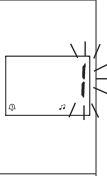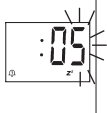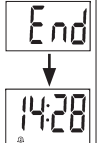↳ The music icon 16 appears on the display and “no” flashes. 5. Use the < > buttons to set your preferred wake-up sound (“no”, 1, 2, 3, 4, 5 or 6). While you are setting it, you will receive a preview of the melody. Use the O button to confirm.	
↳ The snooze icon 17 appears on the display and the number “05” flashes. 6. Use the < > buttons to set the snooze duration (05, 10, 15, 20, 25 or 30 minutes, “no”). Confirm by pressing the O button.	
↳ “End” appears on the display. The normal time will then appear. The Alarm1 icon 11 also lights up under the time. The alarm is now set and activated.	

6.3 Switching off the alarm

You can either snooze or turn off the sounding alarm.

- To snooze the alarm, briefly touch the light ring **1**. The alarm then sounds again after the set snooze duration.
- To switch off the sounding alarm, touch the light ring **1** for three seconds. The set alarm will then only sound again the next day.

6.4 Activating/deactivating the alarm

To activate or deactivate a preset Alarm1 or Alarm2, briefly press the Alarm1 button **8** or Alarm2 button **9**, depending on which alarm you want to select.

↳ The Alarm1 icon **11** or the Alarm2 icon **9** disappears or appears on the display. The alarm is now activated/deactivated.

6.5 Sleep function/sunset

You can set a colour sunset on the device. If this is selected, the light ring **1** simulates the colours of sunset (white – yellow – orange – red light). In addition, a gentle sleep melody (5 sounds available) can be selected to help you relax as you fall asleep.

1. Press the **O** button **3**.
2. The sleep symbol **13** appears on the display.
3. Press the **O** button **3**.

↳ “05” will start to flash on the display.
4. Use the **<** **>** buttons to set the duration of the sunset (5, 10, 15 or 30 minutes). Confirm by pressing the **O** button.

↳ The music icon **16** appears on the display and the number “00” flashes.
5. Use the **<** **>** buttons to set your preferred sleep melody (00, 1, 2, 3, 4 or 5). Confirm by pressing the **O** button.

↳ “End” appears on the display. The sleep function is now activated and the light ring **1** slowly becomes darker over the set time, simulating a sunset.



Alternatively, this function can be started by pressing and holding the **O** button (without previous setting)

6.6 Setting the time

1. Press the **O** button **3** and the right arrow button **>**.

↳ The time symbol **14** appears in the display.
2. Press the **O** button **3**.

↳ “24h” starts flashing on the display.
3. Use the **<** **>** buttons to set your preferred hour format (“24h” for 24-hour format, or “AM/PM” for 12-hour format).
4. Confirm by pressing the **O** button.

↳ The time in hours flashes on the display.
5. Use the **<** **>** buttons to set the time in hours. Confirm by pressing the **O** button.

↳ The time in minutes flashes on the display.
6. Use the **<** **>** buttons to set the time in minutes. Confirm by pressing the **O** button.

↳ “End” appears on the display. The time is now set.

6.7 Setting the display brightness

The device has a total of 5 different display brightness levels (100%, 50%, 25%, 1%, off).

- Use the **<** **>** buttons to set your preferred display brightness.

6.8 Lamp/mood light

The light ring **1** can also be used as a lamp/mood light. The device has nine different settings.

1. To use the light ring **1** as a lamp/mood light, briefly tap on the light ring frame **1**.

↳ The light ring **1** lights up in white.
2. To switch between the nine different mood lights, briefly tap on the frame of the light ring **1**.

white → bright colour change fast → bright colour change slow → orange → red → purple → blue → petrol → green → light ring off
3. To increase or decrease the brightness of the mood light, press and hold the frame of the light ring **1**. The light intensity first increases and then decreases. When the correct setting is reached, lift your finger off the illuminated ring. This setting is now retained.
4. After 5 seconds in the selected setting, you can switch off the light ring by briefly tapping the light ring frame.

6.9 Charging a smartphone

This device uses the official Qi standard for inductive charging. This ensures energy efficiency, interoperability and safety during inductive charging. For example, the 10W fast charging station fully charges a 3000 mAh battery in approx. 2.5 hours.

⚠ CAUTION

- Risk of overheating! Never cover the device with objects or textiles when a smartphone is being charged inductively.
- Never place EC cards, credit cards, other cards with magnetic stripes or magnetically sensitive objects on the charging surface **5** of the device.
- Make sure that there are no parts that contain metal on the back of your smartphone (such as a magnetic holder). Inductive charging can cause the metal to heat up significantly and cause irreparable damage to the device and smartphone.
- Mobile phone cases or covers can slow down the charging process or prevent it completely.



To charge your smartphone on the wake-up light, your smartphone model must support inductive charging.

1. To charge the smartphone, place it in the centre of the smartphone charging surface **[5]**. The charging icon for the smartphone **[18]** appears on the display.
2. The smartphone is now being inductively charged.

6.10 Resetting to factory settings

- To reset the device to the factory settings, use a pointed object to press and hold the reset button for three seconds.

7. CLEANING AND MAINTENANCE

▲ WARNING

- Clean the device with a dry cloth.
- Ensure that no water enters the device.
- If this does happen, only reuse the device once it has fully dried out.
- Never immerse the device or mains adapter plug in water or other liquids.

NOTICE

- Protect the device from knocks, damp, dust, chemicals, severe temperature fluctuations and nearby sources of heat (ovens, heaters).
- Do not use any abrasive cleaning products.

8. WHAT IF THERE ARE PROBLEMS?

Problem	Possible cause	Solution
Device does not light up	No power	Plug the mains adapter into a suitable socket.
	No power	The mains adapter is faulty. Contact Customer Services or your retailer.
	LEDs have reached the end of their service life. LEDs faulty.	For repairs, please contact Customer Services or an authorised retailer.

9. DISPOSAL

For environmental reasons, do not dispose of the device in household waste at the end of its service life. Dispose of the device at a suitable local collection or recycling point in your country. Observe the local regulations for material disposal. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal. You can obtain the location of collection points for old devices from the local or municipal authorities, local waste disposal companies or your retailer, for example.



10. TECHNICAL SPECIFICATIONS

Model	WL 65
Dimensions	24 x 24 x 14 cm
Weight	Approx. 542 g, excluding mains adapter
Light	LED technology
LED service life:	50,000 hours
Light intensity (white light)	700 Lux (at a distance of approx. 10 cm)
Mood light	Automatic and manual RGB colour change
Snooze duration	5-30 minutes (5-minute increments)
Display illumination	100%, 50%, 25%, 1%, off
Time	Adjustable to 12h or 24h
Alarm	2 alarm times
Average efficiency during operation	86.63%
Power consumption at low load (10%)	83.75%
No-load power consumption	0.09 W
Mains adapter protection class	Protection class VI
This product contains a light source with energy efficiency class C	

Mains adapter

Model	XY24LR-120200VH-EW
Input	220-240 V~; 50-60 Hz; 0.4 A max
Output	12V; 2 A / 24 W

Subject to technical changes.

We hereby confirm that this product complies with the European RED Directive 2014/53/EU.

The CE Declaration of Conformity for this product can be found under:

<https://www.beurer.com/conformity>

11. GUARANTEE

More information on the guarantee and guarantee conditions can be found in the guarantee leaflet supplied.



BEURER UK Ltd.
Suite 16, Stonecross Place, Stonecross Lane North,
WA3 2SH
Lowton,
United Kingdom



Beurer GmbH • Söflinger Str. 218 • 89077 Ulm, Germany
www.beurer.com



104.23_WL65_2026-07-16_01_IM2_BEU_EN