

beurer




MP 10 Green Planet*

EN Electric nail clippers
Instructions for use

*Find out more
about Beurer
Green Planet on:



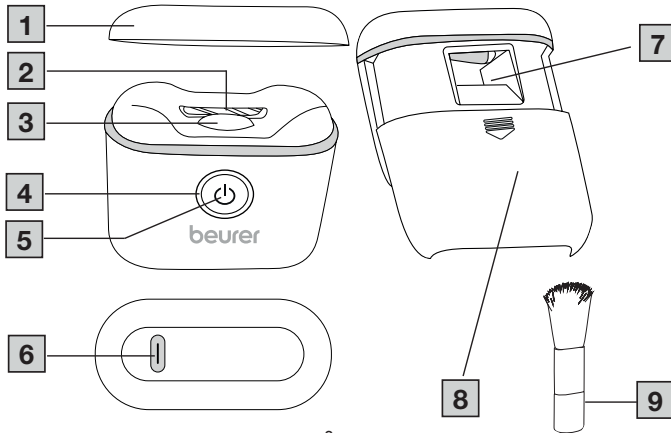

ENGLISH



Read these instructions for use carefully. Follow the warnings and safety notes. Keep these instructions for use for future reference. Make the instructions for use accessible to other users. If the device is passed on, provide the instructions for use to the next user as well.

- The device is only intended for self-treatment in a domestic/private environment, not for commercial or medical use.
- This device may be used by children over the age of 8 and by people with reduced physical, sensory or mental skills or a lack of experience or knowledge, provided that they are supervised or have been instructed on how to use the device safely, and are fully aware of the consequent risks of use. Children must not play with the device. Cleaning and user maintenance must not be performed by children unless supervised.
- Approved for use by adults on children 3 years and older according to product specification.

- If the mains connection cable of this device is damaged, it must be disposed of. If it cannot be removed, the device must be disposed of.
- Under no circumstances should you open the device or repair it yourself. If you do so, it may no longer function correctly. Failure to comply will invalidate the guarantee.
- Children must not play with the device.
- Cleaning and user maintenance must not be performed by children unless supervised.
- Do not insert any objects into the device apertures. Ensure that the moving parts can move freely at all times.

TABLE OF CONTENTS

1. Included in delivery	6
2. Signs and symbols	6
3. Warnings and safety notes	8
4. Device description	12
5. Initial use	12
6. Usage	13
7. Cleaning and maintenance	15
8. Disposal	16
9. Technical specifications	18
10. Guarantee	18

1. INCLUDED IN DELIVERY

Check that the exterior of the cardboard delivery packaging is intact and make sure that all contents are included in the delivery. Before use, ensure that there is no visible damage to the device and accessories and/or replacement parts and that all packaging material has been removed. If you have any doubts, do not use the device and contact your retailer or the specified Customer Service address.

- 1 electric nail clipper
- 1 cleaning brush
- 1 USB-C cable
- 1 copy of instructions for use

2. SIGNS AND SYMBOLS

The following symbols are used on the device, in these instructions for use, on the packaging and on the type plate for the device:

DANGER

Indicates an imminent danger. If it is not avoided, it will result in death or serious injury.

WARNING

Indicates a potentially impending danger. If it is not avoided, there is a risk of death or serious injury.

CAUTION

Indicates a potentially impending danger. If it is not avoided, slight or minor injuries may result.

NOTICE

Indicates a potentially harmful situation. If it is not avoided, the system or something in its vicinity may be damaged.



Product information

Note on important information



Read the instructions



The electronic device must not be disposed of with household waste



Manufacturer

CE labelling



This product satisfies the requirements of the applicable European and national directives.



Marking to identify the packaging material.

A = material abbreviation,
B = material number:
1–7 = plastics, 20–22 =
paper and cardboard

 	Separate the product and packaging elements and dispose of them in accordance with local regulations.
	The products demonstrably meet the requirements of the Technical Regulations of the EAEU
	Direct current
	Conformity assessed marking for the United Kingdom
	Importer
	USB-C port

3. WARNINGS AND SAFETY NOTES

The device is only intended for the purpose described in these instructions for use. Any form of improper use can be dangerous. The manufacturer is not liable for damage resulting from improper or careless use. Failure to observe the following information may result in personal injury or material damage.

Intended purpose

This device is exclusively intended for the treatment of human hands (manicure). Do not use the device on animals.

Electric shock

DANGER

- Never submerge the device in water. Never use the device in the bath, in the shower, in a swimming pool or above a sink filled with water. Do not store the device in areas where it may fall into the bathtub or wash basin.
- Do not use the device or accessories if they show signs of damage or do not function properly. In such cases, contact your retailer or Customer Services.

WARNING

- In the event of defects and operational faults, switch off the device immediately.

Repairs

WARNING

- Repairs must only be carried out by Customer Services or authorised retailers.

Handling

WARNING

- Keep packaging material away from children. There is a risk of suffocation!
- Do not use on animals.
- Ensure that the USB-C cable does not pose a trip hazard while the device is being charged.
- Check the results regularly during the treatment. It is particularly important

for diabetics to do so as they have a lower sensitivity to pain and could injure themselves more easily. However, be sure to proceed with particular care. Stop treatment as soon as it becomes unpleasant. If you have any doubts, consult your doctor.

- Make sure that no hair can get caught in the rotating motor when using the device. Use a hair tie for your safety.
- Only use the device with the supplied accessories.
- For hygiene reasons, the device may be used by one person only.
- Never leave the device unattended.
- Only clean the device when it is switched off, otherwise the bristles of the cleaning brush could be pulled into the cutting surface.

NOTICE

- Do not drop the device.
- Protect the device from impacts, humidity, dust, chemicals, marked temperature fluctuations, sources of heat and direct sunlight.
- Never use the device under a blanket, pillow or cushion, etc.

Measures for handling batteries

⚠ WARNING

- **Risk of explosion! Risk of fire!**
Failure to comply with the points mentioned can result in personal injury, overheating, leakage, venting, breakage, explosion, or fire.

- Always use the correct or supplied charging cable/charger/mains adapter for charging.
- Avoid continuous charging or overcharging. Unplug the charger when charging is complete.
- Charge the device under supervision, paying attention to any heat generated, deformation, or release of gases. If in doubt, stop charging.
- If batteries/charging cables/chargers are defective, stop using them and dispose of them properly as soon as possible (see chapter on disposal).
- Do not throw the device or batteries into a fire.
- Never forcibly discharge, heat, disassemble, open, crush, deform, encapsulate, modify or knock the device or batteries.
- Never short-circuit batteries or the connections of the battery-powered device.
- Protect the device or batteries from direct sunlight, rain, heat and water.
- Exposure of batteries to an environment with extremely high temperatures or an extremely low air pressure may result in explosion or leakage of flammable liquids and gases.
- If fluid from a battery comes into contact with your skin or eyes, wash the affected areas with water and seek medical assistance.

4. DEVICE DESCRIPTION

The associated drawings are shown on page 3.

- 1** Housing cover
- 2** Cutting surface
- 3** LED light
- 4** LED ring
- 5** ON/OFF button
- 6** USB-C connection
- 7** Collection tray for nail clippings
- 8** Collection tray cover
- 9** Cleaning brush

5. INITIAL USE

Charge the device



The device cannot be used during the charging process.

1. Make sure that the device is switched off.
2. Fully charge the device for approx. 2.5 hours before initial use. To do this, connect the supplied USB-C cable to the USB-C port **6** on the device and to a suitable mains adapter (not included).
3. The LED ring flashes **4** white while charging is in progress. As soon as the device is fully charged, the LED ring lights up white continuously **4**

for 5 minutes and then goes out. A charged battery will last for approx. 2 hours of operation.

4. Remove the USB-C cable from the device. The device is now ready for use.

6. USAGE



The device is delivered with the travel lock activated. To deactivate the travel lock, press and hold the ON/OFF button **5** for 2 seconds.



As soon as you **8** remove the collection tray cover, operation will stop automatically for safety reasons. **The device can only be switched on when the collection tray cover **8** is correctly positioned.**

CAUTION

Check the results regularly during the treatment. This applies in particular for diabetics, as they have less sensitive hands. Stop treatment as soon as it becomes unpleasant.

1. Switch the device on by pressing the ON/OFF button **5**. The LED ring **4** lights up light blue and the

device starts automatically at the low speed setting.

2. To increase the speed setting, press the ON/OFF button again **5**. The LED ring **4** lights up dark blue.

3. Carefully guide the nail to be treated to the cutting surface **2**. Shape the nail as desired. Do not press too hard and always carefully guide the nail towards the cutting surface **2**.



4. To switch off the device, press the ON/OFF button **5** repeatedly until the LED ring **4** goes out. Alterna-

tively, the device will switch off automatically after 10 minutes.

5. Clean the collection tray **7** with the cleaning brush after each use **9** (see chapter "8. Cleaning and maintenance").



If the LED ring **4** starts to flash during use, you will have to charge the device (see chapter „5. Initial use“). When the battery is empty, the minimum charging time is approx. 20 minutes to start the device.

Travel lock

The device has a travel lock which prevents the device from switching on by accident when you are on the move.

1. To activate the travel lock, press and hold the ON/OFF button **5** for 2 seconds. The LED ring **4** flashes green.
2. To deactivate the travel lock, press and hold the ON/OFF button **5** for 2 seconds. The LED ring **4** will flash green again.

7. CLEANING AND MAINTENANCE

DANGER


- **Risk of electric shock! Unplug the device each time before cleaning.** Clean the device using only the methods specified. Never immerse the device or the USB-C charging cable with the mains adapter in water or other liquids.
- Ensure that no water enters the device. If this should happen, do not use the device again until it has fully dried out.

NOTICE

- Do not use any chemical or abrasive cleaning agents.

Cleaning

1. Make sure that the device is switched off.
2. Slide the collection tray cover **8** downwards.
3. Carefully clean the collection tray **7** with the cleaning brush after every use **9**. Make sure that there are no nail clippings in the collection tray **7** after cleaning.

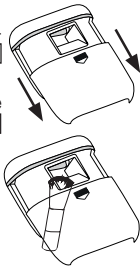

4. After cleaning, push the **8** collection tray cover upwards until you hear and feel it click into place.

8. DISPOSAL

For environmental reasons, do not dispose of the device in household waste at the end of its service life. Dispose of the device at a suitable local collection or recycling point in your country. Observe the local regulations for material disposal. Dispose of the device in accordance with EC Directive – WEEE (Waste Electrical and Electronic Equipment). If you have any questions, please contact the local authorities responsible for waste disposal. You can obtain the location of collection points for old devices from the local authorities.



Environmentally friendly disposal

For the sake of the environment, we recommend you to dispose of the individual components separately, especially the batteries.

1. Remove the housing cover **1** upwards.



2. Using a screwdriver, pry out the upper part.



3. Pull off the upper part and the red ribbon.



4. Remove the collection tray cover **8** downwards.



5. Loosen the two lower screws with a screwdriver.



6. Remove the front of the housing.



7. Pull out the battery at the plug connection and dispose of it separately.



9. TECHNICAL SPECIFICATIONS

Power supply 5.0 V === 1.0 A Max
Dimensions (L x W x H) 64 x 29 x 54 mm
Weight approx. 90 g (without USB-C cable)
Speed Low speed setting: 415 RPM +/-15% High speed setting: 490 RPM +/-15%
Battery Capacity: 400 mAh Nominal voltage: 3.7 V Type designation: Lithium-ion

Subject to technical changes.

The Declaration of Conformity for this product can be found at the following address:

<https://www.beurer.com/conformity>

10. GUARANTEE

Further information on the guarantee and guarantee conditions can be found in the guarantee leaflet supplied.

Subject to errors and changes



Beurer GmbH • Söflinger Str. 218 • 89077 Ulm, Germany
www.beurer.com • www.beurer-gesundheitsratgeber.com
www.beurer-healthguide.com

