


CINEMA GUIDE

STAYING HOME HAS
NEVER BEEN SO GOOD.

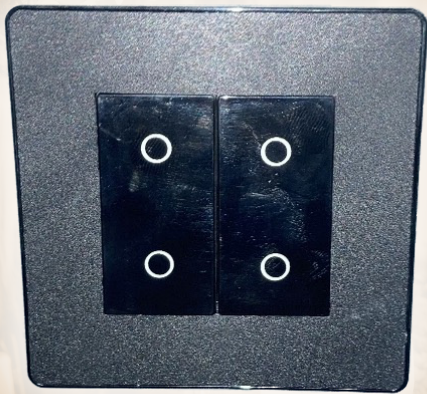

DIMMER SWITCH LIGHTING

- To turn all lights on press both top switches
- For dimmer on wall lights hold left switch down
- For dimmer to ceiling lights hold right switch down
- To turn all lights off press both bottom switches



HEATING AND AIRCON CONTROL

- Power on with the on button (bottom right)
- Change type of temp
- Adjust the room temperature with the middle two buttons
- Strength of the fan can be controlled by the right button

THIS IS YOUR DESTINATION.
THIS IS YOUR DOCK.

www.dock5.co.uk

CINEMA GUIDE

PROJECTOR SCREEN AND CONTROL.



PROJECTOR SCREEN

- Please ensure that the white square is lower to the level display this is the correct length to screen on.



PROJECTOR CONTROL

- Top button is to retract the screen
- Middle button is to stop the screen moving
- Bottom button is to completely lower the screen.
- Bottom two buttons are to adjust the screen up and down manually

CINEMA GUIDE CONTROLS.



**SOUND BAR
REMOTE
CONTROL**



**PROJECTOR
REMOTE
CONTROL**



**BT
CONTROLLER**

CASTING

- To stream from a tablet or phone or laptop, connect to the 'Communal Wi-Fi'.
- Password: **CommunalCinemaD5**
- Then share your screen / video as usual to 'Office screen'.