



1 Quick Start V2.X

1) Connect audio accessory to the terminal

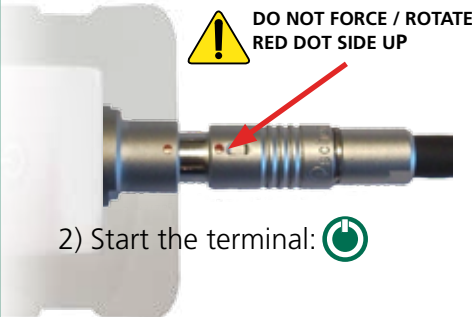

2) Start the terminal: 



3) Welcome screen:


⇒ «TALK» = conversation mode
 ⇒ «LISTEN» = listen only mode


4 Mic's Sensitivity (VOX mode)

• Press  for 3 seconds






• Press  or  to adjust mic's sensitivity*
 *-10: Loud voice + 10: Low voice

•  Appears when voice or noise is detected to help select the best setting

•  Appears if the value is **NOT** zero

2 Main Menu






- Displayed channel: last in use
-  Select channel menu (1_{LR} → 32_{LR})*
-  Validates the displayed channel*
 *Automatic validations after 5s
-  Changes the mode:
 (conversation / listen-only)

5 Switch-Off / Paging Signal




• Press Key 








-  Validates the switch-off command
-  Cancels the switch-off command
 *Automatic cancellation after 5s
-  Pages the other in-team terminals

3 Communication (TALK mode)




- Communication OK: 
- Terminal rank: **1** (smiley = me)
- Sound volume: **6**
- Channel: **1** (CH:1_{LR})
- Kit number: **21**
- Volume control (1-10) with buttons  or 

Lone Worker Protection Enable Man Down Safety Pack

- 1 Start the BCX 
- 2 Press and hold down  to go to the menu
- 3 Select the menu **(P)** by using the buttons   and confirm by pressing 




- 4 Select the « On » press 

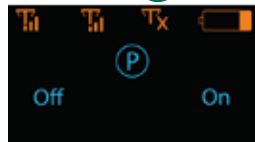

- 5 The radio returns to the general screen and indicates that the **(P)** option is enabled:



LWP disabling: steps 2 and 3 identical, and step 4: «Off» by pressing the 

In case of immobility:

- **Early Warning:** audible warning signal to the wearer to indicate his or her immobility
- **Alert:** voice message to other crew members (ex: «BCX 1 stationary») audible indication to the stationary user

Important: The LWP function is not available on radios in multi mode.

The configuration software allows you to configure the PTI functionality «configuration tab». (Auto or manual start, delay + message repeat time, delay between pre-alert and voice alert).

Communication Incidents



- Vocal alert « Low battery 20%»
- Automatic switch-off within 45 minutes
- Vocal alert « Low battery 5%»
- Automatic switch-off within 5 minutes
- Message flashing « **NO BATTERY**»
- Automatic switch-off within 5 seconds
- Connect the terminal to the charger with the provided USB cable