

OPERATION BULLETIN

EINHELL COOLER/WARMER ART. NO. 2048425

The Einhell 18V 27 L Cordless Cooler/Warmer (2048425) belongs to the Power X-Change (18V) line of tools. It cools down to 20°C below ambient temperature or heats up to 60°C, operates on an 18V battery, 120V power source, or a 12V car cigarette lighter socket with automatic priority.



Art. no. 2048425 (TE-COL 18/27 Li)

Operational Steps

- Power supply:** Insert an 18V Power X-Change battery into the designated compartment (recommended: 4.0 Ah battery or larger for extended runtime).
- Preparing the Cooler/Warmer:** For home use, use the 120V power cord. For the car, use the 12V cigarette lighter cable. **The Cooler/Warmer prioritizes 120V power, then 12V, and lastly the 18V battery.**
- Start-up and settings:**
 - **Cool/heat:** Select the desired mode (cooler or warmer) via the control panel.
 - **Modes (Eco/Max):** Choose Eco mode to save battery or turn the dial up to Max (Eco mode recommended).
- Battery indicator:** Observe the LEDs to monitor the charge level.

Tips for maximum efficiency before using the battery

IMPORTANT

- **Pre-cooling or Pre-warming:** Plug the Cooler/Warmer **into a 120V outlet before leaving** to lower or raise the internal temperature as much as possible. Or add frozen freezer packs to pre-cool the chamber.
- **Content:** Fill the Cooler/Warmer with **already chilled food or drinks**, or fill with **pre-warmed items** if that is your preferred operation.
- **Protection :** A vehicle battery protection system is integrated to prevent discharge of your car's battery in 12V mode.
- **Usage :** A divider grid is included to organize the contents.

The Cooler/Warmer has side pockets for storing cables or a spare battery. (Best performance with 2 batteries for a full day).