

BRAIZ^{MC}

Outdoor Gas Fireplace Table EMA

77009226



ASSEMBLY GUIDE

Read the instructions before use. This appliance must be installed in accordance with such regulations as are enforced.





READ INSTRUCTIONS CAREFULLY

**INSTALLER: LEAVE THIS MANUAL
WITH THE APPLIANCE.**

**CONSUMER: RETAIN THIS MANUAL
FOR FUTURE REFERENCE.**



WARNING FOR OUTDOOR USE ONLY

DANGER



CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odour. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, car or building.



EXTREME DANGER

**CONTENTS MAY CATCH FIRE.
CONTAINER MAY EXPLODE
IF HEATED.**



WARNING

Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance. A propane tank not connected for use shall not be stored in the vicinity of this or any other appliance.



WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.

WHAT TO DO IF YOU SMELL GAS?

- **Shut off gas to the appliance.**
- **Extinguish any open flame.**
- **DO NOT try to light the appliance.**
- **DO NOT touch any electrical switch; do not use any phone in the vicinity of this product.**
- **If odour continues, keep away from the appliance and immediately call your gas supplier or fire department.**
- **Installation and service must be performed by a qualified installer, service agency or gas supplier.**

WARNINGS AND CAUTIONS

PLEASE READ THE FOLLOWING SAFETY RULES:

WARNING

1. The installation must conform with local codes or, in the absence of local codes, with either the Natural Gas and Propane Installation Code, CSA B149.1, or the Propane Storage and Handling Code, CSA B 149.2.
2. This appliance requires a 20 lb (9 kg) propane tank.
3. The burner must be replaced prior to the appliance being put into operation if it is evident that the burner is damaged. The replacement burner shall be that specified by the manufacturer.
4. The installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that control compartment, burners, and circulating air passageways of the appliance be kept clean.
5. Always place the appliance on a firm and level surface.
6. DO NOT burn solid fuels in this gas appliance.
7. Use the appliance outdoors in a well-ventilated space only, not in a building, garage, or any other enclosed area.
8. When using the appliance, keep the appliance area clear and at least 4' 2" (1.27 M) from combustible materials, gasoline and other flammable liquids and vapours. Certain items or materials, when stored under the appliance or nearby, will be subjected to radiant heat and could be seriously damaged.
9. Inspect the gas connections of the appliance prior to each use. Do not operate the unit if there is a gas leak. A qualified service person should inspect the appliance annually.
10. Inspect the hose before each use of the appliance. The hose assembly must be replaced prior to the appliance being put into operation if there is evidence of excessive abrasion or wear or if the hose is damaged. The replacement hose assembly shall be that specified by the manufacturer.
11. Alert children and adults to the hazards of high surface temperatures and keep them away to avoid burns or clothing ignition.
12. Carefully supervise children and pets when they are near the appliance.
13. Any guard or other protective device removed for servicing the appliance shall be replaced prior to operating the appliance.
14. DO NOT hang clothing or other flammable materials on or near the appliance.
15. DO NOT use the appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.
16. The propane-gas supply tank to be used must be: Constructed and marked in accordance with the specifications for propane-gas tank of Standard for Cylinders, Spheres and Tubes for Transportation of Dangerous Goods and Commission, CAN/CSA-B339, as applicable.
17. The propane-gas supply tank to be used must be provided with a listed overfilling prevention device; and provided with a tank connection device compatible with the connection for the appliance.
18. Use only a tank supply system arranged for vapour withdrawal, and the tank must include a collar to protect the tank valve.

PREPARATION

Before beginning the assembly, make sure all parts are present. If any part is missing or damaged, do not attempt to assemble the product.

 
Tool needed (not included)




Phillips screwdriver


PACKAGE CONTENT

Hardware

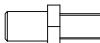A		X28
B		X5
C		X1

 D		X1
E		X1
F		X1

Parts

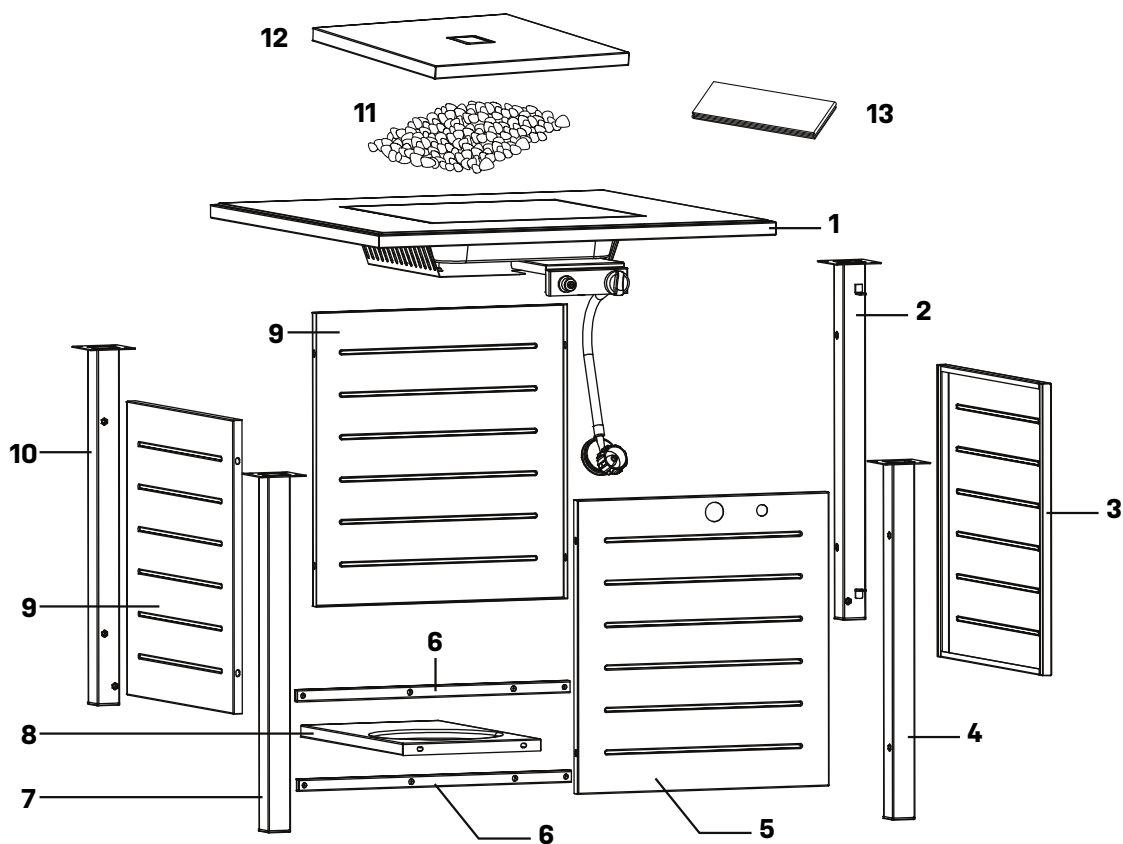

1	TABLE TOP	X1
2	LEG A	X1
3	DOOR PANEL	X1
4	LEG B	X1
5	SIDE PANEL WITH HOLE	X1
6	TANK HOLDER POLE	X2
7	LEG C	X1



8	TANK HOLDER	X1
9	SIDE PANEL	X2
10	LEG D	X1
11	LAVA ROCKS	X1
12	LID	X1
13	COVER	X1

ASSEMBLY INSTRUCTIONS

Choose a safe, unobstructed area and ask someone else to help you assemble your fireplace table. Place the cardboard box on the ground to protect the finish of your appliance.



STEP 1

 Attach leg A (2) to the table top (1) on the opposite side from the control knob, with 3 screws (A). Do not fasten the screws.

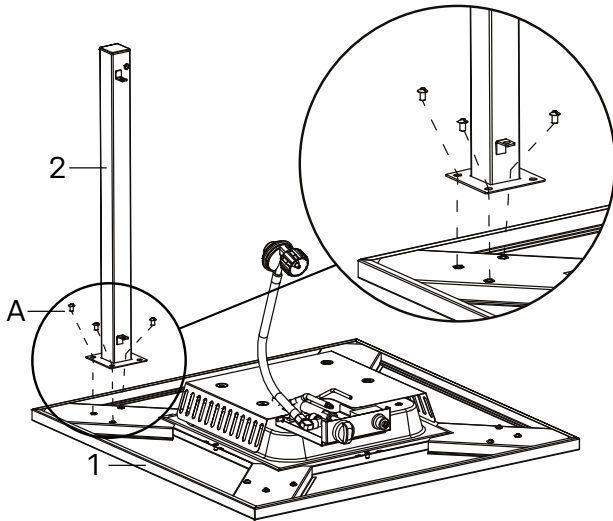



STEP 3

 Attach leg C (7) to the table top (1) with 3 screws (A). Do not fasten the screws.

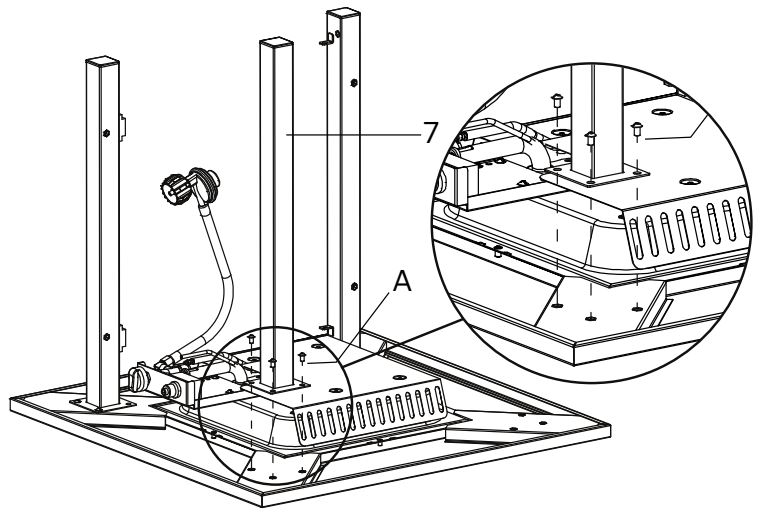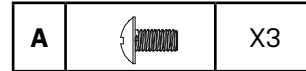



STEP 2

 Attach leg B (4) to the table top (1) with 3 screws (A). Do not fasten the screws.

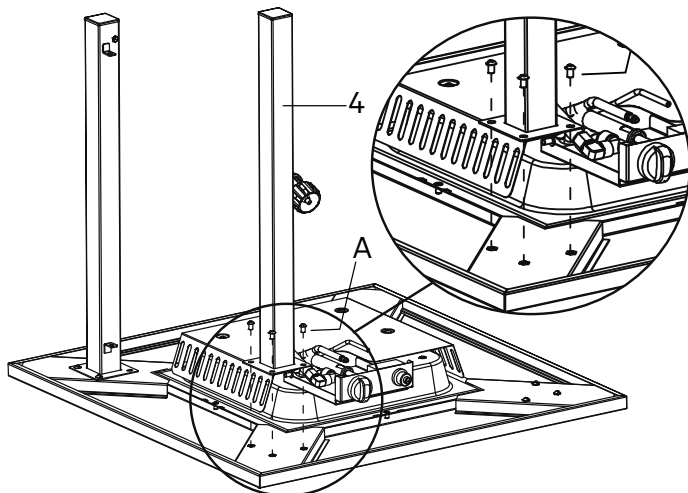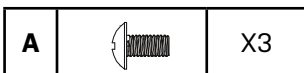

STEP 4

 
Attach leg D (10) to the table top (1) with 3 screws (A). Do not fasten the screws.

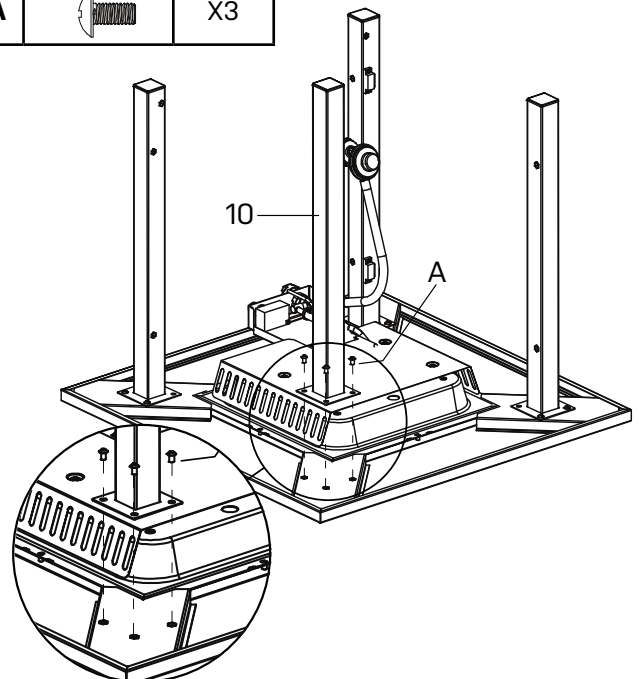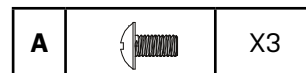

STEP 5

Remove the knob and attach side panel with hole (5) with leg B (4) and leg C (7) with 4 screws (A). Then assemble the knob.


A		X4
---	---	----

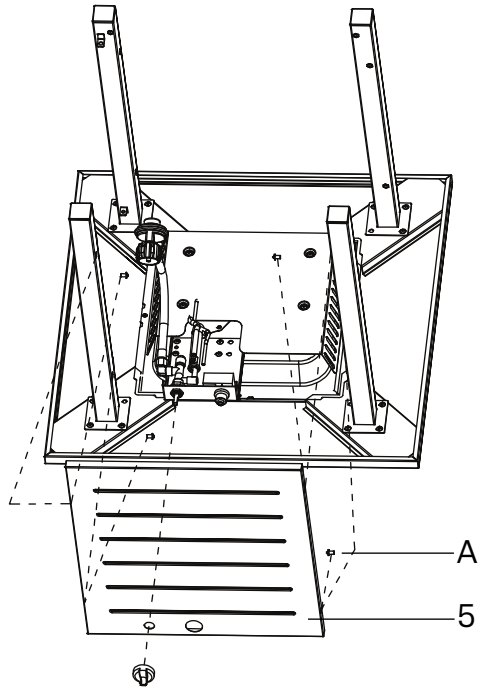

STEP 6

Attach side panel (9) to leg C (7) and leg D (10) with 4 screws (A). Pay attention to the direction of panel. Do not fasten the screws.


A		X4
---	---	----

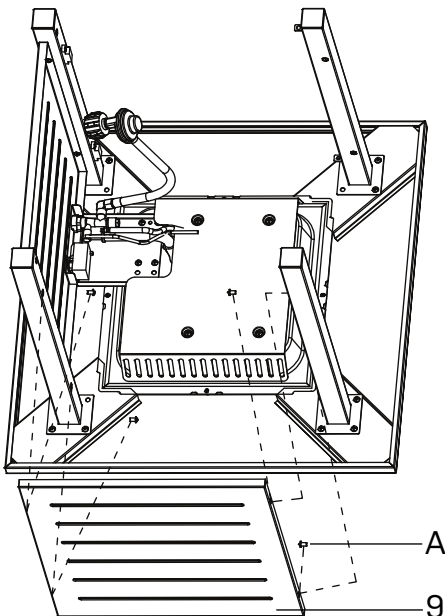

STEP 7

Attach side panel (9) to leg A (2) and leg D (10) with 4 screws (A). Pay attention to direction of panel. Do not fasten the screws.


A		X4
---	--	----

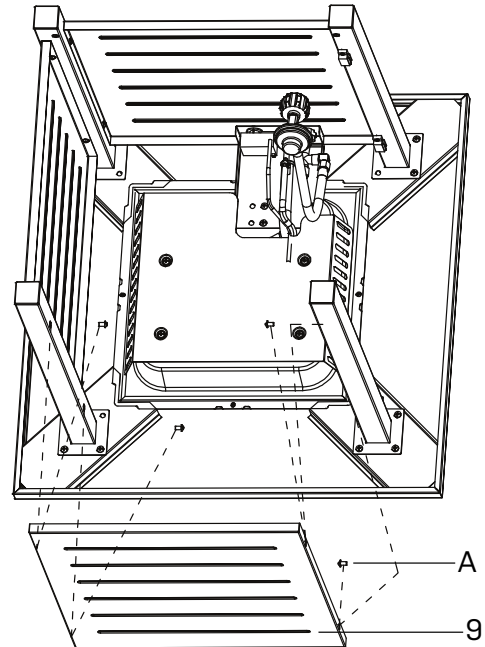

STEP 8

Attach the tank holder poles (6) to the tank holder (8) with 4 screws (A). Then screw the tank locking knob (E) to the tank holder (8).



A		X4	E		X1
---	--	----	---	---	----

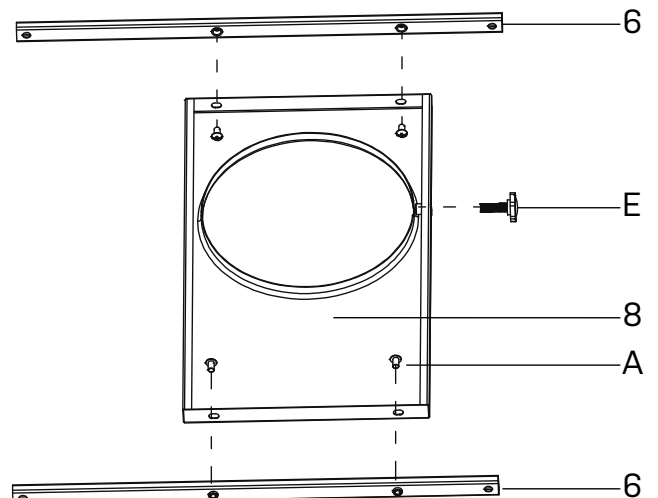

STEP 9


Remove the screws and washer from the door handle (D). Attach it to door (3).

 Assemble door connector (C) into door (3).

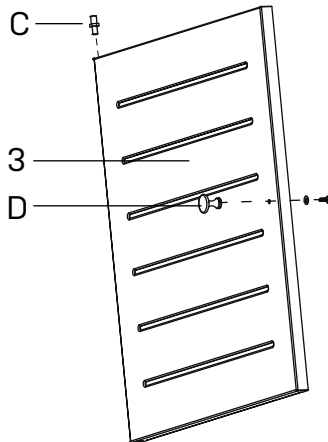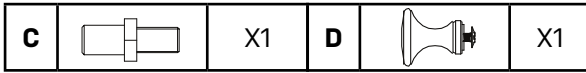

STEP 10



Assemble door panel (3) to leg A (2) with 1 screw (B), do not fasten the screw.

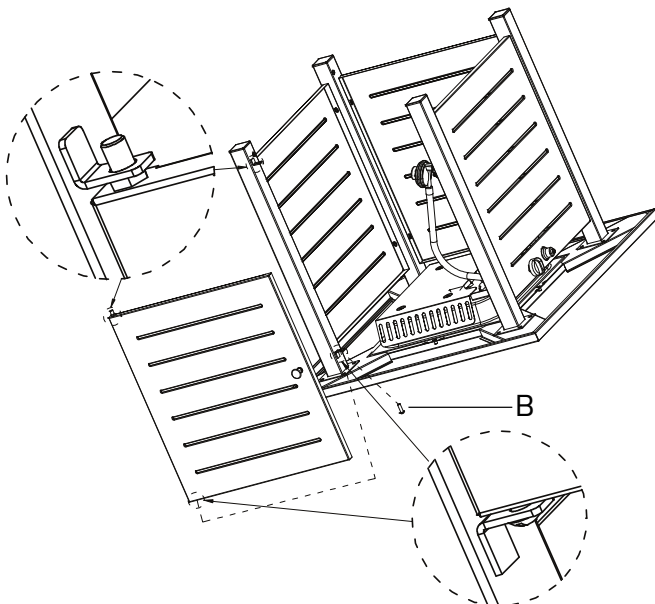

STEP 11

11.1 Attach the tank holder assembly to the 4 legs with 4 screws (B).

 
11.2 Fasten all screws, including the locking knob (E) to the tank holder (8).

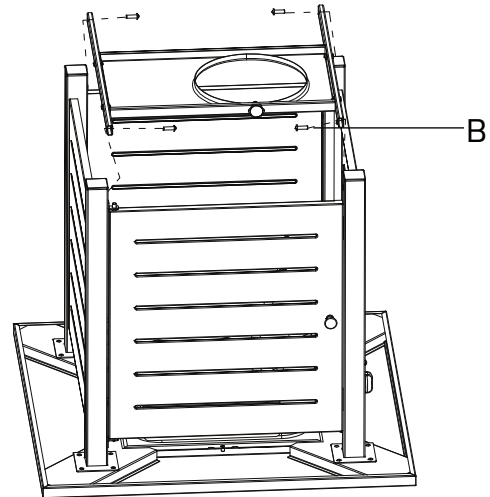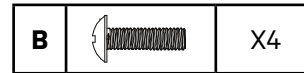

STEP 12


Turn the fireplace table upright, then place lava rocks (11) into the bottom bowl. Tear off the label on the igniter housing. Place the lid (12) onto the table top when the replace is not in use.

CAUTION: Do not dump lava rocks out of package. Carefully place lava rocks by hand so that dust will not clog burner. Do not cover the shield.

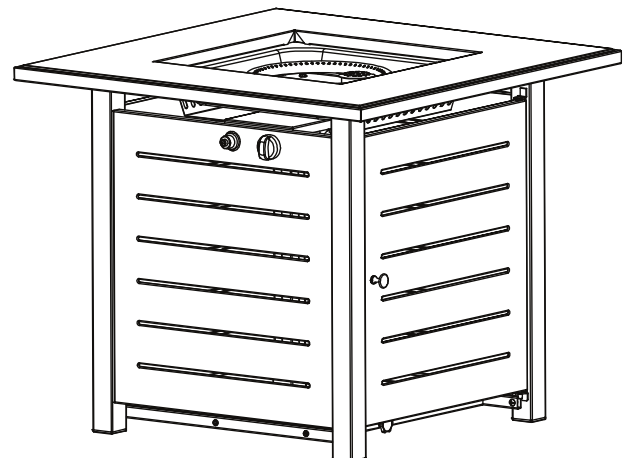


STEP 13

Remove the hard plastic cap on the electronic igniter by unscrewing and slide battery (F) into the battery slot. Make sure the positive side of the battery faces outwards. Screw the electronic ignitor cap over the battery tightly.

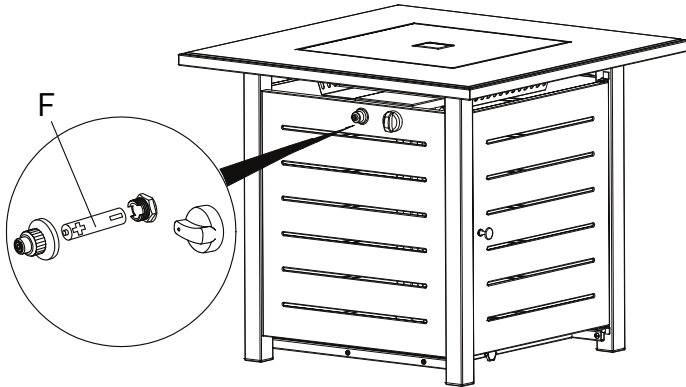


STEP 14

Put the 20 lb propane gas tank (not included) into the tank holder (8) with the valve facing the door. Tighten the locking bolt on the tank holder to secure the tank.

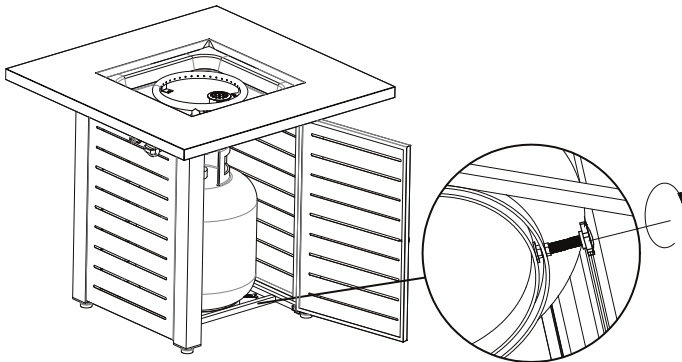

STEP 15

Attach the preassembled regulator from the table top (1) to the cylinder valve by turning the regulator coupling nut clockwise. Make sure it is fastened securely and tighten connections by hand only.

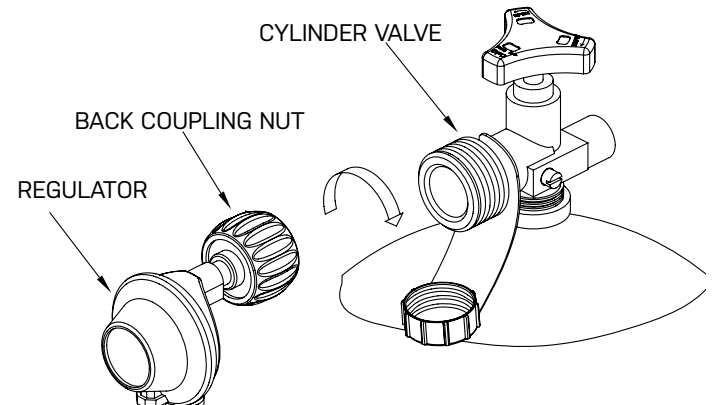


STEP 16

Put the cover (13) on the fireplace table when not in use.



CAUTION: Make sure the fireplace table has cooled down completely before putting the cover on.

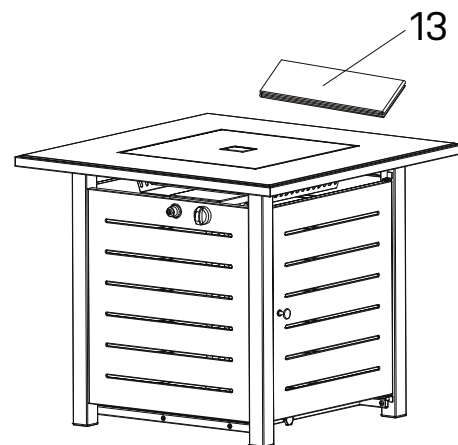

OPERATION

Before using your fireplace table, check for leakage. Follow these steps to check the hose, regulator, tank connections:

1. Make leakage solution by mixing 1 part of liquid dish soap and 3 parts of water.
2. Pour several drops (or use a squirt bottle) of the solution onto the hose, regulator, and tank connections.
3. Turn on the gas tank. Inspect the connections and look for bubbles.
4. If no bubbles appear, the connection is safe.
5. If bubbles appear, there is leakage. Loosen and re-tighten this connection. If there is still a leak, stop using the device immediately.

WARNING

- Do not use an open flame to check for leakage.
- Do not smoke during testing.
- Do not test indoors.
- A leak check must be performed whenever the gas tank is replaced

BEFORE TURNING GAS SUPPLY ON

Your fireplace table was designed and approved for outdoor use only. Do not use it inside a building or any other enclosed area.

- Make sure surrounding areas are free of combustible materials, gasoline, and other flammable vapours or liquids.
- Ensure that there is no obstruction to air ventilation.
- Be sure all gas connections are tight and there are no leaks.
- Be sure the access panel is clear of debris.

WARNING

FOR YOUR SAFETY:

If at any time you are unable to light burner and smell gas, wait 5 minutes to allow gas to dissipate before attempting to light gas appliance. If after 1 minute, you are unable to light burner, wait 5 minutes and allow flammable vapours to dissipate before attempting to light gas appliance.


Do not touch or move gas appliance for at least 45 minutes after use. Lighting operations should comply with lighting instructions section. Improper lighting operations may cause serious injury and explosion.

BEFORE LIGHTING


The gas fireplace table should be thoroughly inspected before each use, and by a qualified service person at least annually. Before relighting a hot gas fireplace, always wait at least 5 minutes.

LIGHTING INSTRUCTIONS

1. Make sure the control knob is in the "OFF" position.

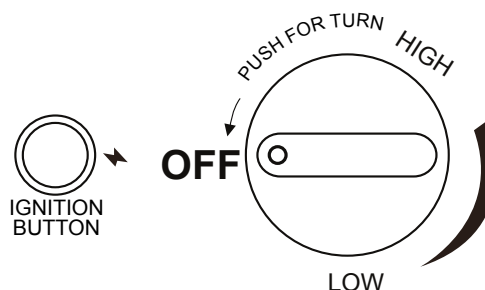

2. Turn propane tank valve to fully open position.
Note: For initial start or after any tank change, hold the control knob in for 2 minutes to purge air from gas lines before proceeding.
3. Push in gas control knob, turn counterclockwise to "LOW" and press the black igniter button to light the burner (you should hear a clicking sound), then release the control knob.

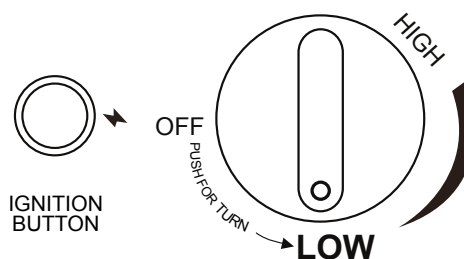

4. Once the burner is lit, the flame intensity may be controlled by turning the control knob between "LOW" and "HIGH". The flame height should be between 15 3/4" (40 CM) and 23 5/8" (60 CM).

Note: If the burner fails to remain lit, close all valves and wait at least 5 minutes before attempting to light again.

EXTINGUISHING

1. Turn the control knob clockwise to «LOW» position. Let the knob pop up, then turn it off.
2. Close the tank valve on the propane gas tank when the appliance is not in use.

MAINTENANCE AND STORAGE

CLEANING AND MAINTENANCE

To enjoy years of outstanding performance from your gas fireplace table, make sure you perform the following maintenance activities on a regular basis:

- Keep exterior surfaces clean.
- Use warm soapy water for cleaning. Never use flammable or corrosive cleaning agents.
- While washing your unit, be sure to keep the area around the burner dry at all times. If the gas control is exposed to water in any way, DO NOT try to use it. It must be replaced.
- Keep the appliance area free and clean from combustible materials, gasoline and other flammable vapours and liquids; not obstructing the flow of combustion and ventilation air; keeping the ventilation openings of the tank enclosure free and clear from debris.
- Check if there are cracks or worn sections on the hose. If yes, replace it.
- At least once a year, the unit should be inspected for the presence of spiders, spider webs or other insects.
- Air flow must be unobstructed. Keep controls, burner, and circulating air passageways clean. Signs of possible blockage include:
 - Gas fireplace does NOT reach the desired temperature.
 - Gas fireplace table glow is excessively uneven.
 - Gas fireplace table makes popping noises.
- Spiders and insects can nest in burner or orifices, which can damage gas fireplace table and render it unsafe for use. Clean burner holes by using a heavy-duty pipecleaner. Compressed air may help clear away smaller particles.

NOTE

In a salt-air environment such as near an ocean, corrosion occurs more quickly than normal. Frequently check for corroded areas and repair them promptly.

STORAGE

Store the fireplace table indoors during the winter since it will be subjected to freezing temperatures. Disconnect and remove the tank from it before storing the appliance indoors.

1. Turn the control knob to "OFF" position.
2. Turn off the propane tank valve.
3. Take out the battery from the compartment during periods of extended inactivity or when transporting.
4. Allow at least 45 minutes for the fireplace table to cool down after use, and then turn the regulator knob counterclockwise to disconnect the regulator from the tank. Turn the tank holding bolt counterclockwise to loosen and remove it.
5. Tank must be stored outdoors in a well-ventilated area out of reach of children. When the tank is disconnected, tightly install the threaded valve plugs, and do not store it in a building, garage or any other closed area.
6. You may store the product indoors ONLY if the tank is disconnected and removed.
7. Keep the fireplace area clear and free from combustible materials, gasoline and other flammable vapours and liquids
8. Store gas fireplace table in an area sheltered from direct contact with inclement weather (such as rain, sleet, hail, snow), dust and debris.
9. A qualified service person should install and repair the fireplace table and inspect it annually.
10. It might be necessary to clean this fireplace table frequently. You must keep the control panel, burner and circulating air passageways clean.

TROUBLESHOOTING		
PROBLEM OBSERVED	POSSIBLE CAUSES	CORRECTIVE MEASURES
Burner will not light with a match or lighter	Propane tank valve is closed.	Make sure the regulator is securely attached to the propane gas tank, then turn on the propane gas tank valve.
	No gas flow.	Check that the gas tank isn't empty. A. If empty, change or refill. B. If the propane gas tank is not empty, refer to <i>Sudden drop in gas flow or reduced flame height</i> .
	Propane tank is low or empty.	Change or refill the propane gas tank.
	Propane gas leak.	1. Turn off the tank valve. 2. Wait 5 minutes for gas to clear. 3. Follow the steps to check leaks in the Operation section.
	Coupling nut and regulator not fully connected.	Turn the coupling nut about one-half to three-quarter additional turn until solid stop. Tighten by hand only. Do not use tools.
	Obstruction of gas flow.	1. Clear burner tube. 2. Check hose for kink and bend.
	Wrong connection of the control box to the regulator.	Tighten the connection and make a leak test.
	Spider webs or insect nest in burner tube.	Clean burner tube.
	Burner ports clogged or blocked.	Clean burner ports.
Sudden drop in gas flow or reduced flame height	No gas flow.	Change or refill the propane gas tank.
	Excess flow: safety device may have been activated.	1. Turn off the control knob. 2. Wait 30 seconds and light as per the Lighting instructions section. 3. If flames are too low, reset the overfilling prevention device: a. Turn off the control knob. b. Turn off the tank valve, disconnect the regulator, then turn control knob to "HIGH". c. Wait one minute. d. Turn off the control knob, reconnect the regulator and check leaks at connections, being careful not to fully open the valve. e. Light as per the <i>Lighting instructions</i> section.
Irregular flame pattern, flame does not run the full length of burner	Burner ports are clogged or blocked.	Clean burner ports.

TROUBLESHOOTING

PROBLEM OBSERVED	POSSIBLE CAUSES	CORRECTIVE MEASURES
Flame is yellow or orange	New burner may have residual manufacturing oils.	Allow to work for 15 minutes.
	Spider webs or insect nest in burner tube.	Clean the burner tube.
	Wrong connection of the control box to the regulator.	Tighten the connection and make a leak test.
Flame goes out	High or gusting winds.	Do not use this fireplace table during high winds.
	No gas flow.	Change or refill the propane gas tank.
	Excess flow safety valve has been activated.	Refer to <i>Sudden drop in gas flow or reduced flame height</i> .
Flashback (fire in burner tube(s))	Burner or burner tube is blocked.	Clean the burner or burner tube.
Flame seems to lose heat when the temperature is below 10°C (50°F)	Ice has built up on the outside of the propane gas tank.	1. Turn off the control knob. 2. Turn off the tank valve. 3. Replace with a spare propane gas tank. 4. Reconnect the propane gas tank. 5. Follow the steps to check leaks in the <i>Operation</i> section. 6. Light as per the <i>Lighting instructions</i> section.



ONE YEAR LIMITED WARRANTY

NOVELCA offers a limited warranty for this product (hereafter: the "**Product**") for one (1) year from the date of purchase of this Product, with the conditions set out below.

This limited warranty is valid only for the original purchaser of the Product and it may not be transferred.

The present limited warranty is not meant to exclude, restrict, limit or modify the legal warranty given by law to the purchaser of the Product.

If the Product contains a manufacturing defect or if one or more parts of the Product is defective, the retailer commits to replace or repair, at its sole discretion, the defective part or parts without charge under the following cumulative conditions: 1) the purchaser must contact the retail store where the Product was purchased; 2) the purchaser must return the defective part or parts or the Product to the retailer; 3) the purchaser must provide the retailer the invoice as proof of purchase and date of purchase of the Product; 4) the purchaser must supply the Product identification information, including the serial number or the model number; and 5) the period of one (1) year covered by this limited warranty must not be expired. If the retailer decides to replace the defective part or parts, the replacement part or parts would be new or reconditioned, equivalent to new parts. The present limited warranty does not create any other obligation with the provider of the guarantee than those explicitly described above.

This limited warranty is not applicable: 1) to consumable parts; 2) to normal wear; 3) when the Product is used for other purposes than what is described in the user guide (if any); 4) when the serial number or other identification information of the Product is erased or withdrawn; 5) to damages that are only aesthetic and do not affect the normal use of the Product; 6) when the damages, defects, faults or other problems arise from: a) an inadequate maintenance of the Product; b) a faulty installation or assembly of the Product or an installation or assembly that is not in accordance with the user or installation guide (if one is provided); c) a modification, a repair or dismantling of the Product by a person not authorized by the retailer or the manufacturer; d) the transportation by the purchaser, his employee, officer or representative; e) a negligence by the purchaser, his employee, officer or representative; f) an accident; g) a case of force majeure or any event that is not caused by the Product itself.

French version VS English version

In case of discrepancy between the French and the English versions of the text of this limited warranty, the French version shall prevail.

NOVELCA

5355, boul. des Gradins, Québec (Québec) Canada G2J 1C8