

BRAIZ^{MC}

Outdoor Gas Fireplace Table MATIS

77009229



ASSEMBLY GUIDE

Read the instructions before use. This appliance must be installed in accordance with such regulations as are enforced.





READ INSTRUCTIONS CAREFULLY

**INSTALLER: LEAVE THIS MANUAL
WITH THE APPLIANCE.**

**CONSUMER: RETAIN THIS MANUAL
FOR FUTURE REFERENCE.**



WARNING FOR OUTDOOR USE ONLY

DANGER



CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odour. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, car or building.



EXTREME DANGER

**CONTENTS MAY CATCH FIRE.
CONTAINER MAY EXPLODE
IF HEATED.**



WARNING

Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other appliance. A propane tank not connected for use shall not be stored in the vicinity of this or any other appliance.



WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.

WHAT TO DO IF YOU SMELL GAS?

- **Shut off gas to the appliance.**
- **Extinguish any open flame.**
- **DO NOT try to light the appliance.**
- **DO NOT touch any electrical switch; do not use any phone in the vicinity of this product.**
- **If odour continues, keep away from the appliance and immediately call your gas supplier or fire department.**
- **Installation and service must be performed by a qualified installer, service agency or gas supplier.**

WARNINGS AND CAUTIONS

PLEASE READ THE FOLLOWING SAFETY RULES:



 
WARNING

1. The installation must conform with local codes or, in the absence of local codes, with either the Natural Gas and Propane Installation Code, CSA B149.1, or the Propane Storage and Handling Code, CSA B 149.2.
2. This appliance requires a 20 lb (9 kg) propane tank.
3. The burner must be replaced prior to the appliance being put into operation if it is evident that the burner is damaged. The replacement burner shall be that specified by the manufacturer.
4. **The installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that control compartment, burners, and circulating air passageways of the appliance be kept clean.**
5. Always place the appliance on a firm and level surface.
6. DO NOT burn solid fuels in this gas appliance.
7. Use the appliance outdoors in a well-ventilated space only, not in a building, garage, or any other enclosed area.
8. When using the appliance, keep the appliance area clear and at least 36" (91.4 CM) on the sides and 72" (182.9 CM) on top from combustible materials, gasoline and other flammable liquids and vapours. Certain items or materials, when stored under the appliance or nearby, will be subjected to radiant heat and could be seriously damaged.
9. Inspect the gas connections of the appliance prior to each use. Do not operate the unit if there is a gas leak. A qualified service person should inspect the appliance annually.
10. Inspect the hose before each use of the appliance. The hose assembly must be replaced prior to the appliance being put into operation if there is evidence of excessive abrasion or wear or if the hose is damaged. The replacement hose assembly shall be that specified by the manufacturer.
11. **Alert children and adults to the hazards of high surface temperatures and keep them away to avoid burns or clothing ignition.**
12. **Carefully supervise children and pets when they are near the appliance.**
13. **Any guard or other protective device removed for servicing the appliance shall be replaced prior to operating the appliance.**
14. **DO NOT hang clothing or other flammable materials on or near the appliance.**
15. DO NOT use the appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.
16. The propane-gas supply tank to be used must be: Constructed and marked in accordance with the specifications for propane-gas tank of Standard for Cylinders, Spheres and Tubes for Transportation of Dangerous Goods and Commission, CAN/CSA-B339, as applicable.
17. The propane-gas supply tank to be used must be provided with a listed overfilling prevention device; and provided with a tank connection device compatible with the connection for the appliance.
18. Use only a tank supply system arranged for vapour withdrawal, and the tank must include a collar to protect the tank valve.

PREPARATION

Before beginning the assembly, make sure all parts are present. If any part is missing or damaged, do not attempt to assemble the product.

Tool needed (not included)

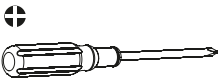

Phillips screwdriver

PACKAGE CONTENT


Hardware

AA		X8
BB		X4

CC		X4
DD		X1

EE		X1
FF		X1

Parts

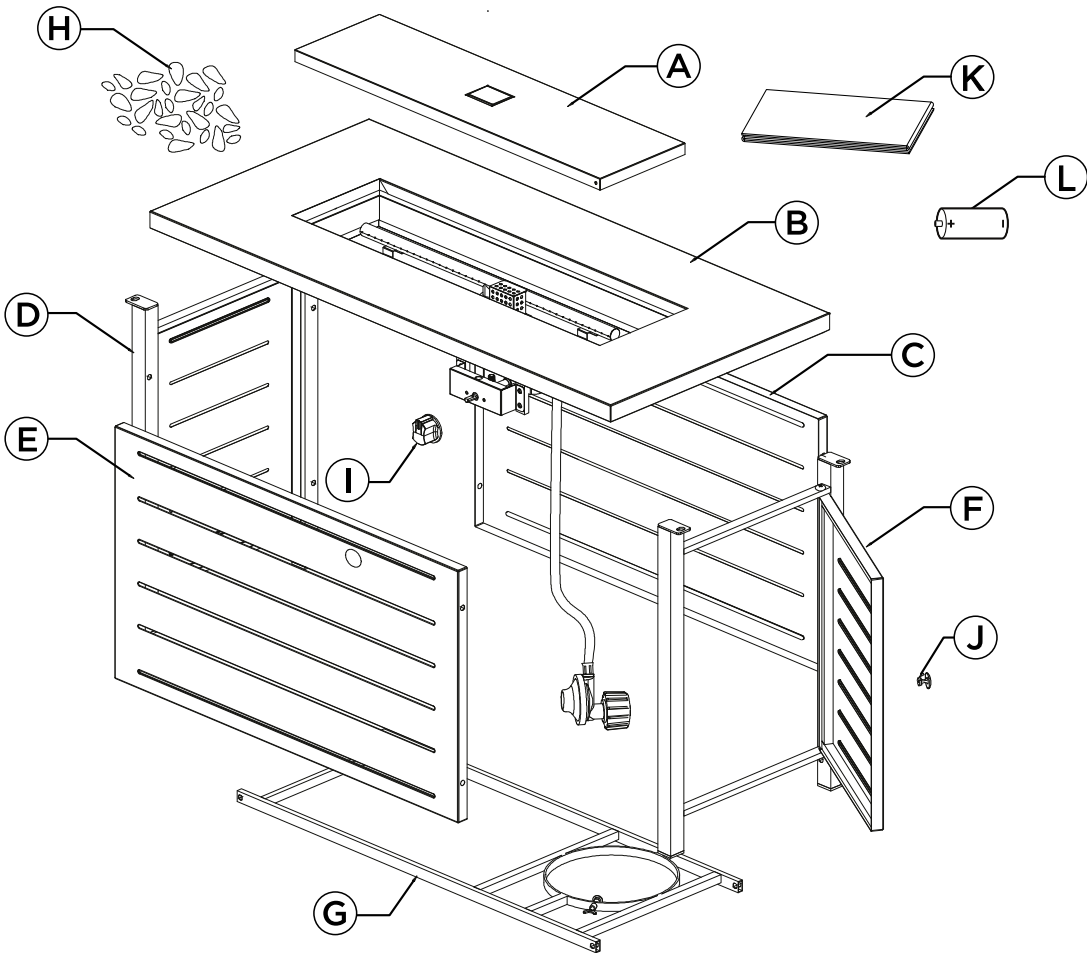

A	LID	X1
B	TABLE TOP WITH BURNER	X1
C	SIDE PANEL	X1
D	BACK PANEL	X1
E	SIDE PANEL WITH HOLE	X1
F	DOOR PANEL	X1

G	TANK HOLDER	X1
H	LAVA ROCKS	X1
I	KNOB	X1
J	DOOR HANDLE	X1
K	COVER	X1
L	BATTERY	X1


 
ASSEMBLY INSTRUCTIONS

Choose a safe, unobstructed area and ask someone else to help you assemble your fireplace table. Place the cardboard box on the ground to protect the finish of your appliance.

NOTE: For steps 1 and 3, do not overtighten the bolts as you need to adjust with the holes to ensure proper alignment.



STEP 1

Attach the back panel (D) to the table top (B) with 2 bolts (CC).

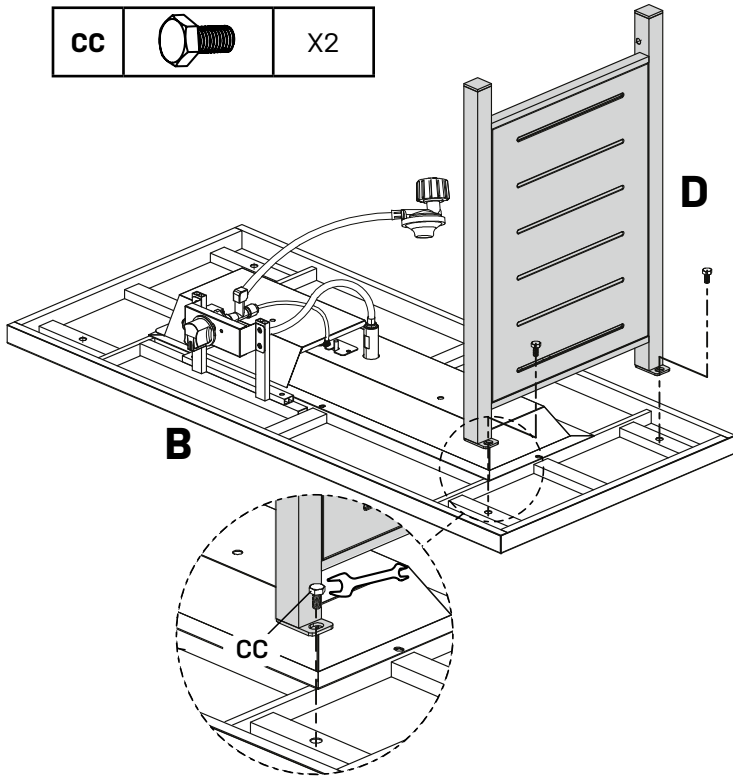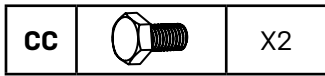



STEP 3

 Attach the door panel (F) to the table top (B) with 2 bolts (CC).

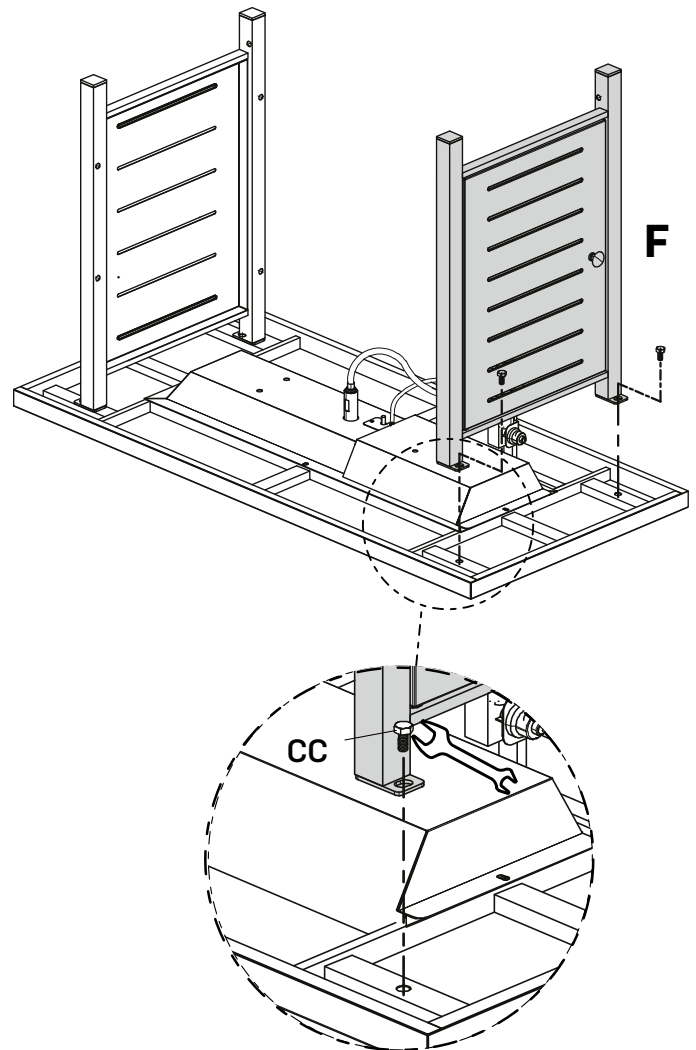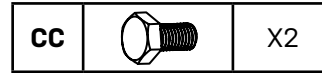

STEP 2


 
Remove the screw and washer (DD) from the door handle (J). Attach the door handle (J) to the door panel (F) with the screw and washer (DD).

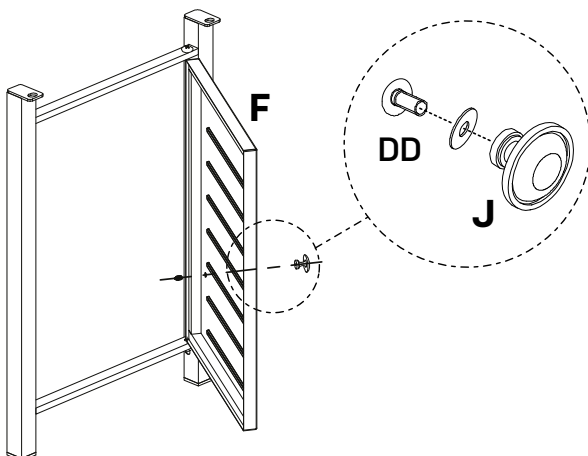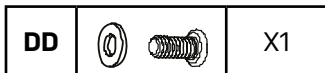

STEP 4

Pull out the knob (I) from the side panel with hole (E). Connect the side panel with hole (E) to the back panel (D) and door panel (F) with 4 screws (AA).


 
NOTE: The control box on the burner assembly must face towards the side panel with hole (E).

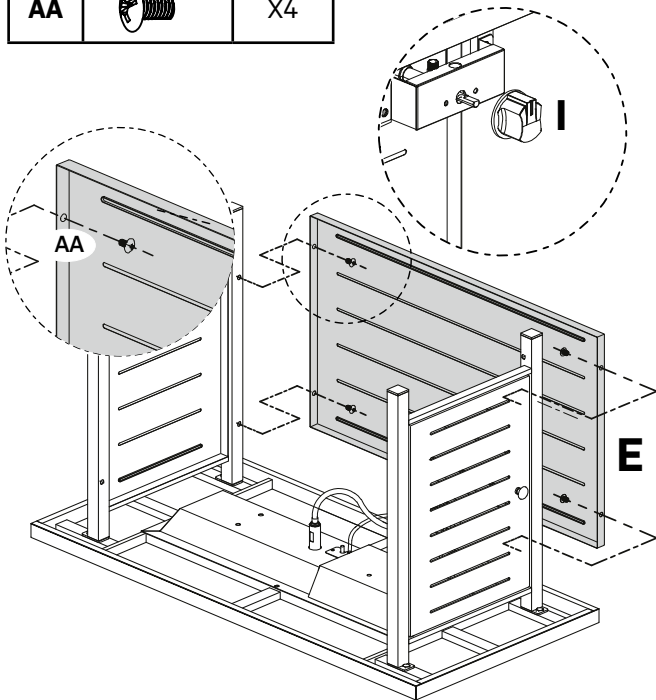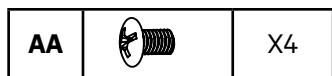

STEP 5


Attach the control knob (I) to the side panel with hole (E) in the direction shown below.

 Connect the side panel (C) to the back panel (D) and door panel (F) with 4 screws (AA).

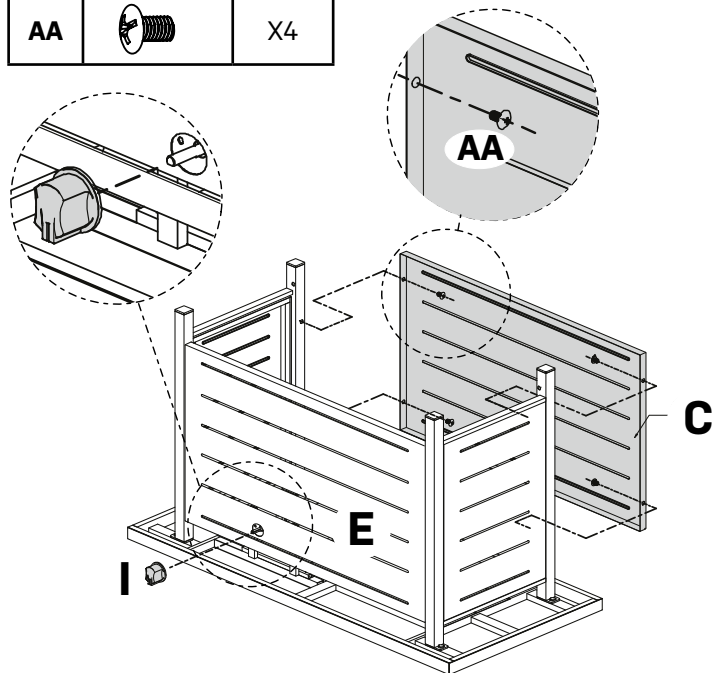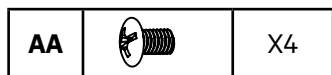

STEP 6



Install the propane tank retaining screw (EE).

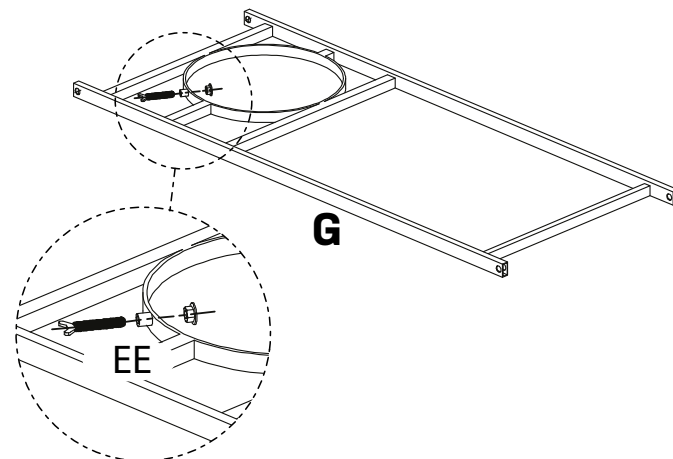

STEP 7

Attach the gas tank holder (G) to the back panel (D) and the door panel (F), according to the direction as illustrated. Align all holes and insert 4 screws (BB), then tighten. To complete the assembly, tighten all the screws and bolts attached in the previous steps.

 
NOTE: With the help of another person, turn the gas fireplace table into the upright position after this step is finished.

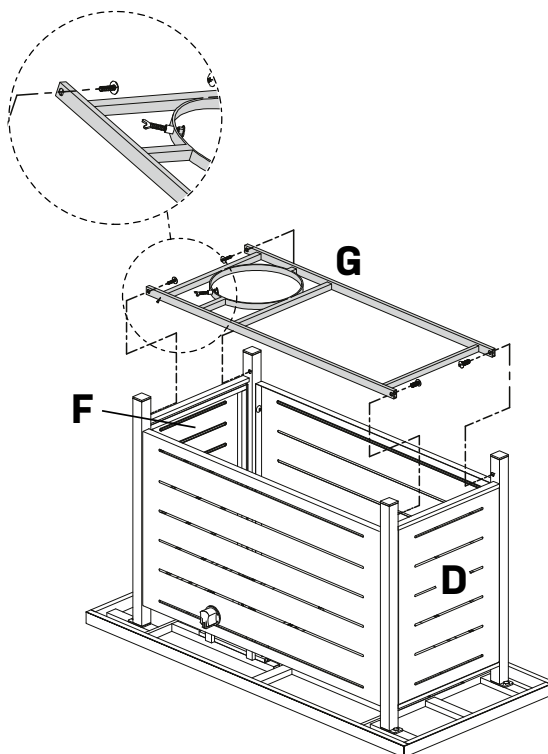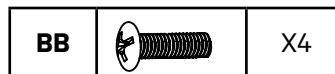

STEP 8


Place the lava rocks (H) onto the table top (B). Place the lid (A) onto the table top (B) when not in use.

CAUTION: Do not dump lava rocks out of package. Carefully place lava rocks by hand so that dust will not clog burner. Do not cover the shield.

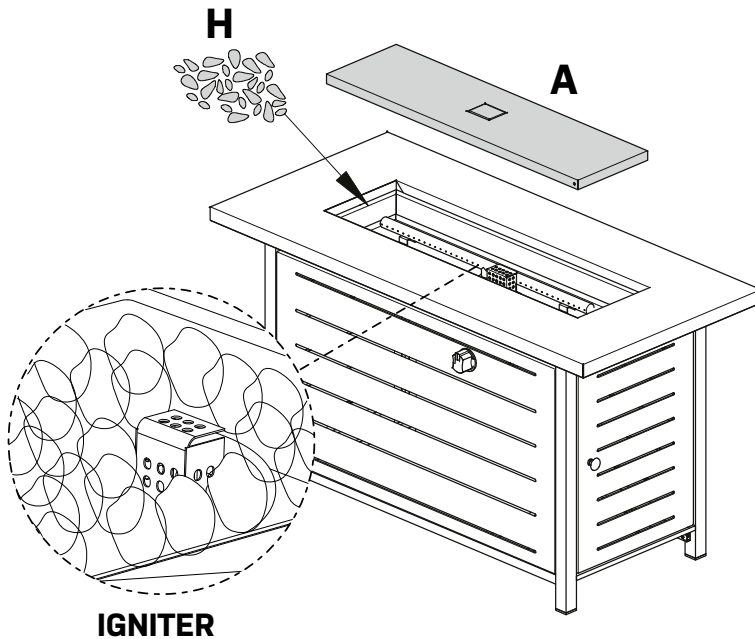


STEP 9

Remove the cap on the electronic igniter by unscrewing and slide battery (L) into the battery slot. Make sure the positive side of the battery faces outwards. Screw the electronic ignitor cap over the battery tightly.

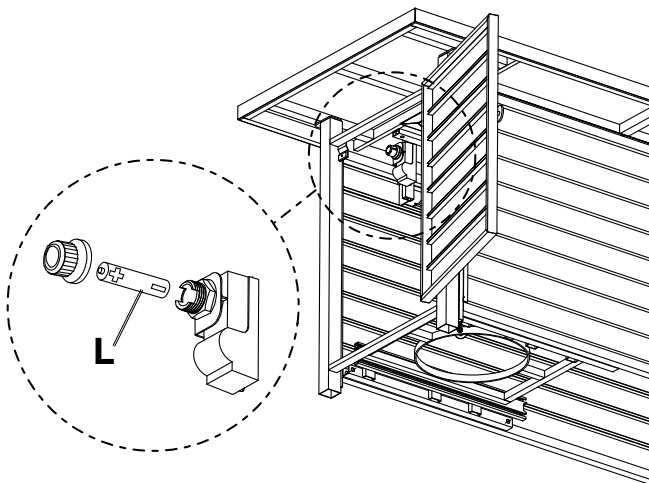


STEP 10

Put the 20 lb propane gas tank (not included) into the tank holder (G) with the valve facing the door. Tighten the locking bolt (EE) on the tank holder to secure the tank.

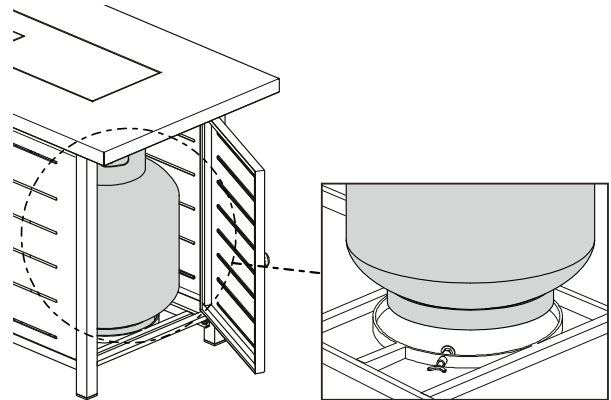

STEP 11

Attach the preassembled regulator from the table top (B) to the cylinder valve by turning the regulator coupling nut clockwise. Make sure it is fastened securely and tighten connections by hand only.

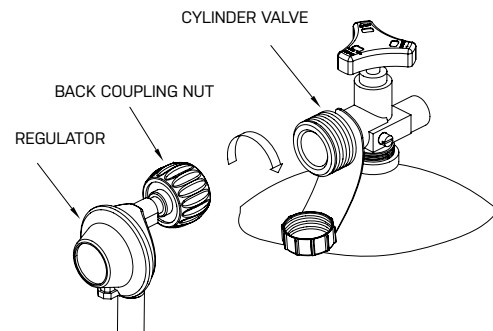


STEP 12

Put the cover (K) on the fireplace table when not in use.



CAUTION: Make sure the fireplace table has cooled down completely before putting the cover on.

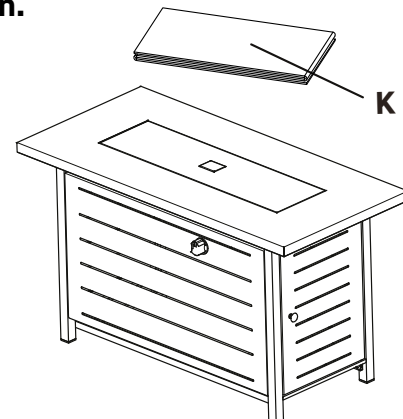

LOCATING THE FIREPLACE TABLE FOR USE

CAUTION: WHEN CERTAIN MATERIALS OR ITEMS ARE LEFT ABOVE, BESIDE OR UNDER THIS APPLIANCE WHILE IN USE, THEY WILL BE SUBJECT TO RADIANT HEAT AND COULD BE SERIOUSLY DAMAGED.


This appliance is designed for heating on outdoor patios and decks, nearby spas or pools and in open areas.

Always make sure that adequate fresh air ventilation is provided. Follow the spacing tolerances at all times.

This appliance must be placed on level, firm ground.

Never operate in an explosive atmosphere.

Keep away from areas where gasoline or other flammable liquids or vapours are stored or used.

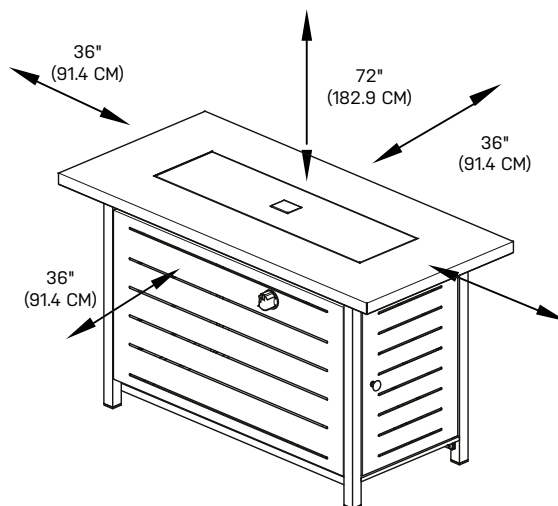

OPERATION

Your gas fire pit has been checked at all connections at the factory for leakage. In transportation and handling some connections may have loosened. Follow these steps to check the hose, the regulator and the tank connections:

1. Make leakage solution by mixing 1 part liquid dish soap and 3 parts water.
2. Spoon or brush several drops (or use squirt bottle) of the solution onto the hose, the regulator and the tank connection.
3. Turn on gas valve. Inspect the connections and look for bubbles.
4. If no bubbles appear, the connection is safe.
5. If bubbles appear, there is leakage. Loosen and re-tighten this connection. If there is still a leak, stop using the appliance immediately.

NOTE:

1. The tank supply system must be arranged for vapor withdrawal.
2. The tank used must include a collar to protect the tank valve.

The hose assembly must be replaced prior to the appliance being put into operation if there is evidence of excessive abrasion or wear, or if the hose is damaged.

WARNING: DO NOT ATTEMPT TO OPERATE THE APPLIANCE UNTIL YOU HAVE READ AND UNDERSTAND ALL PRECAUTIONS. FAILURE TO DO SO CAN RESULT IN PROPERTY DAMAGE, SERIOUS INJURY, OR DEATH.

WARNING

- Do not use an open flame to check for leakage.
- Do not smoke during testing.
- Do not test indoors.
- A leak check must be performed whenever the gas tank is replaced.

NOTE: Use only the pressure regulator supplied with this fireplace table. Replace parts with those specified by the manufacturer only.

BEFORE TURNING GAS SUPPLY ON

Your fireplace table was designed and approved for outdoor use only. Do not use it inside a building or any other enclosed area.

- Make sure surrounding areas are free of combustible materials, gasoline, and other flammable vapours or liquids.
- Ensure that there is no obstruction to air ventilation.
- Be sure all gas connections are tight and there are no leaks.
- Be sure the access panel is clear of debris.
- Be sure any component removed during assembly or servicing is replaced and fastened prior to starting.

WARNING

FOR YOUR SAFETY: If at any time you are unable to light burner and smell gas, wait 5 minutes to allow gas to dissipate before attempting to light gas appliance. If after 1 minute, you are unable to light burner, wait 5 minutes and allow flammable vapours to dissipate before attempting to light gas appliance. Do not touch or move gas appliance for at least 45 minutes after use. Lighting operations should comply with lighting instructions section. Improper lighting operations may cause serious injury and explosion.

PLEASE READ THE FOLLOWING SAFETY RULES:

Perform a leak test with a soapy solution.

1. To check gas connections.
2. After connecting a new tank.
3. Upon reassembly after disassembly.

BEFORE LIGHTING

The gas fireplace table should be thoroughly inspected before each use, and by a qualified service person at least annually. Before relighting a hot gas fireplace, always wait at least 5 minutes.




LIGHTING INSTRUCTIONS

1. Make sure the control knob is in the "OFF" position.
2. Turn propane tank valve to fully open position.

NOTE: For initial start or after any tank change, hold the control knob in for 2 minutes to purge air from gas lines before proceeding.

3. Push in gas control knob, turn counterclockwise to "LOW" and press the black igniter button to light the burner (you should hear a clicking sound), then release the control knob.

4. Once the burner is lit, the flame intensity may be controlled by turning the control knob.

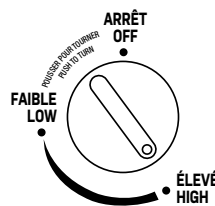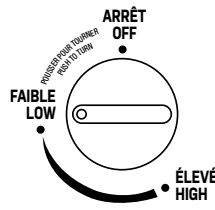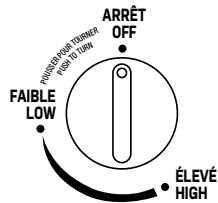


OPERATION PRESSURE CHECK:

If the flame is very small, this is because the supply pressure is not enough. Please refill gas tank.

RELIGHTING:

1. Turn the control knob to "OFF" position.
2. Wait 5 minutes before attempting to relight the appliance.
3. Repeat steps beginning with step 3 of the lighting instructions.

 FLAME CHARACTERISTICS:

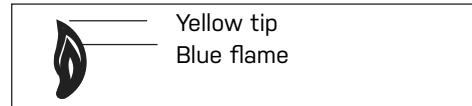

Normally, the burner flame is yellow.

If the burner flame is blue and very small, please check the gas tank, as it may be low gas pressure or empty. If there is enough gas in the tank, please contact a qualified service technician to change the burner of the gas fireplace table.

If flames lift away from the burner or backfire happens, or produce thick black smoke, the fireplace table should be turned off immediately.

It should not be operated again until the unit is serviced and repaired by a qualified service technician.

CAUTION: AVOID INHALING FUMES EMITTED FROM THE GAS APPLIANCE'S FIRST USE. SMOKE AND ODOURS FROM THE BURNING OF OILS USED IN MANUFACTURING WILL APPEAR. BOTH SMOKE AND ODOURS WILL DISSIPATE AFTER APPROXIMATELY 30 MINUTES. THE GAS APPLIANCE SHOULD NOT PRODUCE THICK BLACK SMOKE.

NOTE: The burner may be noisy when initially turned on. To eliminate excessive noise from the burner, turn the control knob to the "LOW" position. Then, turn the knob to the level of heat desired.

EXTINGUISHING

To turn off, first turn the propane tank valve off, then turn the control knob to the "OFF" position.

NOTE: If the burner fails to remain lit, close all valves and wait at least 5 minutes before attempting to light again.

MAINTENANCE AND STORAGE

CLEANING AND MAINTENANCE

To enjoy years of outstanding performance from your gas fireplace table, make sure you perform the following maintenance activities on a regular basis:

- Keep exterior surfaces clean.
- Use warm soapy water for cleaning. Never use flammable or corrosive cleaning agents.
- While washing your unit, be sure to keep the area around the burner dry at all times. If the gas control is exposed to water in any way, DO NOT try to use it. It must be replaced.
- Keep the appliance area free and clean from combustible materials, gasoline and other flammable vapours and liquids; not obstructing the flow of combustion and ventilation air; keeping the ventilation openings of the tank enclosure free and clear from debris.
- Check if there are cracks or worn sections on the hose. If yes, replace it.
- At least once a year, the unit should be inspected for the presence of spiders, spider webs or other insects.
- Air flow must be unobstructed. Keep controls, burner, and circulating air passageways clean. Signs of possible blockage include:
 - Gas fireplace does NOT reach the desired temperature.
 - Gas fireplace table glow is excessively uneven.
 - Gas fireplace table makes popping noises.
- Spiders and insects can nest in burner or orifices, which can damage gas fireplace table and render it unsafe for use. Clean burner holes by using a heavy-duty pipecleaner. Compressed air may help clear away smaller particles.

NOTE

In a salt-air environment such as near an ocean, corrosion occurs more quickly than normal. Frequently check for corroded areas and repair them promptly.

STORAGE

Store the fireplace table indoors during the winter since it will be subjected to freezing temperatures. Disconnect and remove the tank from it before storing the appliance indoors.

1. Turn the control knob to "OFF" position.
2. Turn off the propane tank valve.
3. Take out the battery from the compartment during periods of extended inactivity or when transporting.
4. Allow at least 45 minutes for the fireplace table to cool down after use, and then turn the regulator knob counterclockwise to disconnect the regulator from the tank. Turn the tank holding bolt counterclockwise to loosen and remove it.
5. Tank must be stored outdoors in a well-ventilated area out of reach of children. When the tank is disconnected, tightly install the threaded valve plugs, and do not store it in a building, garage or any other closed area.
6. You may store the product indoors ONLY if the tank is disconnected and removed.
7. Keep the fireplace area clear and free from combustible materials, gasoline and other flammable vapours and liquids.
8. Store gas fireplace table in an area sheltered from direct contact with inclement weather (such as rain, sleet, hail, snow), dust and debris.
9. A qualified service person should install and repair the fireplace table and inspect it annually.
10. It might be necessary to clean this fireplace table frequently. You must keep the control panel, burner and circulating air passageways clean.

TROUBLESHOOTING		
PROBLEM OBSERVED	POSSIBLE CAUSES	CORRECTIVE MEASURES
Burner will not light with a match or lighter	No gas flow	Change or refill the propane gas tank
	Burner ports clogged or blocked	Clean ports
	Control knob is not turned on	Turn on the control knob
Flame is low	No gas flow	Change or refill the propane gas tank
	Outdoor temperature is less than 4°C (40°F) and tank is less than 1/4 full	Use a full tank
	Burner ports clogged or blocked	Clean burner ports
Carbon build-up	Dirt or film on burner	Clean burner ports
Emission of black smoke	Flame is obstructed at burner ports	Check that all burner ports are free of any lava rocks



ONE-YEAR LIMITED WARRANTY

NOVELCA offers a limited warranty for this product (hereafter: the "Product") for one (1) year from the date of purchase of this Product, with the conditions set out below.

This limited warranty is valid only for the original purchaser of the Product and it may not be transferred.

The present limited warranty is not meant to exclude, restrict, limit or modify the legal warranty given by law to the purchaser of the Product.

If the Product contains a manufacturing defect or if one or more parts of the Product is defective, the retailer commits to replace or repair, at its sole discretion, the defective part or parts without charge under the following cumulative conditions: 1) the purchaser must contact the retail store where the Product was purchased; 2) the purchaser must return the defective part or parts or the Product to the retailer; 3) the purchaser must provide the retailer the invoice as proof of purchase and date of purchase of the Product; 4) the purchaser must supply the Product identification information, including the serial number or the model number; and 5) the period of one (1) year covered by this limited warranty must not be expired. If the retailer decides to replace the defective part or parts, the replacement part or parts would be new or reconditioned, equivalent to new parts. The present limited warranty does not create any other obligation with the provider of the guarantee than those explicitly described above.

This limited warranty is not applicable: 1) to consumable parts; 2) to normal wear; 3) when the Product is used for other purposes than what is described in the user guide (if any); 4) when the serial number or other identification information of the Product is erased or withdrawn; 5) to damages that are only aesthetic and do not affect the normal use of the Product; 6) when the damages, defects, faults or other problems arise from: a) an inadequate maintenance of the Product; b) a faulty installation or assembly of the Product or an installation or assembly that is not in accordance with the user or installation guide (if one is provided); c) a modification, a repair or dismantling of the Product by a person not authorized by the retailer or the manufacturer; d) the transportation by the purchaser, his employee, officer or representative; e) a negligence by the purchaser, his employee, officer or representative; f) an accident; g) a case of force majeure or any event that is not caused by the Product itself.

FRENCH VERSION VS ENGLISH VERSION

In case of discrepancy between the French and the English versions of the text of this limited warranty, the French version shall prevail.

NOVELCA

5355, boul. des Gradins, Québec (Québec) Canada G2J 1C8